


IRONKIDS® **fitnessplayground**

FITNESS PLAYGROUND

ITEM NO: 8100

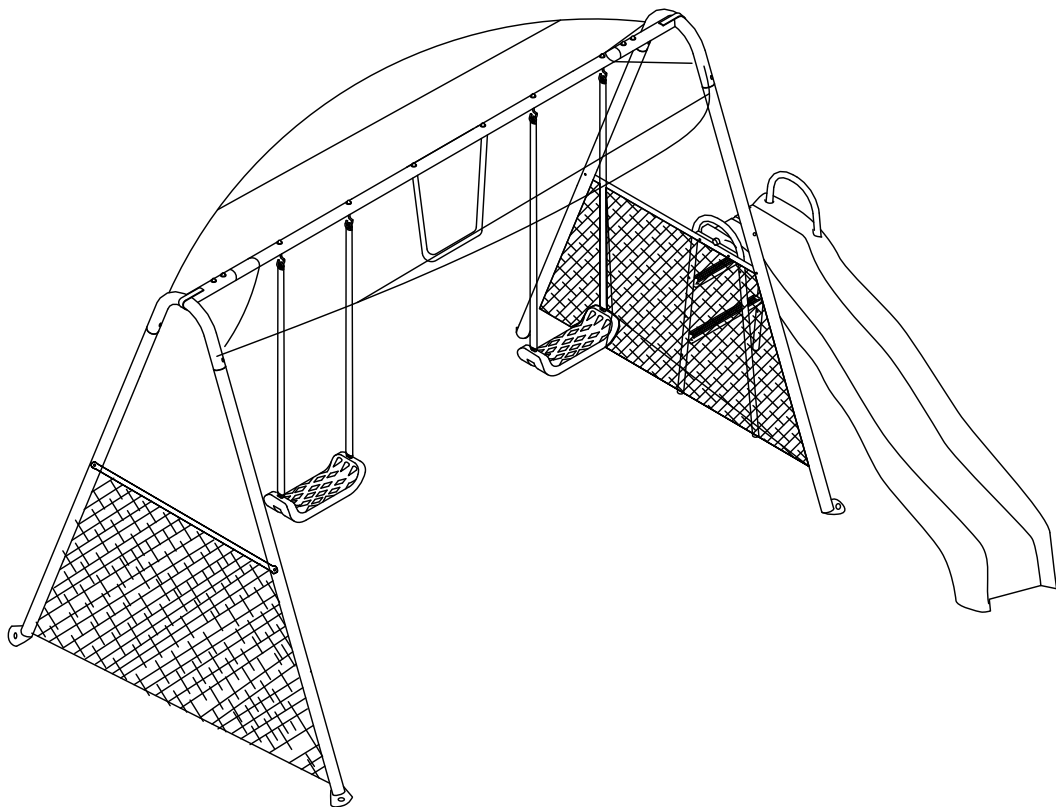

OWNER'S MANUAL

CAUTION: This unit is designed to be used safely by up to 4 children between the ages of 3 years to 8 years old with a maximum weight of 100 pounds (45.4 kgs) each, simultaneously, not to exceed a combined weight of 400 pounds (181.6 kgs).

The specifications of this product may vary from this photo and are subject to change without notice.

IRONKIDS® and the "K-DOT" logo are registered trademarks of World Triathlon Corporation.

Official Product of IRONKIDS. Used here by permission.

For more brand information please visit www.ironkids.com

IMPORTANT: FOR NORTH AMERICA ONLY

**To request product service and order
replacement parts, please call our customer
service department at:
1-844-641-7922**

Daily 8:00 AM-5:00 PM Pacific Standard Time,

or email us at: **service@paradigmhw.com**

Please visit our website at www.paradigmhw.com.

Please have the following information ready when requesting for service:

Your name

Phone number

Model number

Serial number

Part number

Proof of Purchase

***Before returning this product to the store please contact customer
service at the contact number.**

Paradigm Health & Wellness, Inc.

1189 Jellick Ave.

City of Industry, CA 91748, USA

TABLE OF CONTENTS

Warranty ----- 3

Important Labels ----- 4

Important Safety Precautions ----- 5

Tools Required for Assembly ----- 6

Hardware for Assembly ----- 7

Parts Numbers and Illustrations ----- 8

Overview Drawing ----- 14

Assembly Instructions ----- 15

Ground Anchor Installation ----- 24

Parts Request Fax Form ----- 26

MANUFACTURER’S LIMITED WARRANTY (IRONKIDS FITNESS PLAYGROUND)

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with Paradigm’s Owner’s Manual. Paradigm’s obligation under this warranty applies to the following:

COMPONENT	LENGTH OF WARRANTY
Structural Frame	Lifetime For Home Use Only
All Other Components	180 days For Home Use Only

Exclusions from Warranty Coverage:

Paradigm does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by Paradigm’s installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
5. Any act of Nature (such as fire, flooding, snow, ice, hurricane, earthquake, lightning or other natural disaster), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to, among other things, flake, chalk, accumulate dirt or stains.
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

Paradigm, using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product’s warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

Ordering Replacement Parts

Replacement parts can be ordered by calling or emailing our customer service department:

1-844-641-7922

Daily 8:00 AM - 5:00 PM (PST).

service@paradigmhw.com

When ordering replacement parts please have the following information ready:

- 1. Owner’s Manual**
- 2. Model Number**
- 3. Description of Parts**
- 4. Part Number**
- 5. Date of Purchase**

ON SLIDES OR OTHER
PLAYGROUND EQUIPMENT.
PARENTS ARE ADVISED
TO DRESS CHILD IN
HOOD AND NECK DRAPE
FROM CLOTHING.

- ADULTS
FOR
- REAR
- ALWAYS
FOOT
- DO NOT
WHILE
- NO
SHOES

IRONKIDS

For customer assistance call:
1-844-641-7922

Pour le service à la clientèle
composer le:

⚠ AVERTISSEMENT

- | | |
|--|---|
| <ul style="list-style-type: none"> • Use at your own risk • For family domestic use and for outdoor use only • This play set complies with ASTM-F 1148-09 • This product has a maximum weight limit of 100 lbs per child and up to 4 children on it at one time. | <ul style="list-style-type: none"> • Utilisez l'équipement à vos propres risques • Réservé à un usage familial et domestique, et à un usage extérieur. • Cet ensemble de jeu est conforme à la norme ASTM-F 1148-09. • La limite de poids maximale est de 45 kg par enfant et l'équipement peut accueillir jusqu'à 4 enfants à la fois. |
|--|---|

⚠ Avertissement

INSTALLATION OVER A HARD SURFACE SUCH AS CONCRETE, ASPHALT, OR PACKED EARTH MAY RESULT IN SERIOUS INJURY OR DEATH FROM FALLS.

L'INSTALLATION SUR UNE SURFACE DURE
COMME DU BÉTON, DE L'ASPHALTE OU DE LA
TERRE COMPACTÉE PEUT ENTRAÎNER DES
BLESSURES GRAVES, VOIRE MORTELLES, SUITE
À UNE CHUTE.

⚠ AVERTISSEMENT

CHILDREN HAVE DIED WHEN HOOD OR NECK DRAWSTRINGS ON THEIR JACKETS OR SWEATSHIRTS CAUGHT ON SLIDES OR OTHER PLAYGROUND EQUIPMENT. PARENTS ARE ADVISED TO REMOVE HOOD AND NECK DRAWSTRINGS FROM CLOTHING.

DES ENFANTS SONT MORTS LORSQUE DES CORDONS DE SERRAGE SUR LES CAPUCHES OU ENCOULURES DE VESTES OU CHANDAILSES SONT ACCROCHÉS À DES TOBOGANS OU AUTRES ÉQUIPEMENTS DE TERRAINS DE JEU. IL EST CONSEILLÉ AUX PARENTS DE RETIRER LES CORDONS DE SERRAGE SUR LES ENCOULURES ET CAPUCHES DES VÊTEMENTS.

SURVEILLANCE D'UN ADULTE REQUIS POUR UNE UTILISATION EN TOUT TEMPS

 LIRE LE MANUEL AVANT L'UTILISATION.

 TOUJOURS PORTER DES CHAUSSURES APPROPRIÉES.

 **NE PAS UTILISER L'ÉQUIPEMENT
LORSQU'IL EST MOUILLÉ.**

 NE PAS COURIR, POUSSER,
BOUSCULER, SE BAGARRER

IRONKIDS

For customer assistance call:
1-844-641-7922

8 am - 5 pm PST
Daily

**Pour le service à la clientèle
composer le:**

1-844-641-7922
Tous les jours
8:00 h - 17 h (HNP)



114350810000001

Serial number/Numéro de série:
MADE IN CHINA / FABRIQUÉ EN CHINE

**FOR KIDS
AGES
3 - 8 YEARS**

**POUR LES
ENFANTS
DE 3 - 8 ANS**

**ADULT
SUPERVISION
IS REQUIRED.**

**LA SUPERVISION
D'UN ADULTE
EST REQUISE.**

IMPORTANT SAFETY PRECAUTIONS

Read all instructions carefully before assembling operating this product. Retain this owner's manual and keep the original purchase receipt for future reference.

1. Before you assemble the Fitness Playground, find level ground not less than 6 feet from any structure or obstruction to the Fitness Playground. Your Fitness Playground must have clearance on all sides.
2. To prevent serious injury, do not allow children to play on the Fitness Playground until it is completely installed.
3. Do not install the Fitness Playground over concrete, packed dirt, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the user.
4. Only adults should assemble or disassemble this Fitness Playground.
5. This product must be anchored.
6. Adult supervision of children is required at all times when on or around this Fitness Playground. Never leave children unattended.
7. Do not swing too high or at an angle.
8. Do not hang on or climb from structural members of the Fitness Playground.
9. Do not exceed the intended weight limit or maximum number of users for the Fitness Playground.
10. This product is intended to be used by children between the ages of 3-8 years old.
11. Be sure to observe your children and insure that they have the strength and skills to enjoy all the rides safely before use on their own.
12. Do not allow children to walk close to, behind, or in front of moving items.
13. Do not allow children to twist the chains on the swing or loop them over the top bar. This may reduce the strength of the chain.
14. Teach and instruct children not to swing empty seats.
15. Instruct children how to sit in the center of the seats and swing with their full weight on the seat.
16. Warn children not to use the equipment in any manner other than intended.
17. Warn children not to get off the rides while in motion.
18. Warn children to dress appropriately. Loose fitting clothing is potentially hazardous when using the Fitness Playground.
19. Equipment may be slippery when wet. Do not allow children to use the equipment when wet.
20. Parents should regularly check openings and surfaces, such as slides, for items that may be hazardous.
21. Parents should check swing chains to insure they are secure and can not be looped back on themselves.
22. Do not place any part of the body near moving parts.
23. Never slide head first down the slide.
24. Ensure that all swings and chains are secured at both ends.
25. Never attach any materials that are not specifically designed for use with this swing set, such as jump ropes, pet leashes, rope or cords and other chains as these pose a potential strangulation hazard.
26. Children must be supervised at all times. No playground is safe without adult supervision.

Play Ground Rules


1. Do not use equipment when wet.
2. No running, pushing, shoving, or roughhousing.
3. Do not use play equipment before reading manual.
4. Always wear proper footwear.

CARE AND MAINTENANCE


Check all nuts and bolts by monthly during the usage season for tightness and tighten as required. It is particularly important that all nuts and bolts are checked prior to the first use each season.

TOOLS REQUIRED FOR ASSEMBLY


Please prepare the following tools prior to assemble this equipment.

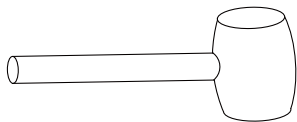


Hammer

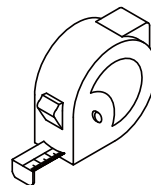


Tape Measure

 


Phillips Screwdriver

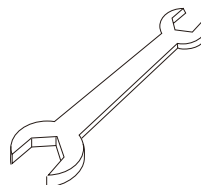

Wrench 13x10mm
(Included)

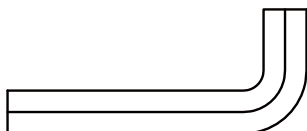


Allen Wrench M5
(Included)

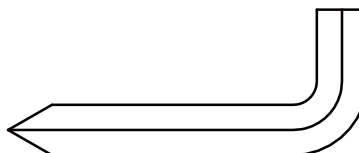


Allen Wrench with Phillips Screwdriver M5
(Included)

HARDWARE FOR ASSEMBLY

 Hardware used for main frame assembly



 Binder Post & Bolt Set (Preassembled)
M8x15 Bolt
Ø10x50 Sleeve Nut
4 SETS



Binder Post & Bolt Set (Preassembled)
M6x12 Bolt
Ø8x50 Sleeve Nut
8 SETS

 
Hardware used for slide assembly



M6x36 Bolt Set (Preassembled)
4 SETS












M6x42 Bolt Set
4 SETS



 
 
Binder Post & Bolt Set (Preassembled)
M6x12 Bolt
Ø8x24 Sleeve Nut
10 SETS



 
PARTS NUMBERS AND ILLUSTRATIONS


Parts used for main frame assembly

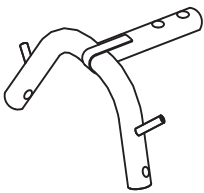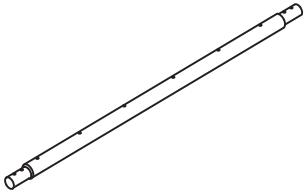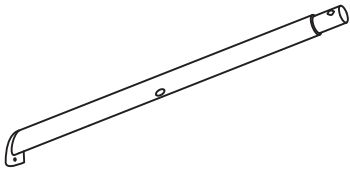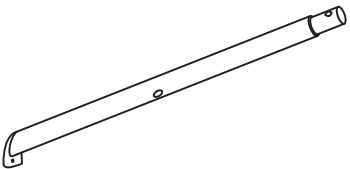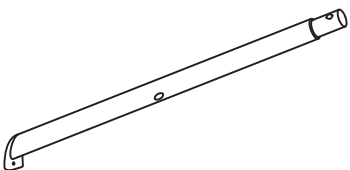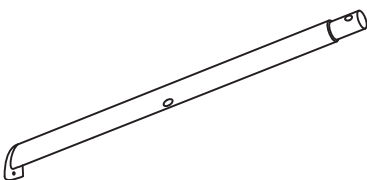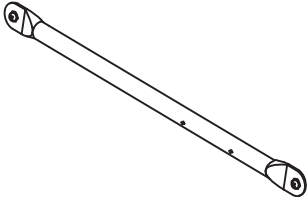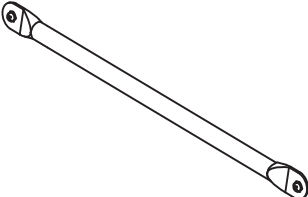A1		Side Top Bar	2 PCS
A2		Top Bar	1 PC
A3		Leg	1 PC
A3A		Leg	1 PC
A4		Leg	1 PC
A4A		Leg	1 PC
A5		Cross Bar	1 PC
A6		Cross Bar	1 PC
A7		Ground Anchor	4 PCS



Hardware used for main frame assembly

Aa1		Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x50 Sleeve Nut	4 SETS
Aa2		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x50 Sleeve Nut	8 SETS

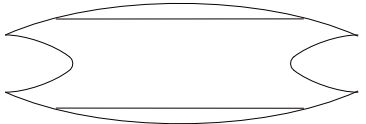

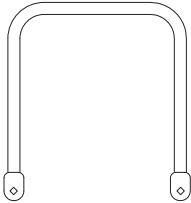C1		Sunshade	1 PC
C2		Plastic Stick	2 SETS
C3		Protective Net	2 PCS

P1		Trapeze Tube	1 PC
----	---	--------------	------

  

 
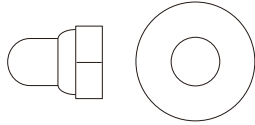
Parts used for trapeze assembly

Pa1		Ø10x30 Sleeve Nut Set (Preassembled)	2 SETS
Pa2		Eye Bolt Set (Preassembled)	2 SETS




 
 
 

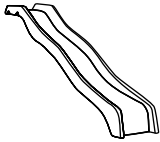
 
 
Hardware used for trapeze assembly

J1		Swing Ring	4 PCS
J2		Swing Seat	2 PCS




Parts used for swing seats assembly

Ja1		Ø10x30 Sleeve Nut Set (Preassembled)	4 SETS
Ja2		Eye Bolt Set (Preassembled)	4 SETS
Ja3		Screw Hook (Preassembled)	4 PCS
Ja4		Screw Hook Cap Set	4 SETS

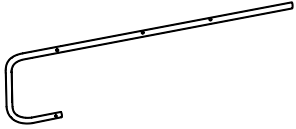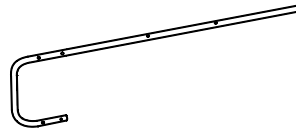Hardware used for swing seats assembly


X1		Slide Ladder Support Tube	1 PC
X2		Slide Ladder Support Tube	1 PC
X3		Slide Leg Tube	2 PCS
X4		Slide Ladder Step	2 PCS
X5		Connecting Plate	2 PCS
X6		Cap for X1 and X2 (Preassembled)	2 PCS
X7		Cap for X3 (Preassembled)	2 PCS
X8		Slide	1 PC
X9		Slide Ladder Support Tube Cross Bar	2 PCS
X10		Slide Leg Cross Bar	1 PC

Parts used for slide assembly

Xa1		M6x36 Bolt Set (Preassembled)	4 SETS
Xa2		M6x42 Bolt Set	4 SETS
Xa3		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x24 Sleeve Nut	10 SETS

Hardware used for slide assembly

OVERVIEW DRAWING

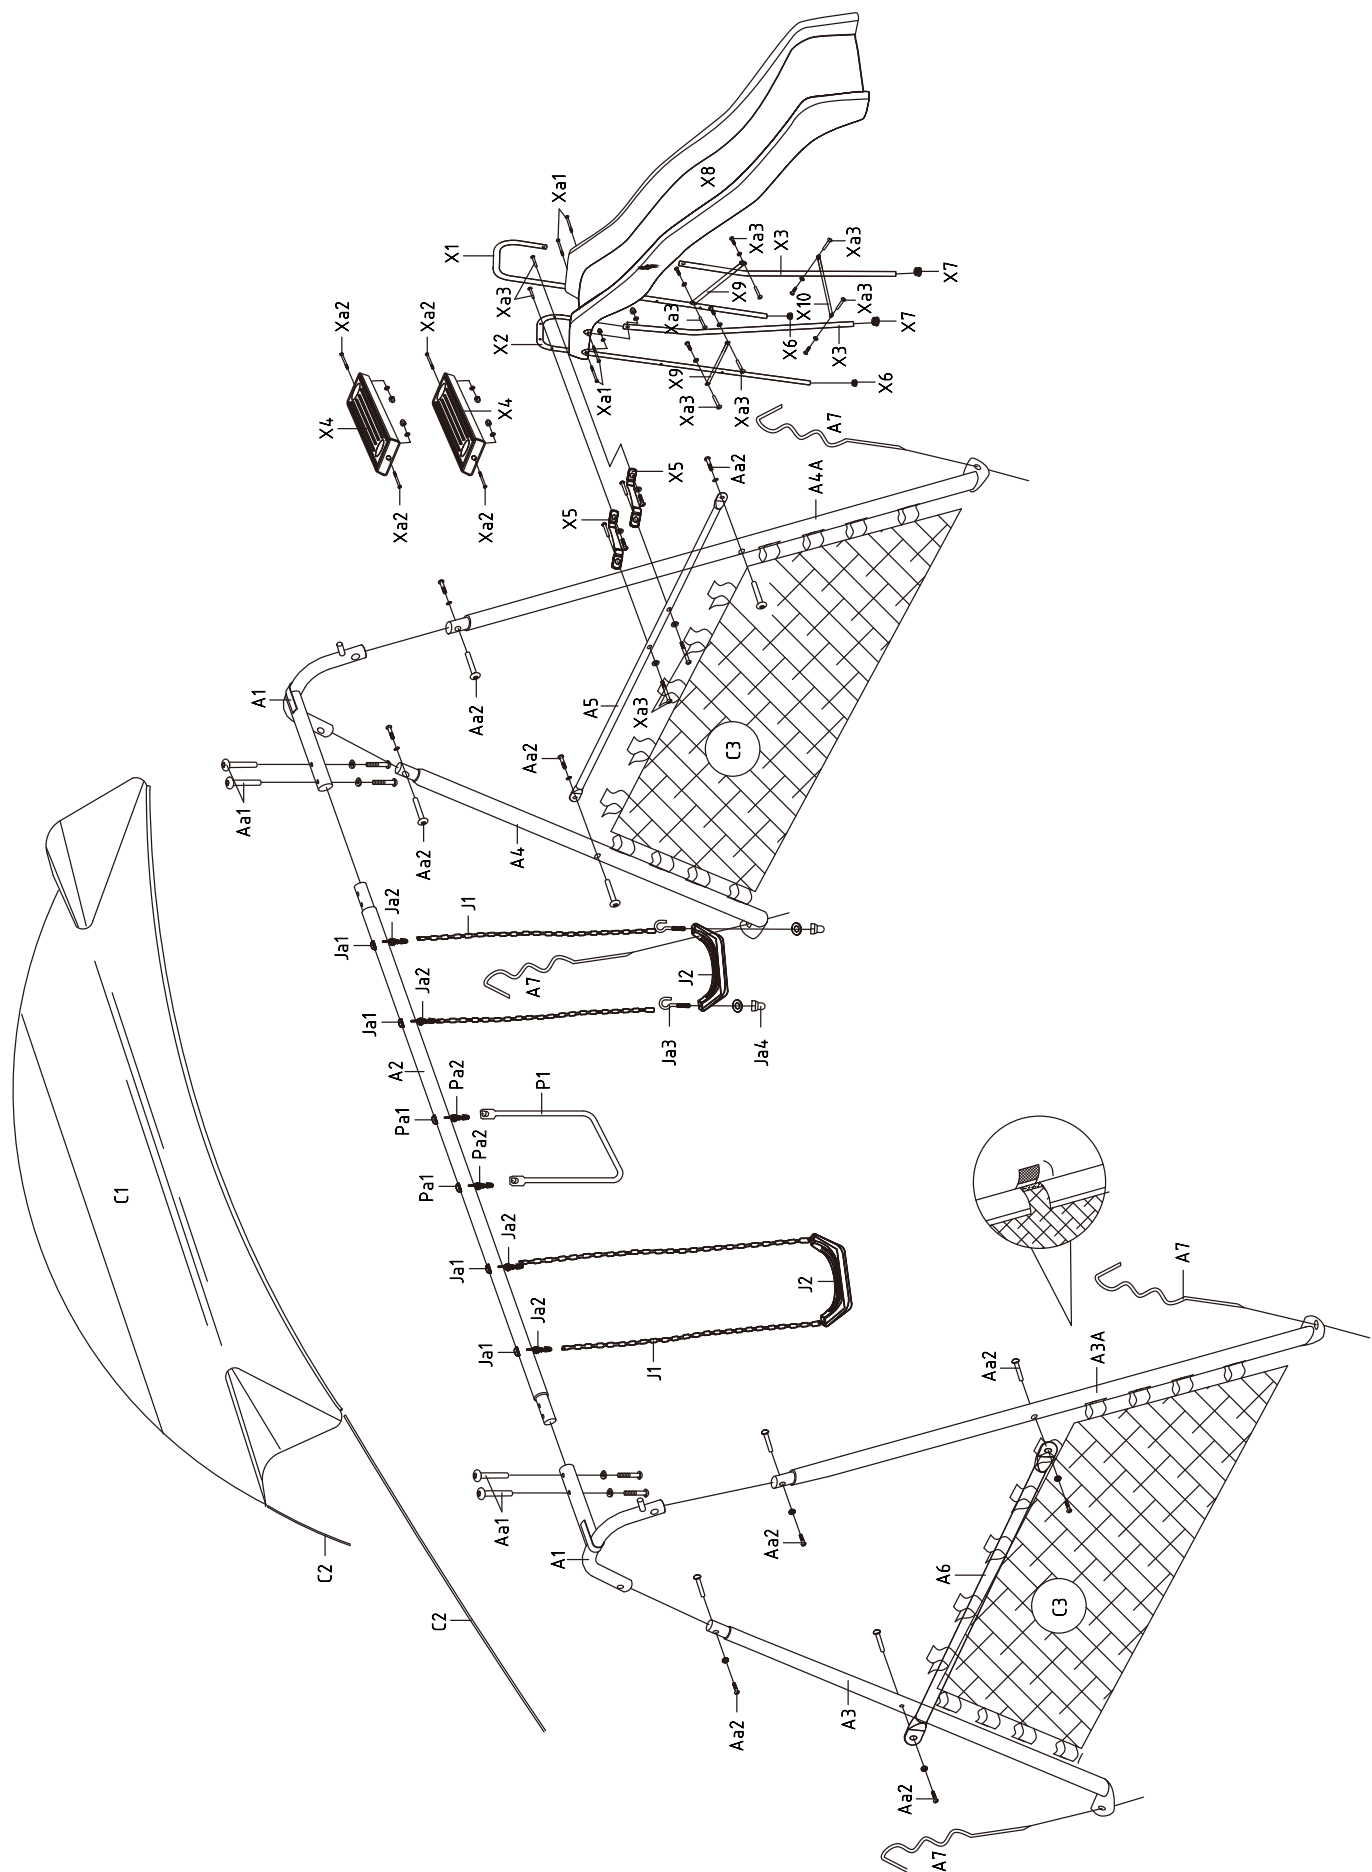


ASSEMBLY INSTRUCTIONS


- Place the playground equipment on level ground, not less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury to the user.

TIGHTENING NUTS & BOLTS

- Do not over-tighten the nuts and bolts when you are assembling your playground equipment. This will allow for some possible adjustments and ease of installation.
- Once you have completed the assembly of the playground equipment, go back over all of the nuts and bolts and properly tighten all of them before using the playground equipment.

Main Frame Layout

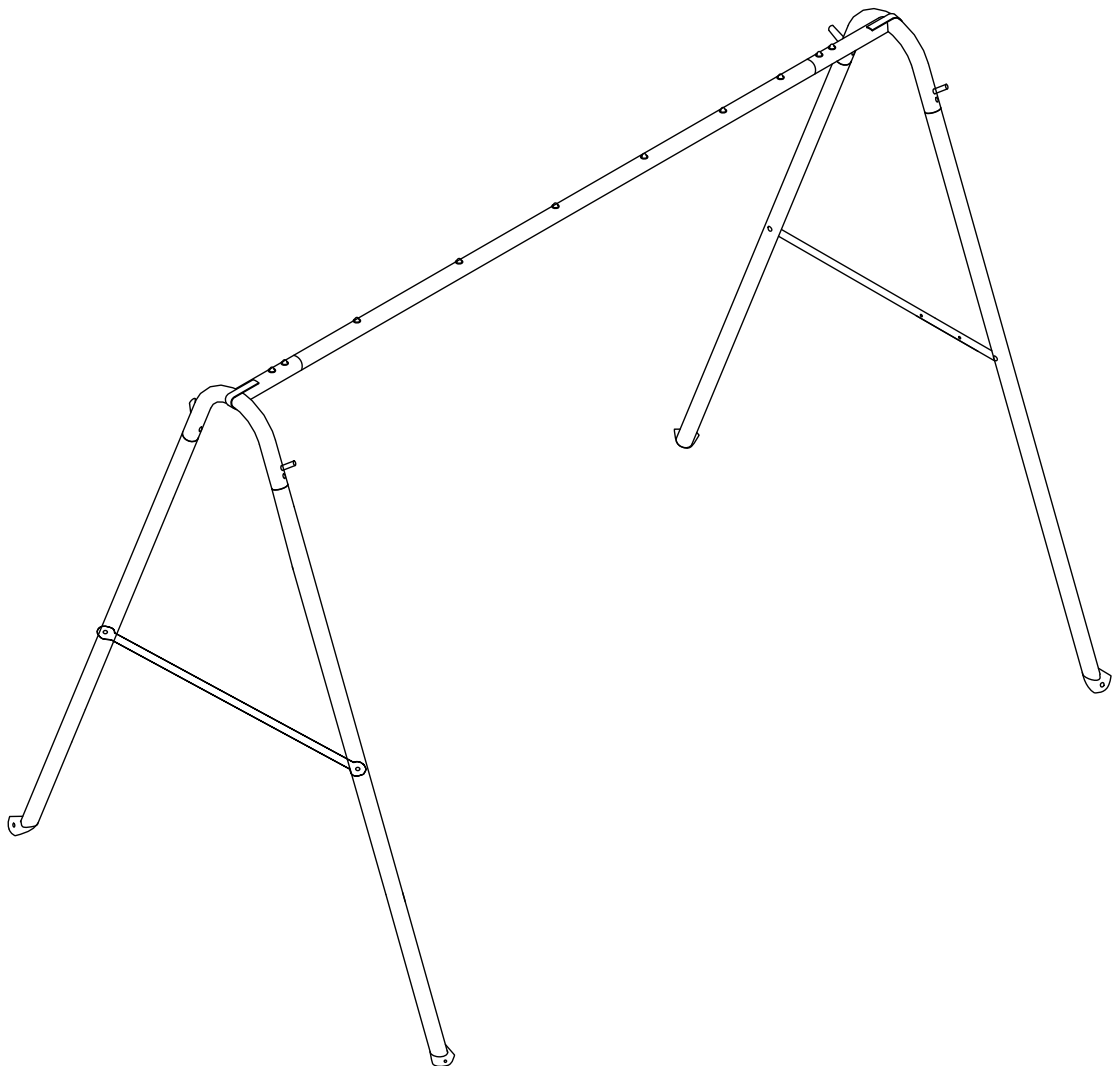


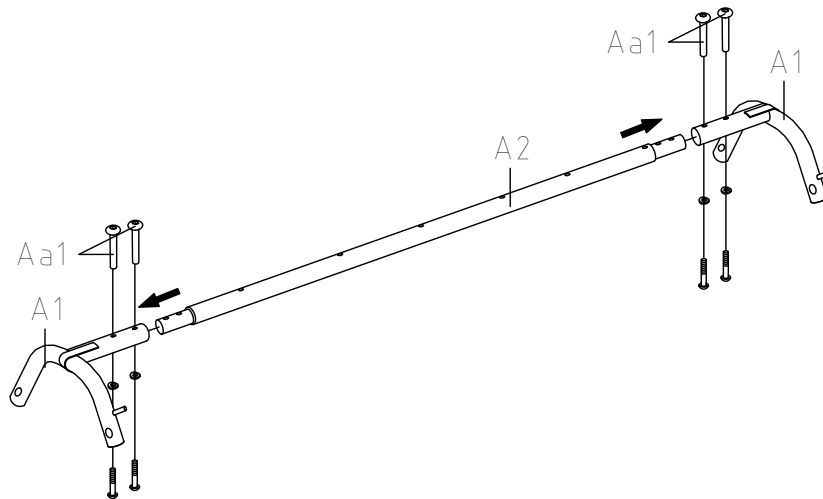

Step 1

- Remove four sets of Aa1.
- Insert A2 into A1, secure with four sets of Aa1 that were removed.


.....

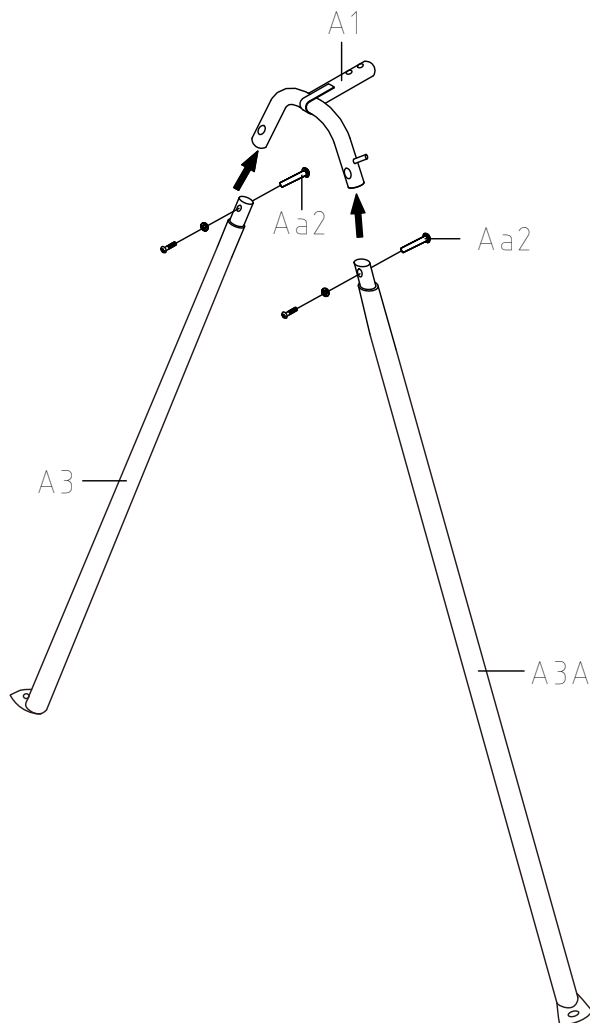

Step 2

- Remove two sets of Aa2.
- Insert the small end of A3 and A3A into the sockets at end of A1.


- Align the holes and secure using two sets of Aa2 that were removed.
- Repeat the same procedure to install A4 and A4A into the sockets at end of the other A1.

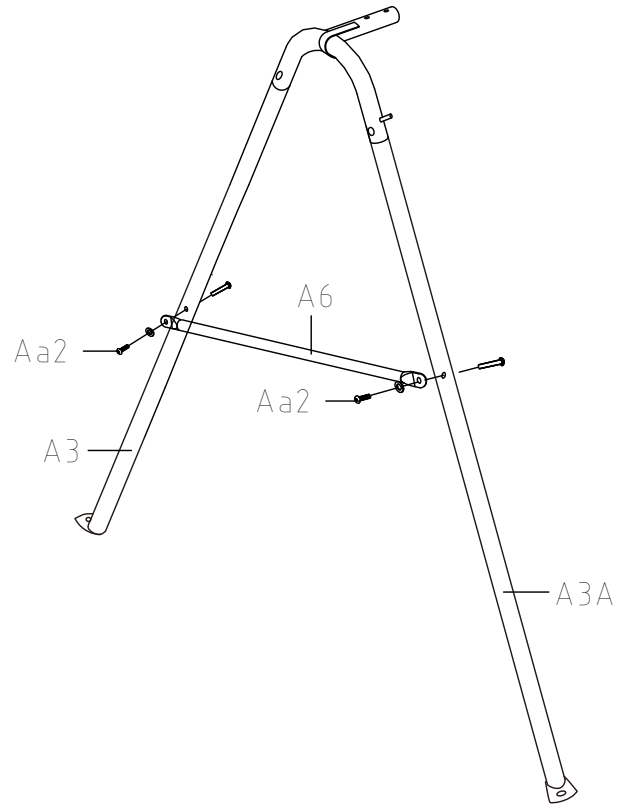

Step 3


- Remove two sets of Aa2.
- Attach A6 onto A3 and A3A with two sets of Aa2 that were removed.

.....

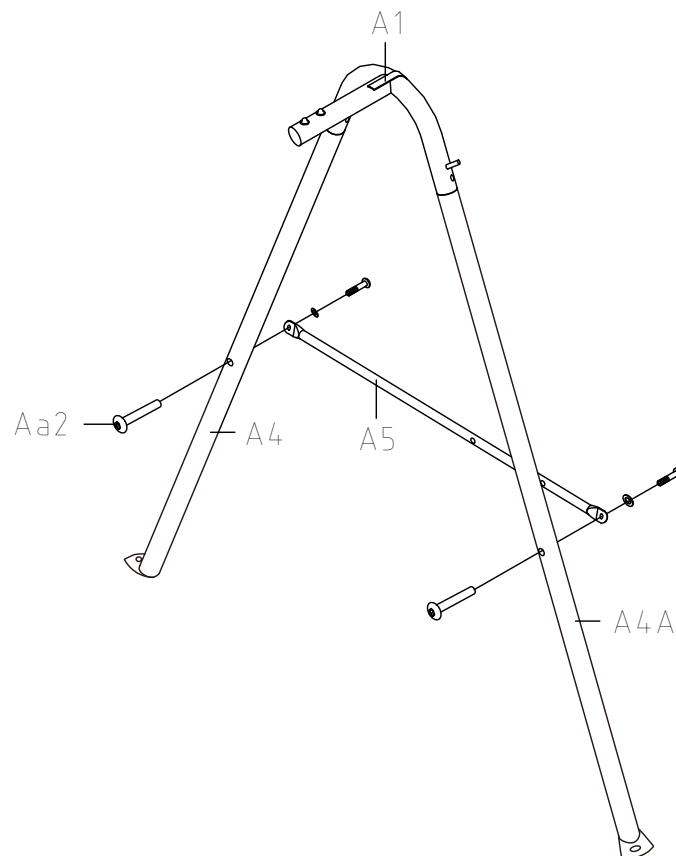

Step 4


- Remove two sets of Aa2.
- Attach A5 onto A4 and A4A with two sets of Aa2 that were removed.

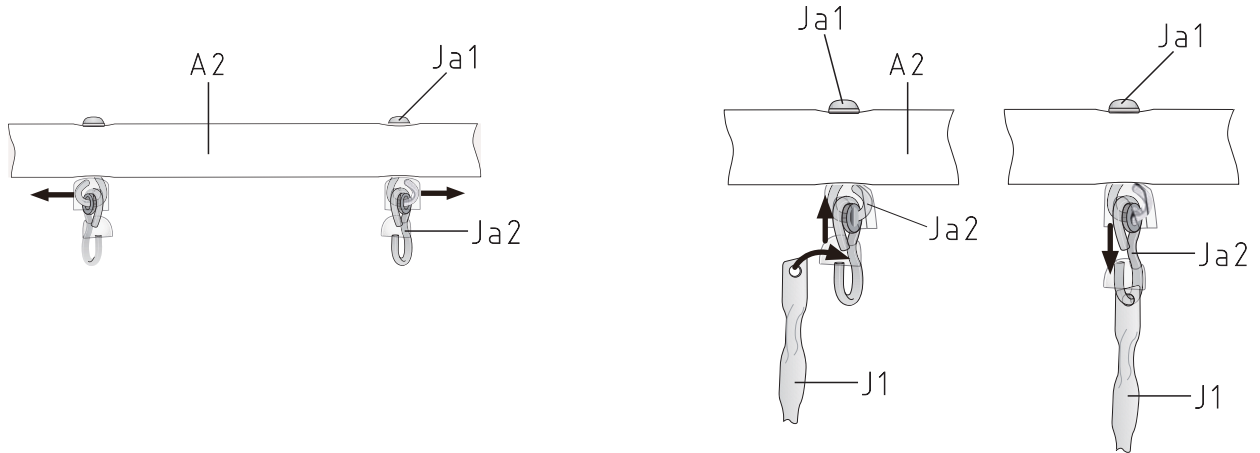

Step 5


- Hang J1 in place from Ja2 on the A2.

.....

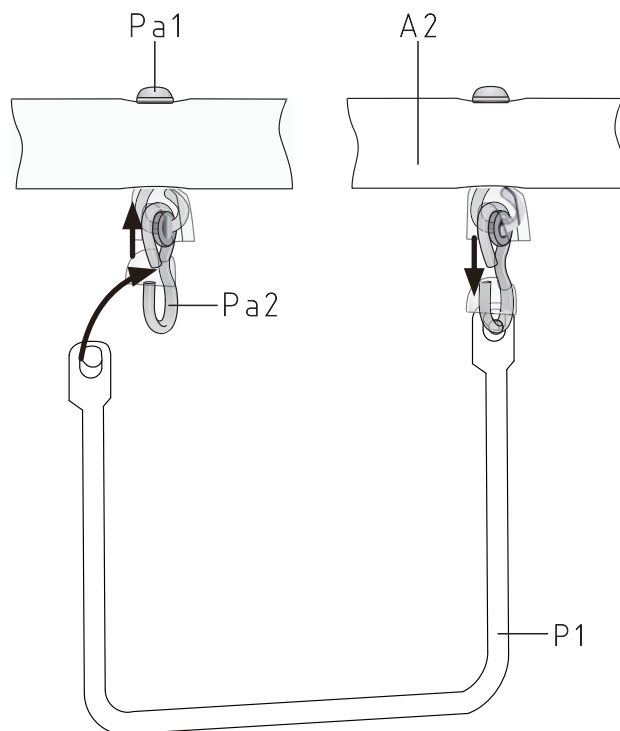


Step 6

- Hang P1 in place from Pa2 on the A2.

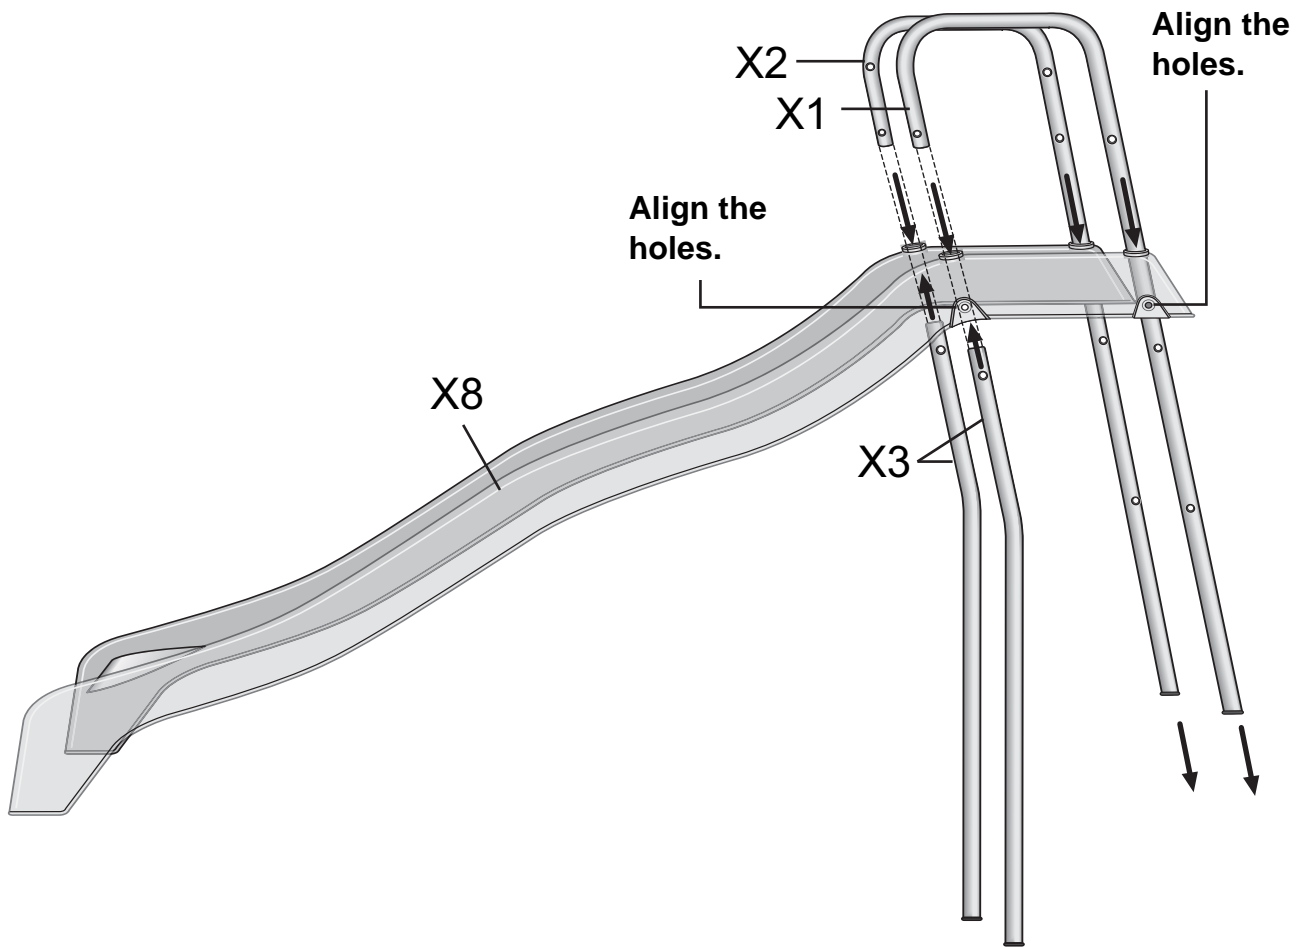


Step 7

- Remove all bolt sets from X1 and X2.
- Insert the longer ends of X1 and X2 into the holes on the rear ends of X8 and align the holes.
- Insert both X3 into the holes on the front ends of X8 and align the holes.

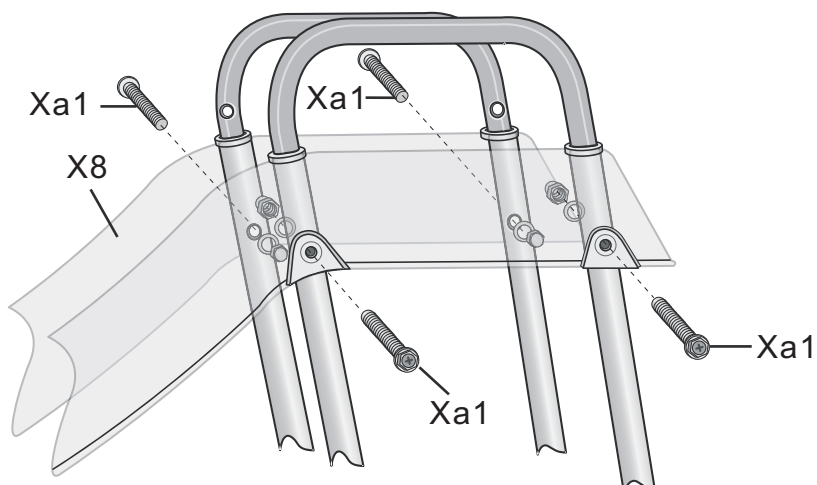


Step 8

- Attach four sets of Xa1 onto X8 that were removed.

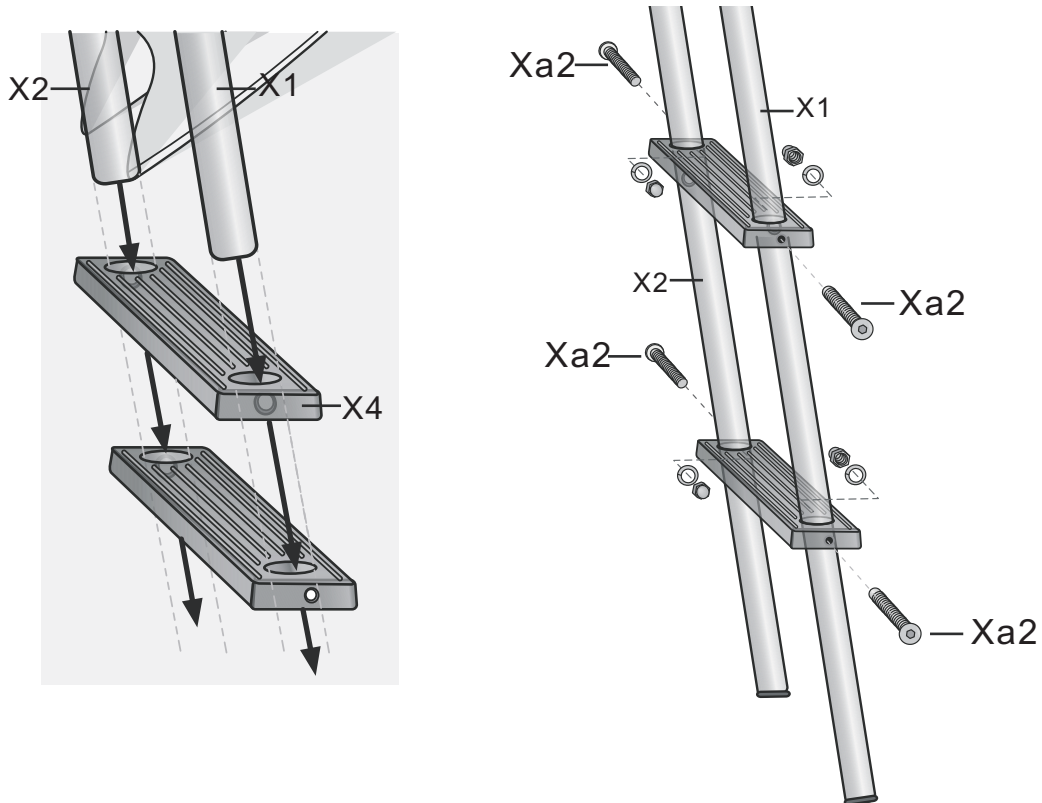


Step 9

- Slide both X4 from the bottom ends of X1 and X2 and pull them up and align the holes.
- Secure with four sets of Xa2 that were removed.

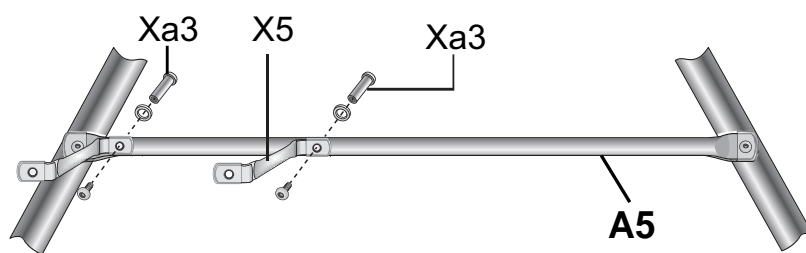

Step 10

- Remove two sets of Xa3.
- Attach both X5 onto A5 with two sets of Xa3 that were removed.

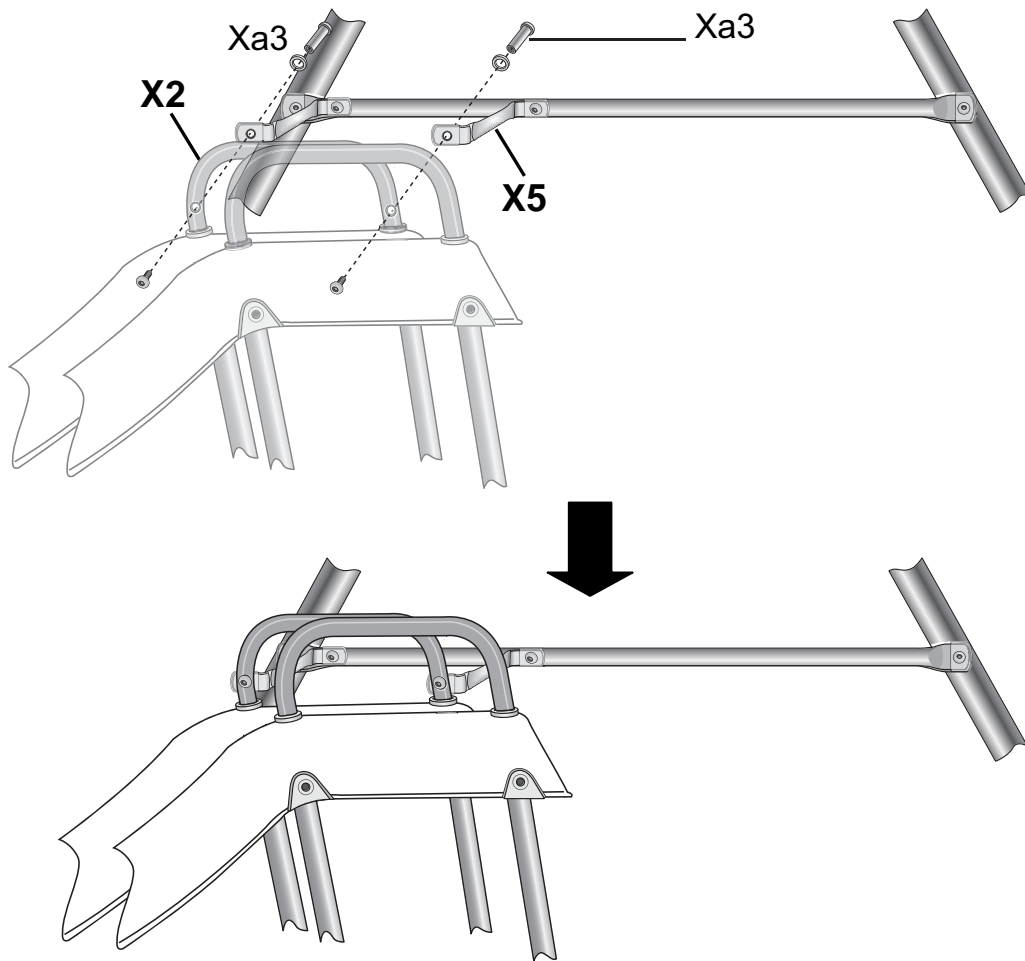


Step 11

- Attach X2 onto both X5 with two sets of Xa3 that were removed.


Note: Make sure to go back to check all hardware and securely tighten all bolts and nuts before using the playground equipment.

Warning: Do not let children use the playground equipment until it is properly assembled and anchored.

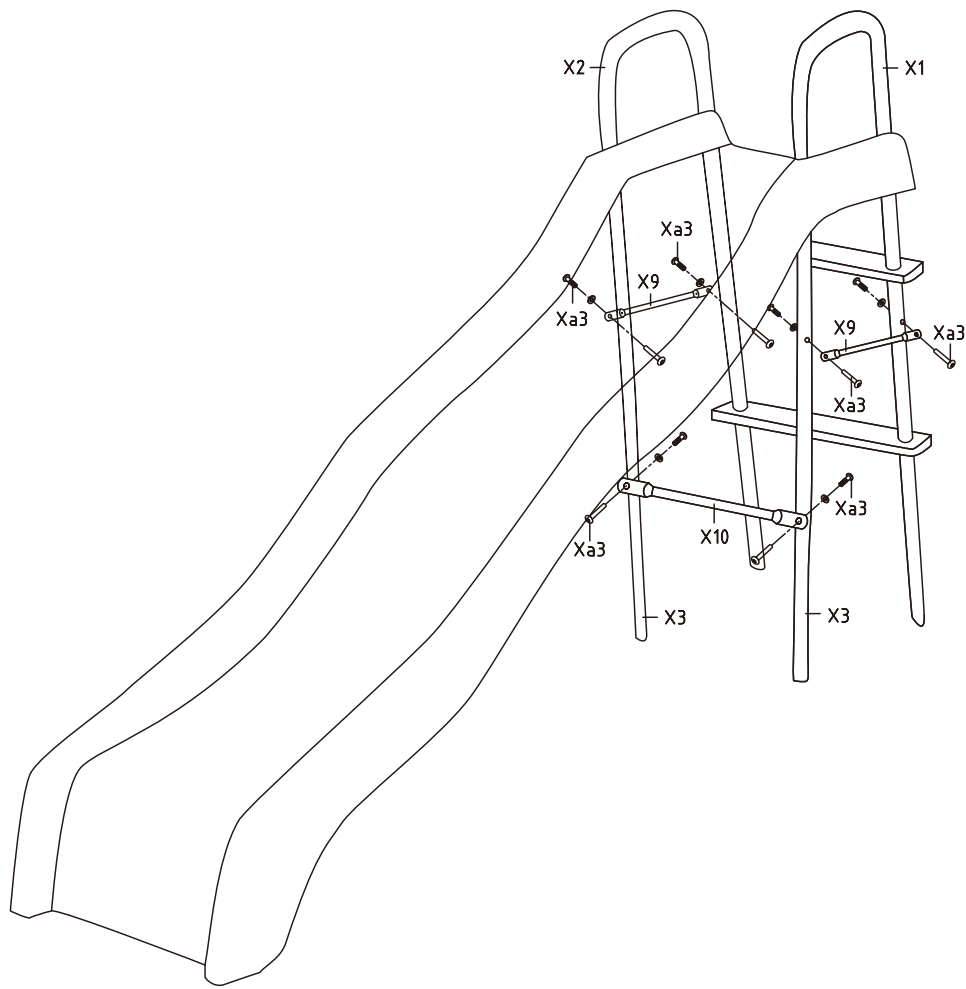

Step 12

- Remove two sets of Xa3.
- Attach one X9 onto X1 and X3 with two sets of Xa3 that were removed.
- Repeat above steps to install the other X9 onto X2 and X3.
- Remove two sets of Xa3.
- Attach one X10 onto both X3 with two sets of Xa3 that were removed.

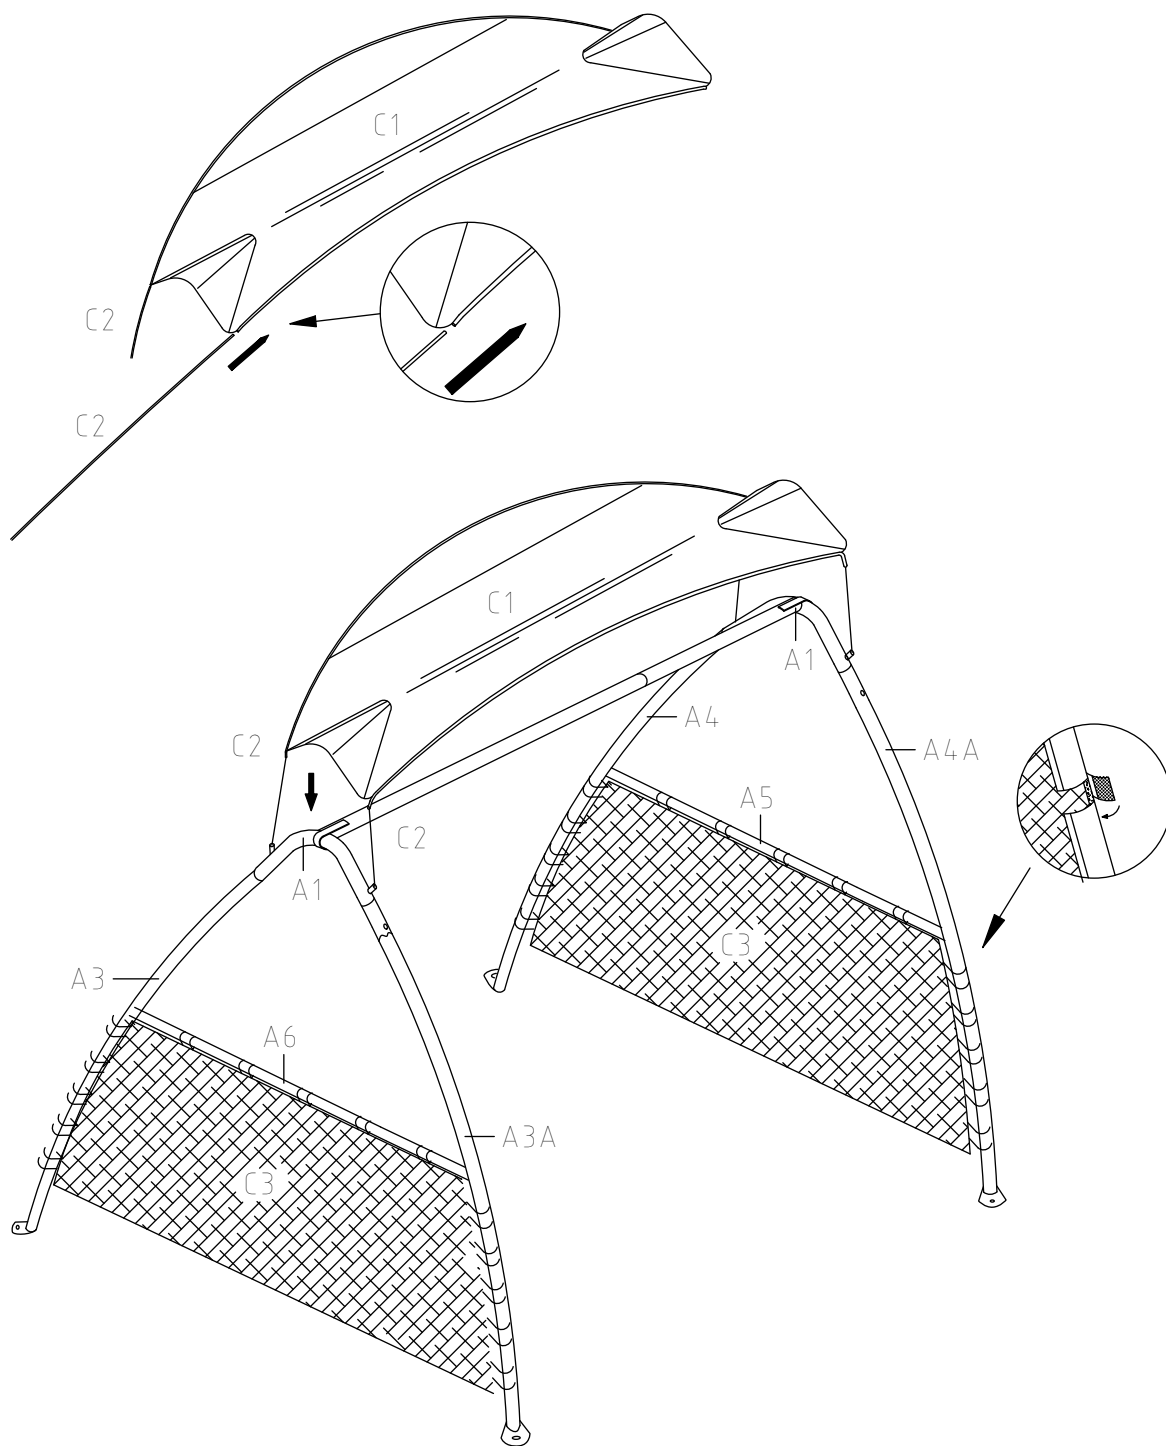

Step 13

- Insert both C2 into the holes on C1.
- Insert both C2 into the holes on A1.
- Attach C3 onto the A4, A4A, and A5 with Velcro straps as shown.
- Attach the other C3 onto the A3, A3A, and A6 with Velcro straps as shown.

GROUND ANCHOR INSTALLATION





You may either anchor the feet in hard soil or if your soil is soft (sand, etc.), you may use the corkscrew (A7) anchor to secure the playground. If you wish to permanently secure your swing set, setting the legs in concrete secured by a brick or gravel bed is recommended. Ensure equipment is firmly anchored. When cementing equipment, bury the legs about three inches below the ground. This will ensure sufficient space remains under the swings. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface or below ground level to prevent tripping. Be sure the swing set is located on level ground.

For Soil Ground Installation:


Turn the corkscrew anchor into the ground until only the hooked end is above the ground next to the leg.

Insert the hooked end into the bottom opening of the leg.

Ensure that the hooked end is secure in the leg opening.

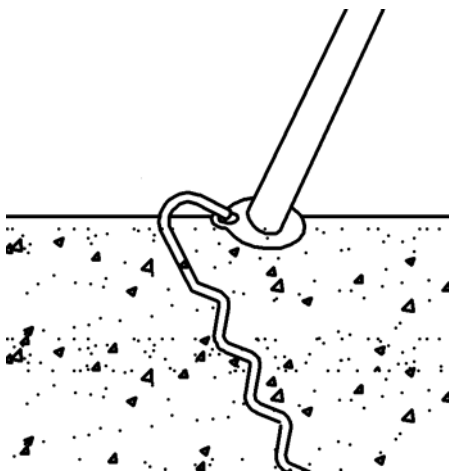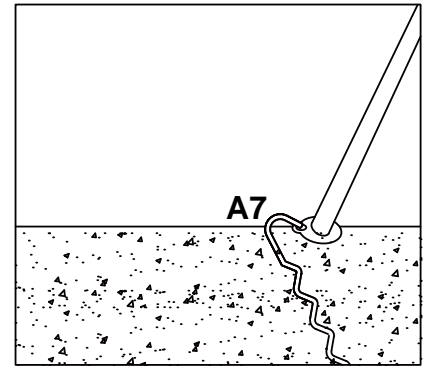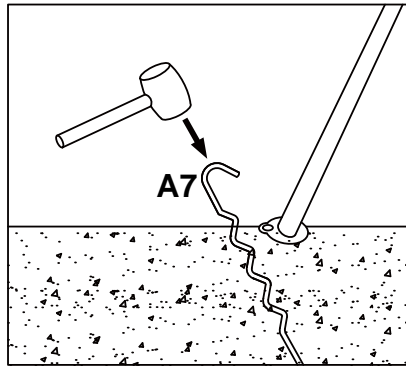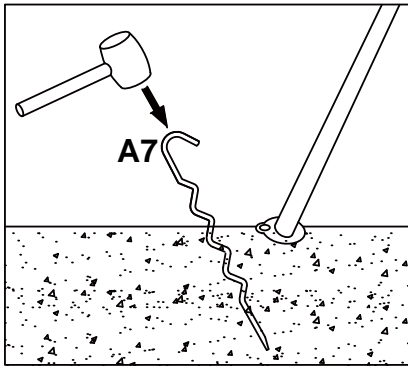

Correct

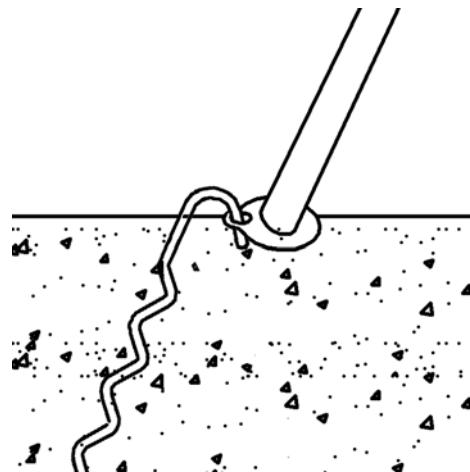


Incorrect


When turning the corkscrew anchor into the ground, please make sure the anchor is roughly perpendicular to the playground feet.

For Concrete Ground Installation:

- If the swing set is set up on grounds with sandy soil, it must be anchored with concrete footing (concrete not included).
- Dig holes around swing leg tube as shown below in drawing. As you dig down and create a cylindrical hole, you should use a shovel to carve out the lower part of the hole, to create a larger diameter hole at the bottom.
- Place 2 inch high brick or 2 inches of gravel bed as shown in drawing below.
- Use about 45lb of concrete per leg.
- Cover concrete with dirt and protective surface material.
- Allow about 6-7 days for concrete to dry properly.

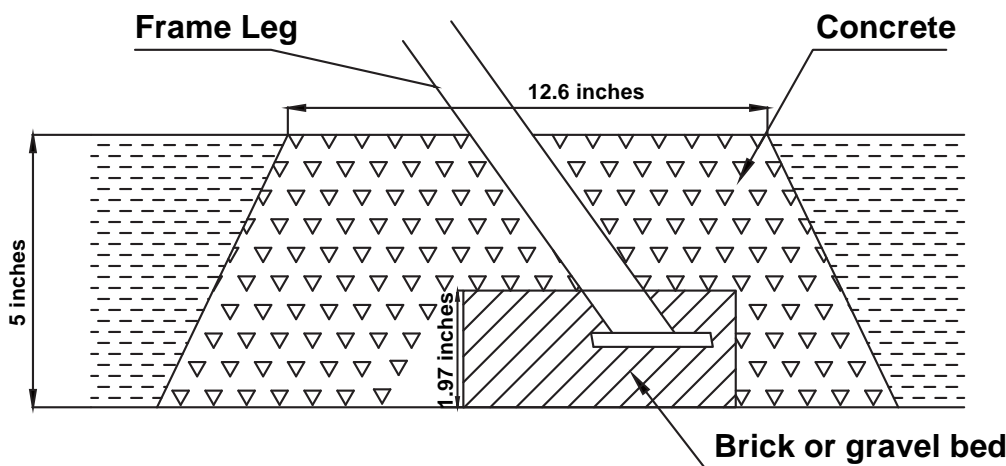

Note: The maximum fall height for this product is 6 feet. The minimum ground clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

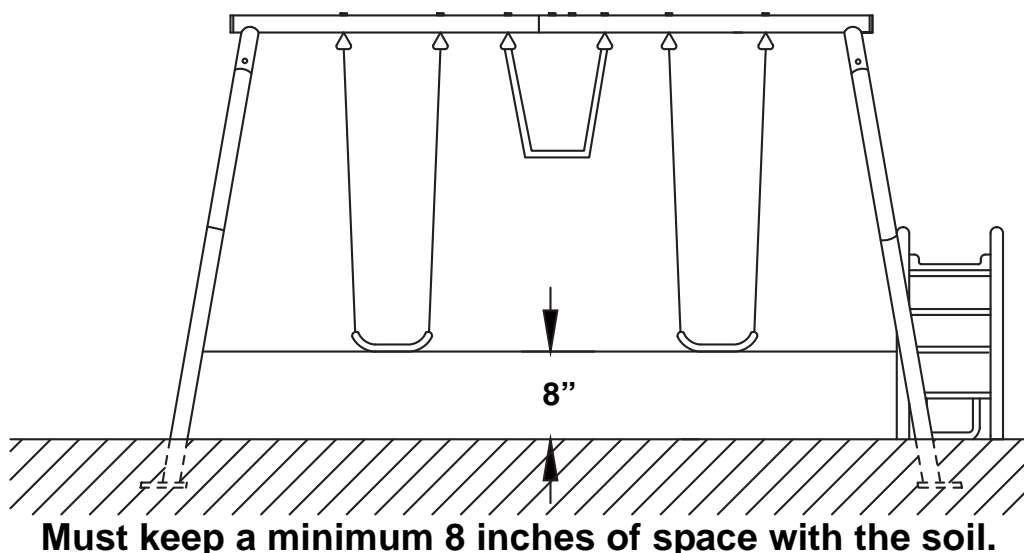

Warning: Please bury the legs of the swing set as per instruction. If the swing set is used without proper anchoring, it may be dangerous and may tilt over.

This play ground received ASTM F2276 and CPSIA certification.

IRONKIDS

PARTS REQUEST FAX FORM

Please fax this form to (1-626-810-2166)

OR YOU CAN EMAIL CUSTOMER SERVICE REQUESTS TO

service@paradigmhw.com

NAME: _____

ADDRESS: _____

CITY _____ STATE _____ ZIP _____

TELEPHONE: (Day) _____

(Night) _____

(Email Address) _____

SERIAL#: _____

MODEL#: _____

PURCHASE DATE: _____

PURCHASE FROM: _____

PART #	DESCRIPTION	QTY

"YOUR ORDER WILL BE PROCESSED WITHIN 3 BUSINESS DAYS"

OFFICIAL USE ONLY

SHIP DATE: _____

TRK #: _____

BACK ORDER: _____