


IRONKIDS® **fitnessplayground**

FITNESS PLAYGROUND ***ITEM NO: 8201***

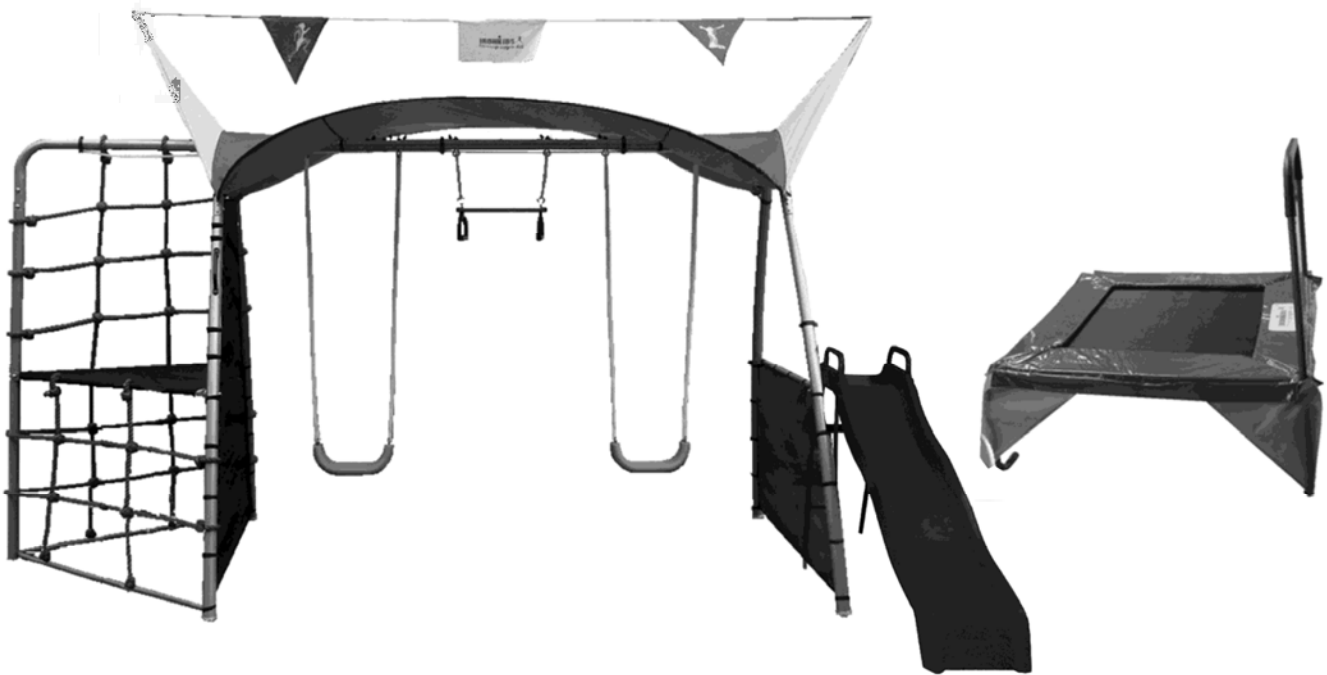

OWNER'S MANUAL

CAUTION: This unit is designed to be used safely by up to 6 children between the ages of 3 years to 8 years old with a maximum weight of 80 pounds (36.3kgs) each, simultaneously, not to exceed a combined weight of 480 pounds (218kgs).

The specifications of this product may vary from this photo and are subject to change without notice.

IRONKIDS® and the "K-DOT" logo are registered trademarks of World Triathlon Corporation.
Official Product of IRONKIDS. Used here by permission.
For more brand information please visit www.ironkids.com

IMPORTANT: FOR NORTH AMERICA ONLY

To request product service and order replacement parts, please call our customer service department at:

1-844-641-7922

Daily 8:00 AM-5:00 PM Pacific Standard Time,

or email us at: **service@paradigmhw.com**

Please visit our website at www.paradigmhw.com.

Please have the following information ready when requesting for service:

Your name

Phone number

Model number

Serial number

Part number

Proof of Purchase

***Before returning this product to the store please contact customer service at the contact number.**

Paradigm Health & Wellness, Inc.

1189 Jellick Ave.

City of Industry, CA 91748, USA

TABLE OF CONTENTS

Warranty -----	4
Important Labels -----	5
Important Safety Precautions -----	6
Tools Required for Assembly -----	7
Hardware for Assembly -----	8
Parts Numbers and Illustrations -----	11
Overview Drawing -----	22
Assembly Instructions -----	23
Ground Anchor Installation -----	45
Parts Request Form -----	47

MANUFACTURER'S LIMITED WARRANTY (IRONKIDS FITNESS PLAYGROUND)

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has be installed and operated in accordance with Paradigm's Owner's Manual. Paradigm's obligation under this warranty applies to the following:

<u>COMPONENT</u>	<u>LENGTH OF WARRANTY</u>
Structural Frame	Lifetime For Home Use Only
All Other Components	180 days For Home Use Only

This warranty does not include damage caused by normal wear and tear, weather corrosion, misuse, commercial use or improper operation. Paradigm will replace free of charge any parts which may prove to be defective under normal home use. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

Ordering Replacement Parts

Replacement parts can be ordered by calling or emailing our customer service department

service@paradigmhw.com

1-844-641-7922

Daily 8:00 AM - 5:00 PM (PST).

When ordering replacement parts please have the following information ready:

- 1. Owner's Manual**
- 2. Model Number**
- 3. Description of Parts**
- 4. Part Number**
- 5. Date of Purchase**

IMPORTANT LABELS

ADULT SUPERVISION REQUIRED FOR USE AT ALL TIMES
SURVEILLANCE D'UN ADULTE REQUIS POUR UNE UTILISATION EN TOUT TEMPS

READ MANUAL BEFORE USE
LIRE LE MANUEL AVANT L'UTILISATION.

ALWAYS WEAR PROPER FOOTWEAR
TOUJOURS PORTER DES CHAUSSURES APPROPRIÉES.

DO NOT USE EQUIPMENT WHEN WET
NE PAS UTILISER L'ÉQUIPEMENT LORSQU'IL EST MOUILLÉ.

NO RUNNING, PUSHING, SHOVING, OR ROUGH-HOUSING
NE PAS COURIR, POUSSER, BOUSCULER, SE BAGARRER.

Adult supervision is required.
La supervision d'un adulte est requise.

Do not use the head or neck area for climbing or swinging.
N'utilisez pas la tête ou le cou pour grimper ou se balancer.

Do not use the head or neck area for swinging or climbing.
N'utilisez pas la tête ou le cou pour se balancer ou grimper.

WARNING
AVERTISSEMENT

• Use at your own risk
 • Utilisez l'équipement à vos propres risques

• For family domestic use only
 • Réservé à un usage familial et domestique, et à un usage extérieur.

• This play set complies with ASTM-F 1148-09
 • Cet ensemble de jeu est conforme à la norme ASTM-F 1148-09.


• This product has a maximum weight limit of 100 lbs per child and up to 4 children on it at one time.
 • La limite de poids maximale est de 45 kg par enfant et l'équipement peut accueillir jusqu'à 4 enfants à la fois.

WARNING
AVERTISSEMENT

For canopy: Make sure all pole ends is fully inserted inside the protrusions before use.
 Pour canopée: S'assurer que toutes les extrémités de poteaux sont bien insérées dans les saillies avant l'utilisation.

Installation over a hard surface such as concrete, asphalt, or packed earth may result in serious injury or death from falls.
 L'installation sur une surface dure comme du béton, de l'asphalte ou de la terre compactée peut entraîner des blessures graves, voire mortelles, suite à une chute.

Children have died when hood or neck drawstrings on their jackets or sweatshirts caught on slides or other playground equipment. Parents are advised to remove hood and neck drawstrings from clothing.
 Des enfants sont morts lorsque des cordons de serrage sur les capuches ou encolures de vestes ou chandails sont accrochés des toboggans ou autres équipements des terrains de jeu. Il est conseillé aux parents de retirer les cordons de serrage sur les encolures et capuches des vêtements.

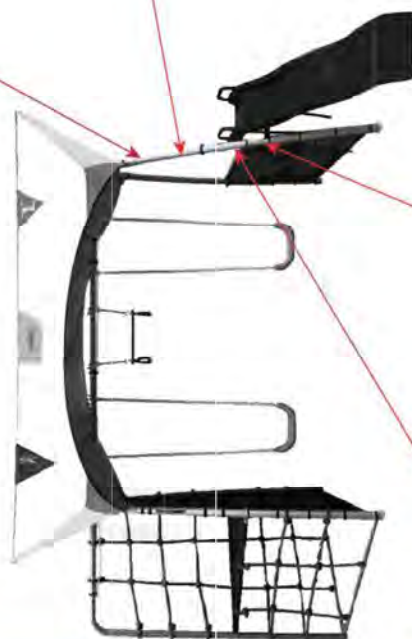

IRONKIDS

For customer assistance call:
 Pour le service à la clientèle composer le:

1-844-641-7922
 8 a.m. - 5 p.m. PST
 Daily

1-844-641-7922
 Tous les jours
 8:00 h - 17 h (PST)

111837820100021

MADE IN CHINA / FABRIQUÉ EN CHINE

FOR KIDS AGES 3 - 8 YEARS
POUR LES ENFANTS DE 3 - 8 ANS

ADULT SUPERVISION IS REQUIRED.
LA SUPERVISION D'UN ADULTE EST REQUISE.

IMPORTANT SAFETY PRECAUTIONS

Read all instructions carefully before assembling operating this product. Retain this owner's manual and keep the original purchase receipt for future reference.

1. Before you assemble the Fitness Playground, find level ground not less than 6 feet from any structure or obstruction to the Fitness Playground. Your Fitness Playground must have clearance on all sides.
2. To prevent serious injury, do not allow children to play on the Fitness Playground until it is completely installed.
3. Do not install the Fitness Playground over concrete, packed dirt, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the user.
4. Only adults should assemble or disassemble this Fitness Playground.
5. This product must be anchored.
6. Adult supervision of children is required at all times when on or around this Fitness Playground. Never leave children unattended.
7. Do not swing too high or at an angle.
8. Do not hang on or climb from structural members of the Fitness Playground.
9. Do not exceed the intended weight limit or maximum number of users for the Fitness Playground.
10. This product is intended to be used by children between the ages of 3-8 years old.
11. Be sure to observe your children and insure that they have the strength and skills to enjoy all the rides safely before use on their own.
12. Do not allow children to walk close to, behind, or in front of moving items.
13. Do not allow children to twist the chains on the swing or loop them over the top bar. This may reduce the strength of the chain.
14. Teach and instruct children not to swing empty seats.
15. Instruct children how to sit in the center of the seats and swing with their full weight on the seat.
16. Warn children not to use the equipment in any manner other than intended.
17. Warn children not to get off the rides while in motion.
18. Warn children to dress appropriately. Loose fitting clothing is potentially hazardous when using the Fitness Playground.
19. Equipment may be slippery when wet. Do not allow children to use the equipment when wet.
20. Parents should regularly check openings and surfaces, such as slides, for items that may be hazardous.
21. Parents should check swing chains to insure they are secure and can not be looped back on themselves.
22. Do not place any part of the body near moving parts.
23. Never slide head first down the slide.
24. Ensure that all swings and chains are secured at both ends.
25. Never attach any materials that are not specifically designed for use with this swing set, such as jump ropes, pet leashes, rope or cords and other chains as these pose a potential strangulation hazard.
26. Children must be supervised at all times. No playground is safe without adult supervision.
27. When using the trampoline, do not perform flips, as this will increase your chances of landing on your head or neck. No more than one person at a time on the trampoline. Use trampoline only with adult supervision.

Play Ground Rules


1. Do not use equipment when wet.
2. No running, pushing, shoving, or roughhousing.
3. Do not use play equipment before reading manual.
4. Always wear proper footwear.

CARE AND MAINTENANCE

Check all nuts and bolts by monthly during the usage season for tightness and tighten as required. It is particularly important that all nuts and bolts are checked prior to the first use each season.

TOOLS REQUIRED FOR ASSEMBLY


Please prepare the following tools prior to assemble this equipment.

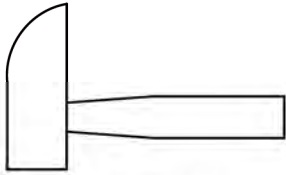


Hammer




Tape Measure




Phillips Screwdriver

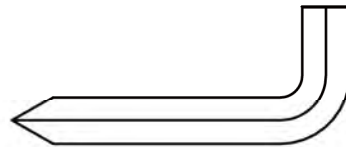


Allen Wrench with Phillips Screwdriver M5
(Included)

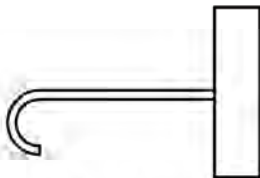

Spring Loading
(Included)

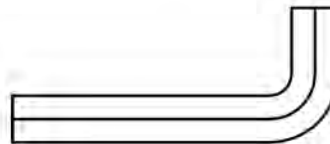


Allen Wrench M5
(Included)




Wrench
(Included)

HARDWARE FOR ASSEMBLY


Hardware used for main frame assembly




Binder Post & Bolt Set (Preassembled)
M8x15 Bolt
Ø10x50 Sleeve Nut
4 SETS



Binder Post & Bolt Set (Preassembled)
M6x12 Bolt
Ø8x50 Sleeve Nut
6 SETS



M6x15 Bolt Set (Preassembled)
2 SETS




M6x65 Bolt Set (Preassembled)
2 SETS




M6x60 Bolt Set (Preassembled)
8 SETS


Hardware used for playground climbing net assembly



Binder Post & Bolt Set (Preassembled)
M8x15 Bolt
Ø10x50 Sleeve Nut
4 SETS




Binder Post & Bolt Set (Preassembled)
M6x12 Bolt
Ø8x52 Sleeve Nut
2 SETS



Binder Post & Bolt Set (Preassembled)
M6x12 Bolt
Ø8x56 Sleeve Nut
4 SETS

Hardware used for trampoline assembly



Binder Post & Bolt Set (Preassembled)
M6x12 Bolt
Ø8x52 Sleeve Nut
2 SETS




Binder Post & Bolt Set (Preassembled)
M6x12 Bolt
Ø8x26 Sleeve Nut
2 SETS




M6x32 Bolt Set (Preassembled)
2 SETS


Hardware used for slide assembly



M6x36 Bolt Set (Preassembled)
4 SETS




M6x42 Bolt Set (Preassembled)
4 SETS





Binder Post & Bolt Set (Preassembled)
M6x12 Bolt
Ø8x24 Sleeve Nut
10 SETS


PARTS NUMBERS AND ILLUSTRATIONS

Parts used for main frame assembly

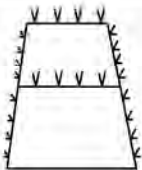A1		Top Bar I	1 PC
A2		Top Bar II	1 PC
A4		Leg	1 PC
A4A		Leg	1 PC
A6		Protective Net	1 PC
A8		Ground Anchor	9 PCS
A9		Plastic Stick Holder	2 PCS
A10		Plastic Stick Holder	2 PCS
A11		Plastic Stick Holder	2 PCS

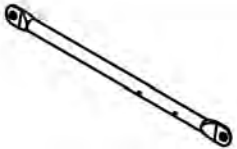
A12		Plastic Handle	1 PC
A13		Top Bar III	1 PC
A14		Leg	1 PC
A14A		Leg	1 PC
A15		Cross Bar	1 PC
A16		Protective Net	1 PC

Hardware used for main frame assembly



Aa1		Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x50 Sleeve Nut	4 SETS
Aa2		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x50 Sleeve Nut	6 SETS
Aa3		M6x15 Bolt Set (Preassembled)	2 SETS

Aa4		M6x65 Bolt Set (Preassembled)	2 SETS
Aa5		M6x60 Bolt Set (Preassembled)	8 SETS

Parts used for trapeze assembly

E1		Trapeze Ring Hanger Handle (Preassembled)	2 SETS
E2		Cap for Trapeze Ring Tube (Preassembled)	2 PCS
E3		Trapeze Ring Tube	1 PC


Hardware used for trapeze assembly

Ea1		Sleeve Nut Set (Preassembled)	2 SETS
Ea2		Eye Bolt Set (Preassembled)	2 SETS
Ea3		Cap Nut Set (Preassembled)	2 SETS
Ea4		Screw Hook (Preassembled)	2 PCS

Parts used for swings assembly

J1		Swing Ring	4 PCS
J2		Swing Seat	2 PCS

Hardware used for swing seats assembly



Ja1		Sleeve Nut Set (Preassembled)	4 SETS
Ja2		Eye Bolt Set (Preassembled)	4 SETS
Ja3		Screw Hook (Preassembled)	4 PCS
Ja4		Screw Hook Cap Set (Preassembled)	4 SETS

Parts used for playground climbing net assembly



D1		L-Shaped Climbing Net Tube	1 PC
D2		Climbing Net Leg	1 PC
D3		Climbing Net Supporting Tube	2 PCS
D4		Cross Bar	1 PC
D5		Bottom Climbing Net Supporting Tube	2 PCS
D6		Triangle Net	1 PC
D7a		Rope	2 PCS
D7b		Rope	1 PC
D7c		Rope	1 PC

D7d		Rope	1 PC
D7e		Rope	1 PC
D7f		Rope	1 PC
D7g		Rope	2 PCS

Hardware used for playground climbing net assembly


Da1		Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x50 Sleeve Nut	4 SETS
Da2		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x52 Sleeve Nut	2 SETS
Da3		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x56 Sleeve Nut	4 SETS
Da4		Rope Connector (Preassembled)	32 PCS
Da5		M4x50 Screw (Preassembled)	32 PCS

Parts used for trampoline assembly

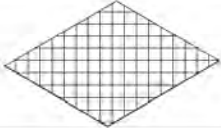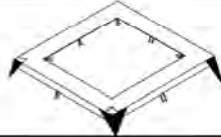S2		Jump Mat	1 PC
S3		Frame Pad	1 PC
S4A		L-Shaped Tube (Left)	1 PC
S4B		L-Shaped Tube (Right)	1 PC
S5		Straight Tube	1 PC
S6		Handlebar with Foam	1 PC
S7A		Handlebar Base Tube (Left)	1 PC
S7B		Handlebar Base Tube (Right)	1 PC
S8A		Elbow Tube	1 PC
S9		Spring	24 PCS

Hardware used for trampoline assembly

S10		Elbow Tube End Cap (Preassembled)	2 PCS
S11		Handlebar Base Tube End Cap (Preassembled)	2 PCS

Sa1		Binder Post & Bolt Set (Preassembled)	2 SETS
Sa2		Binder Post & Bolt Set (Preassembled)	2 SETS
Sa4		Bolt Set (Preassembled)	2 SETS



Parts used for slide assembly

Z1		Slide Ladder Support Tube	1 PC
Z2		Slide Ladder Connecting Tube	1 PC
Z3		Slide Leg Tube	2 PCS
Z4		Slide Ladder Step	2 PCS
Z5		Connecting Plate	2 PCS
Z6		Cap for Z1 and Z2 (Preassembled)	2 PCS
Z7		Cap for Z3 (Preassembled)	2 PCS
Z8		Slide	1 PC
Z9		Slide Ladder Support Tube Cross Bar	2 PCS
Z10		Slide Leg Cross Bar	1 PC


Hardware used for slide assembly

Za1		M6x36 Bolt Set (Preassembled)	4 SETS
Za2		M6x42 Bolt Set (Preassembled)	4 SETS
Za3		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x24 Sleeve Nut	10 SETS

Parts used for shade assembly

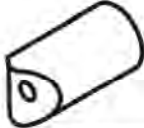H1		Sunshade	1 PC
H2		Short Plastic Stick	2 PCS
H3		Long Plastic Stick	2 PCS
H4		Logo	1 PC
H5		Plastic Connector	2 PCS

OVERVIEW DRAWING

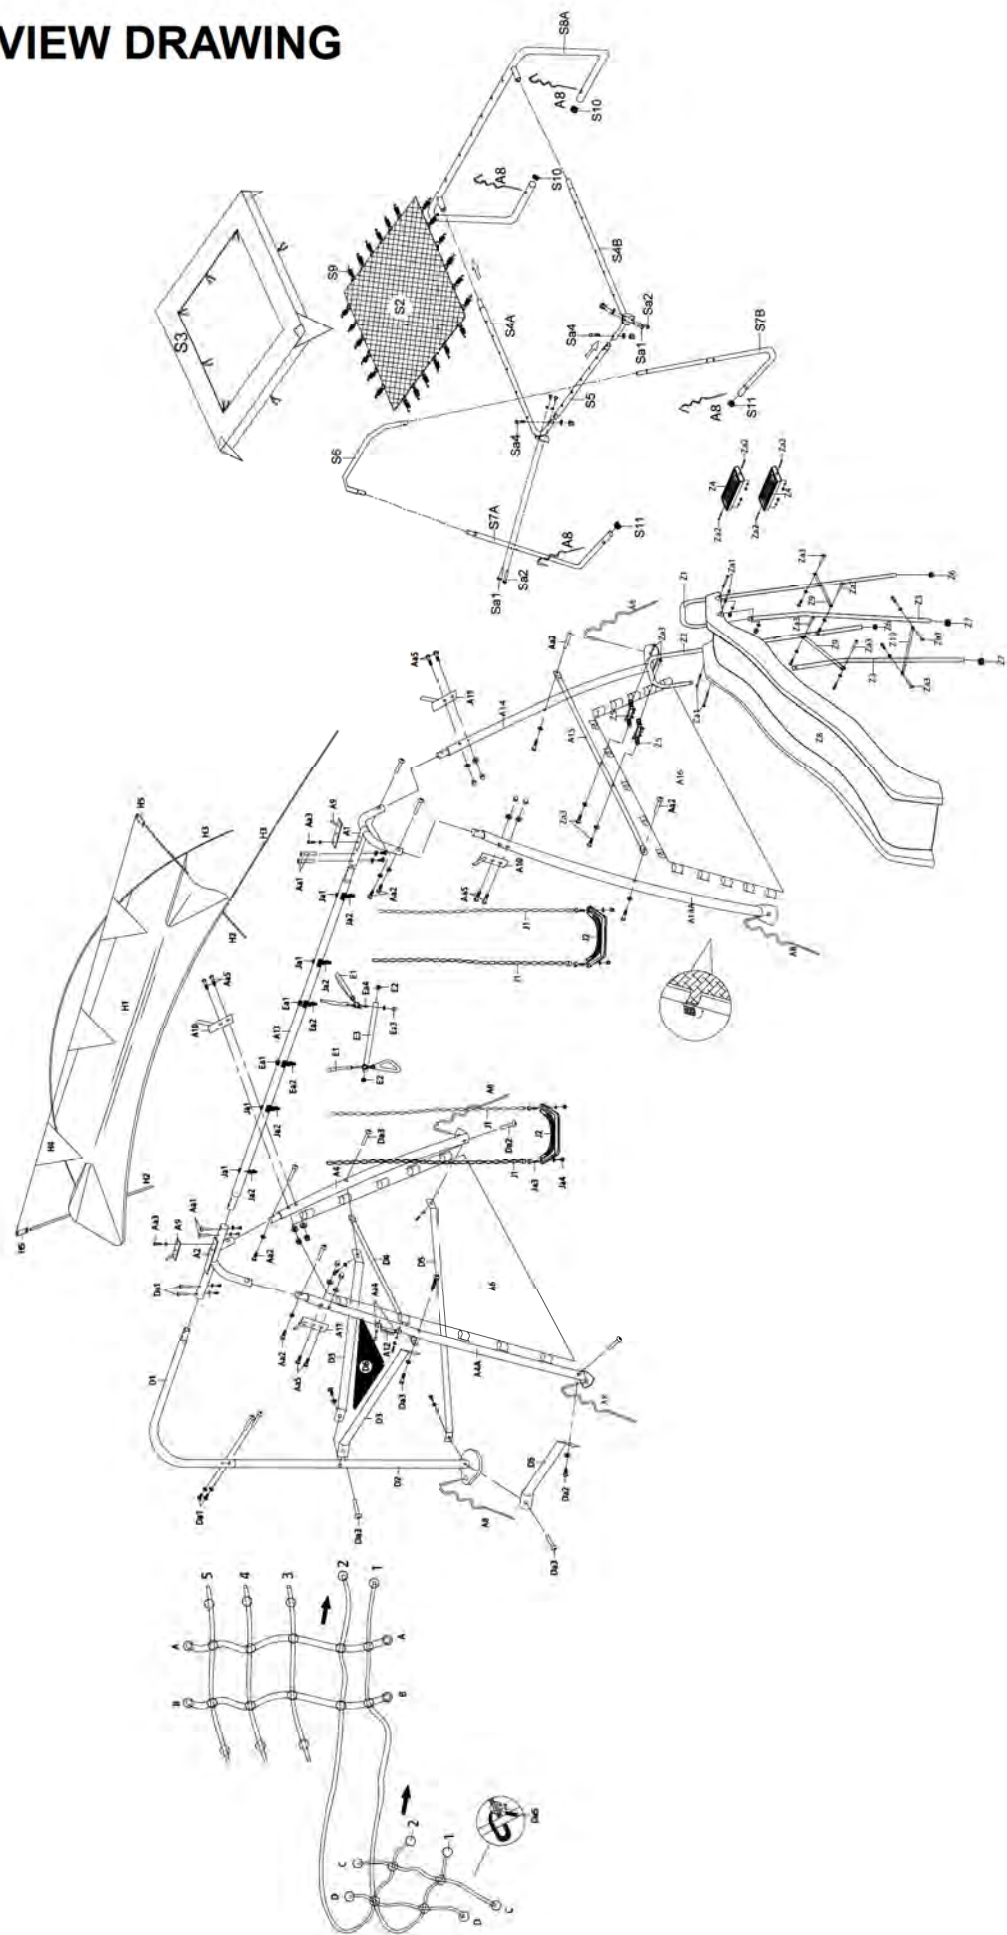


ASSEMBLY INSTRUCTIONS


- Place the playground equipment on level ground, not less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury to the user.

TIGHTENING NUTS & BOLTS

- Do not over-tighten the nuts and bolts when you are assembling your playground equipment. This will allow for some possible adjustments and ease of installation.
- Once you have completed the assembly of the playground equipment, go back over all of the nuts and bolts and properly tighten all of them before using the playground equipment.


Main Frame Layout

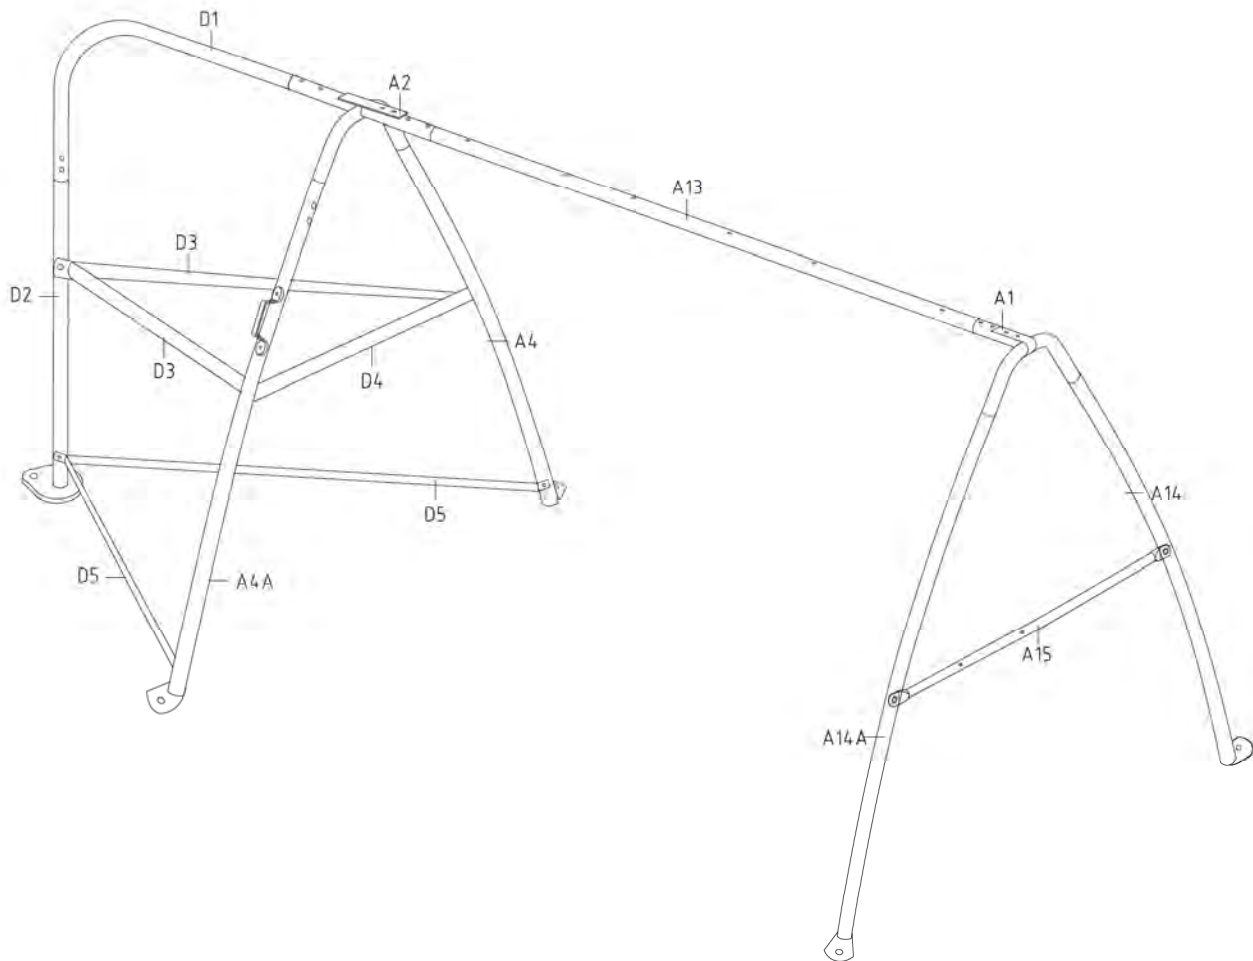

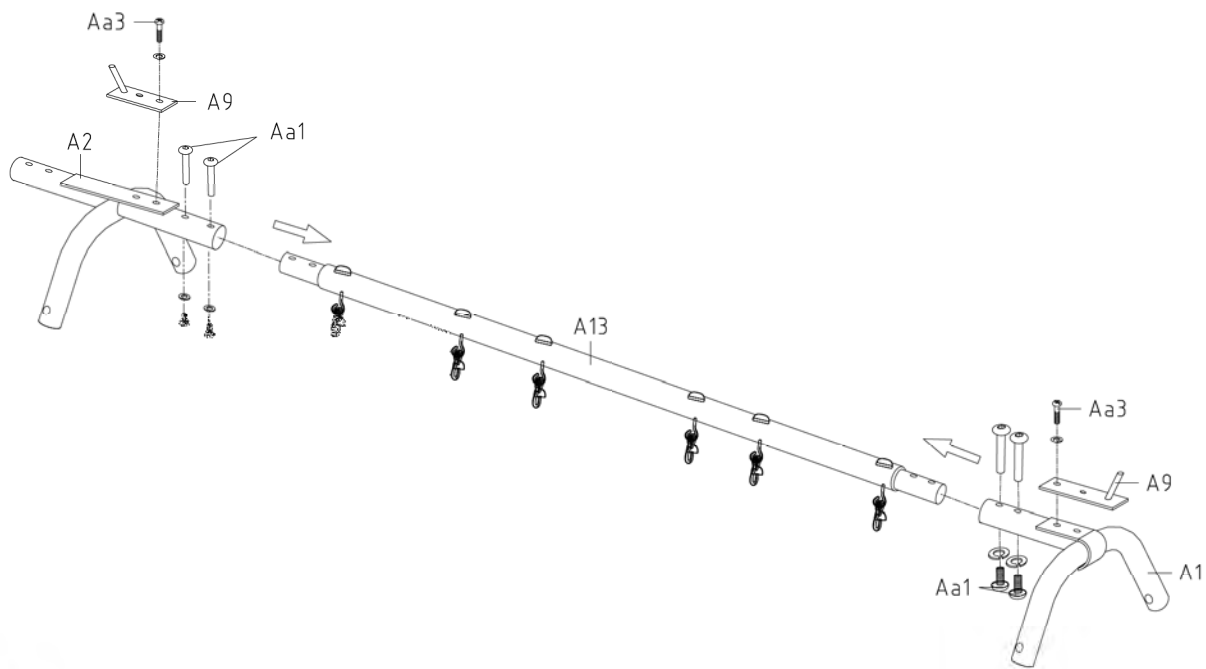


Step 1

- Remove one set of Pre-Installed Hardware Aa3 from the Top Bar II A2.
- Attach a Plastic Stick Holder A9 onto the Top Bar II A2 with the set of Hardware Aa3 that was removed.
- Remove two sets of Pre-Installed Hardware Aa1 from the Top Bar II A2.
- Insert the small end of the Top Bar III A13 into the socket of the Top Bar II A2, secure the bars with the two sets of Hardware Aa1 that were removed.
- Repeat the same steps on the other end.

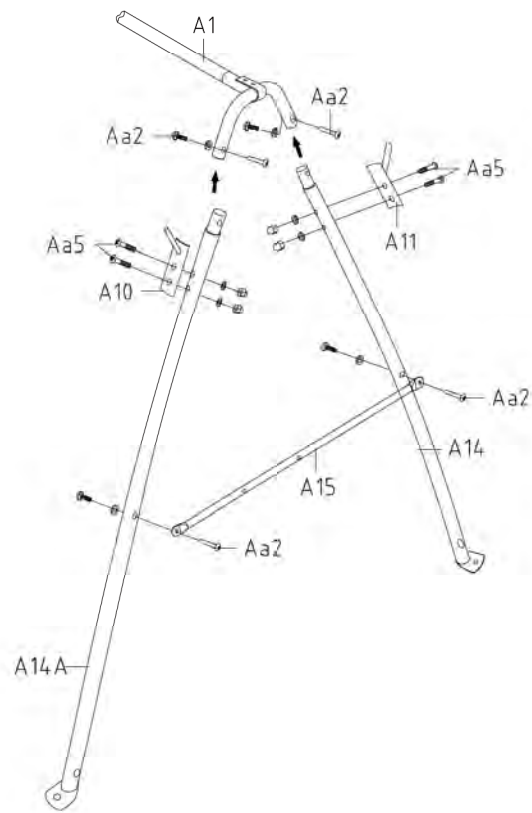


Step 2

- Remove two sets of Pre-Installed Hardware Aa2 from the Top Bar I A1.
- Insert the small ends of the Leg A14 and Leg A14A into the sockets at end of the Top Bar I A1.
- Align the holes and secure the bars using the two sets of Hardware Aa2 that were removed.
- Remove two sets of Pre-Installed Hardware Aa2 from Leg A14 and Leg A14A.
- Attach the Cross Bar A15 onto Leg A14 and Leg A14A with the two sets of Hardware Aa2 that were removed.
- Remove two sets of Pre-Installed Hardware Aa5 from the Leg A14A.
- Attach a Plastic Stick Holder A10 onto the Leg A14A with the two sets of Hardware Aa5 that were removed.
- Remove two sets of Pre-Installed Hardware Aa5 from the Leg A14.
- Attach a Plastic Stick Holder A11 onto the Leg A14 with the two sets of Hardware Aa5 that were removed.



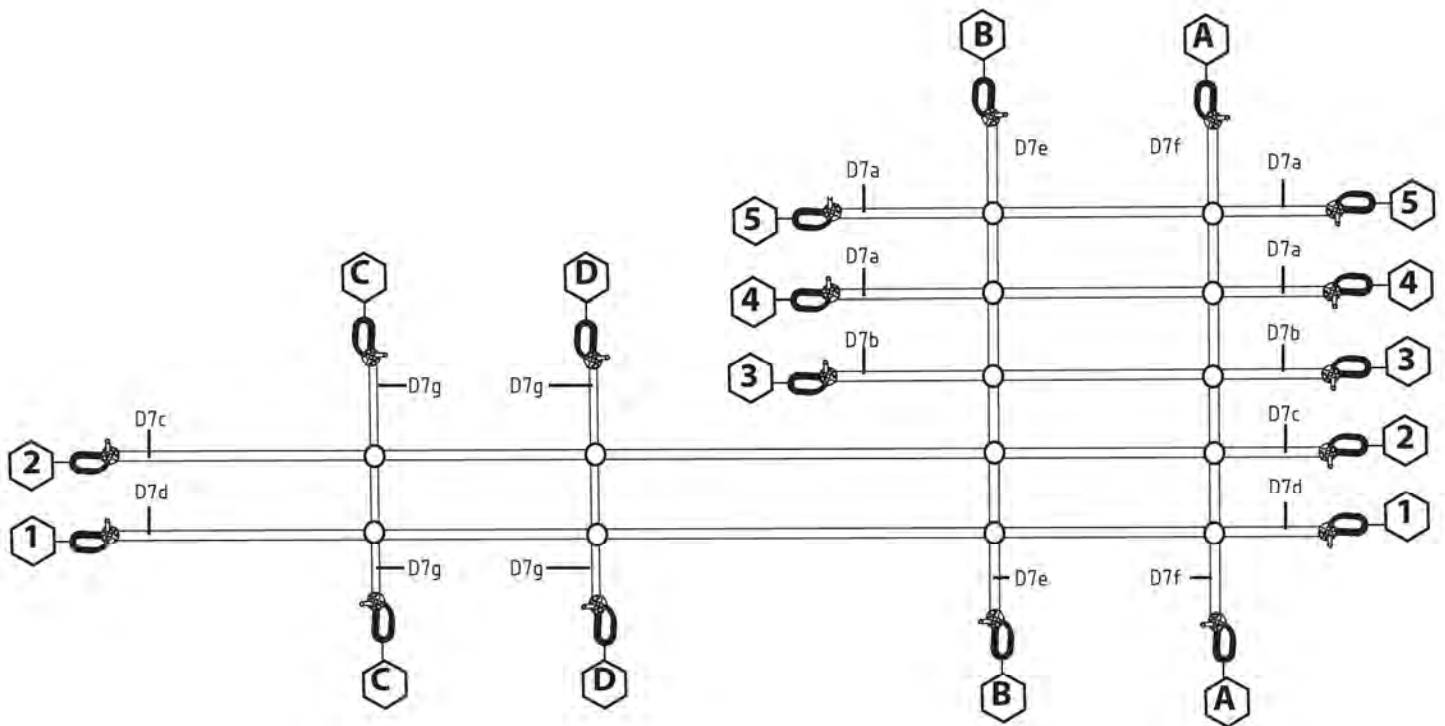


- Lay the Rope Net flat on the ground.
- The Ropes and Knots have been Labeled to help Identify each loop for the assembly.

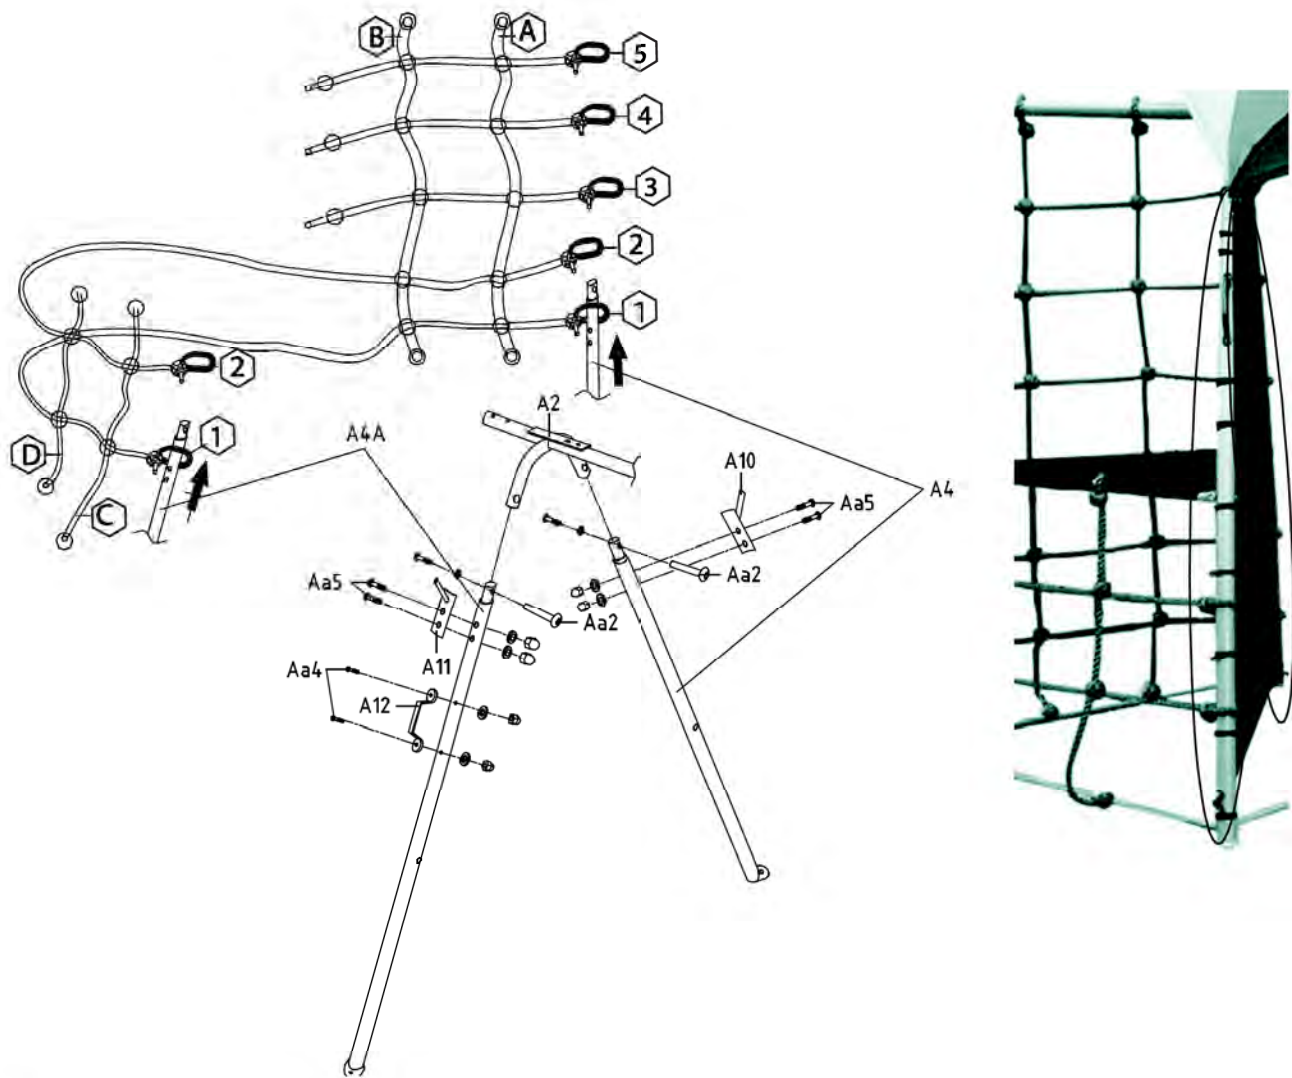


Step 3

- Layout the Rope Net to easily identify the Knots.
- Insert the Leg A4A through the rope knots 1 and 2.
- Insert the Leg A4 through the rope knots 1, 2, 3, 4, and 5.
- Remove two sets of Pre-Installed Hardware Aa2 from the Top Bar II A2.
- Insert the small ends of the Leg A4 and Leg A4A into the sockets at end of the Top Bar II A2.
- Align the holes and secure the Legs using the two sets of Hardware Aa2 that were removed.
- Remove two sets of Pre-Installed Hardware Aa5 from the Leg A4.
- Attach a Plastic Stick Holder A10 onto the Leg A4 with the two sets of Hardware Aa5 that were removed.
- Remove two sets of Pre-Installed Hardware Aa5 from the Leg A4A.
- Attach a Plastic Stick Holder A11 onto the Leg A4A with the two sets of Hardware Aa5 that were removed.
- Remove two sets of Pre-Installed Hardware Aa4 from the Leg A4A.
- Attach the Plastic Handle A12 onto the Leg A4A with the two sets of Hardware Aa4 that were removed.

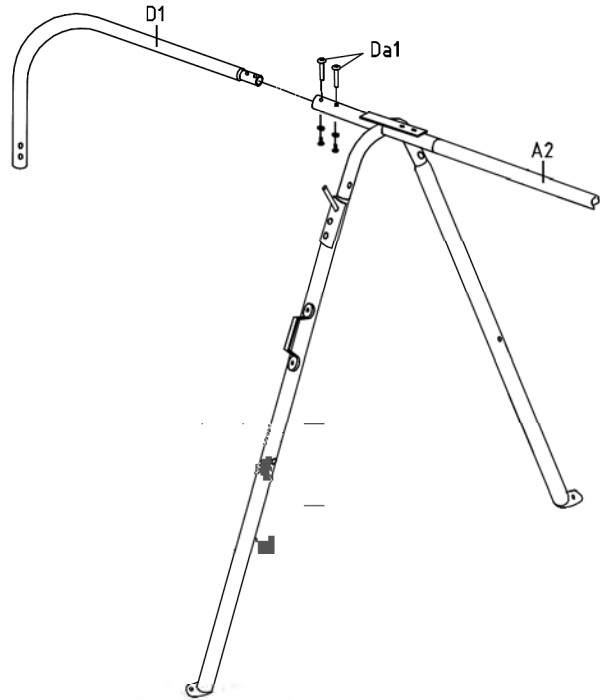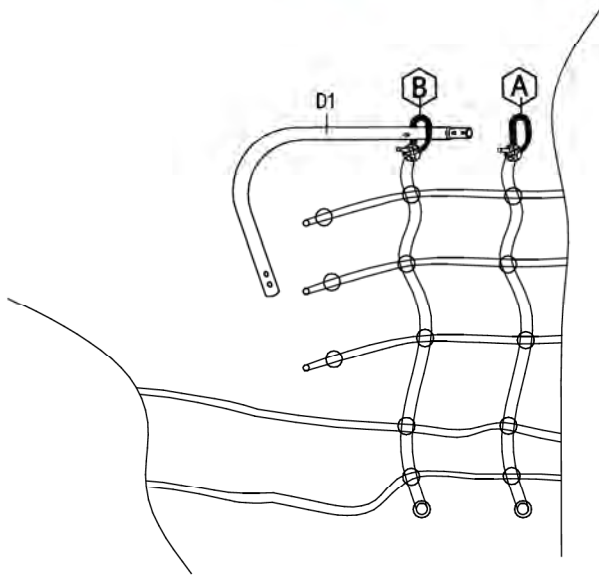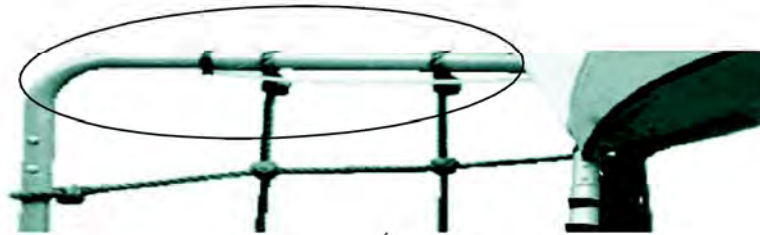




Step 4

- Remove two sets of Pre-Installed Hardware Da1.
- Insert the L-Shaped Climbing Net Tube D1 through the Rope knots B, and A.
- Insert the small end of the L-Shaped Climbing Net Tube D1 into the Top Bar II A2.
- Align the holes and secure using the two sets of Hardware Da1 that were removed.

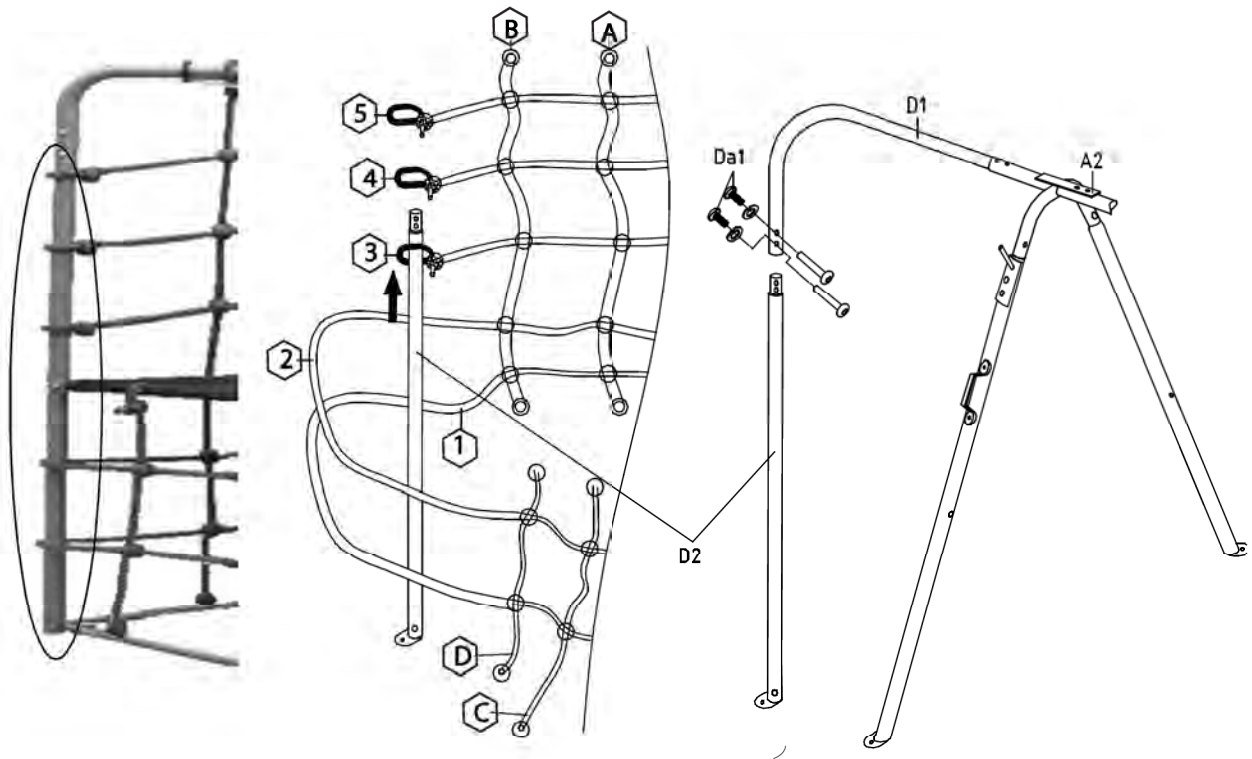


Step 5

- Remove two sets of Pre-Installed Hardware Da1 from the L-Shaped Climbing Net Tube D1.
- Insert the Climbing Net Leg D2 through the rope knots 3, 4, and 5.
- Insert the small end of the Climbing Net Leg D2 into the socket at end of D1.
- Align the holes and secure using two sets of Da1 that were removed.

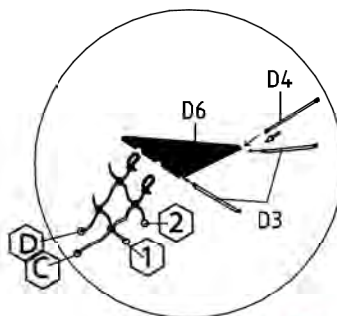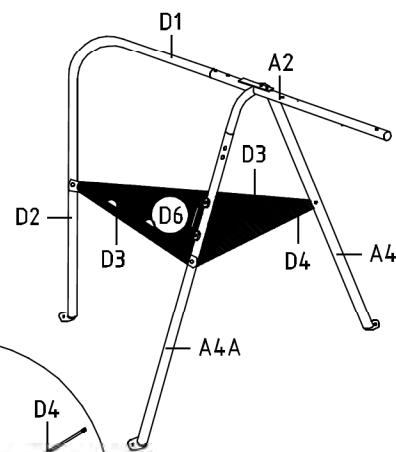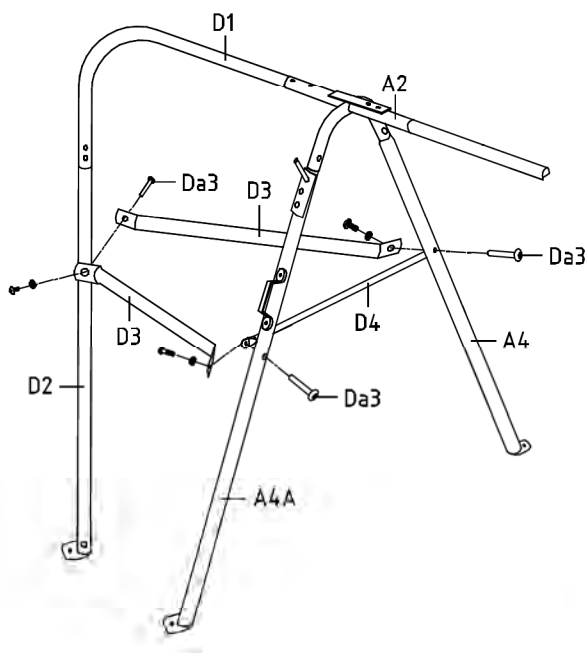


Step 6

- Remove the three sets of Pre-Installed Hardware Da3.
- Insert one Climbing Net Supporting Tube D3 and one Cross Bar D4 into the holes in the Triangle Net D6.
- Insert the other Climbing Net Supporting Tube D3 through into the holes in the Triangle Net D6 and the rope knots D and C.
- Attach both ends of the Climbing Net Supporting Tube D3 onto the upper holes of the Climbing Net Leg D2 with one set of the Hardware Da3 that was removed.
- Attach the other ends of the Climbing Net Supporting Tube and Cross Bar D4 onto upper holes on the Leg A4 and Leg A4A with the two sets of Pre-Installed Hardware Da3 that were removed.

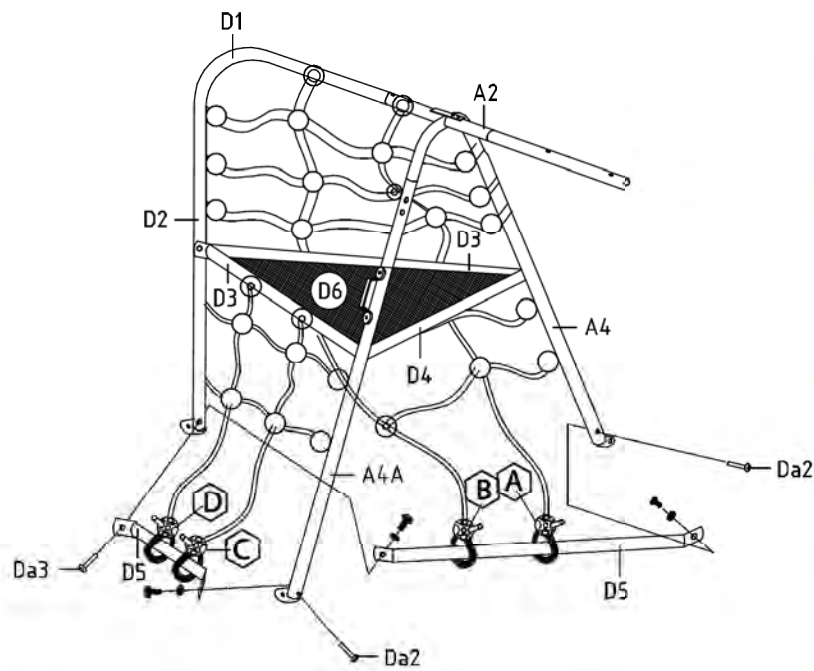


Step 7

- Remove the two sets of Pre-Installed Hardware Da2.
- Remove one set of the Pre-Installed Hardware Da3.
- Insert Bottom Climbing Net Supporting Tube D5 through the rope knots A and B.
- Insert the other Bottom Climbing Net Supporting Tube D5 through into the rope knots C and D.
- Attach both ends of the Bottom Climbing Net Supporting Tube D5 onto lower holes on the Climbing Net Leg D2 with one set of the removed hardware Da3.
- Attach the other ends of the Bottom Climbing Net Supporting Tube D5 onto lower holes on the Leg A4 and Leg A4A with the two sets of removed hardware Da2.

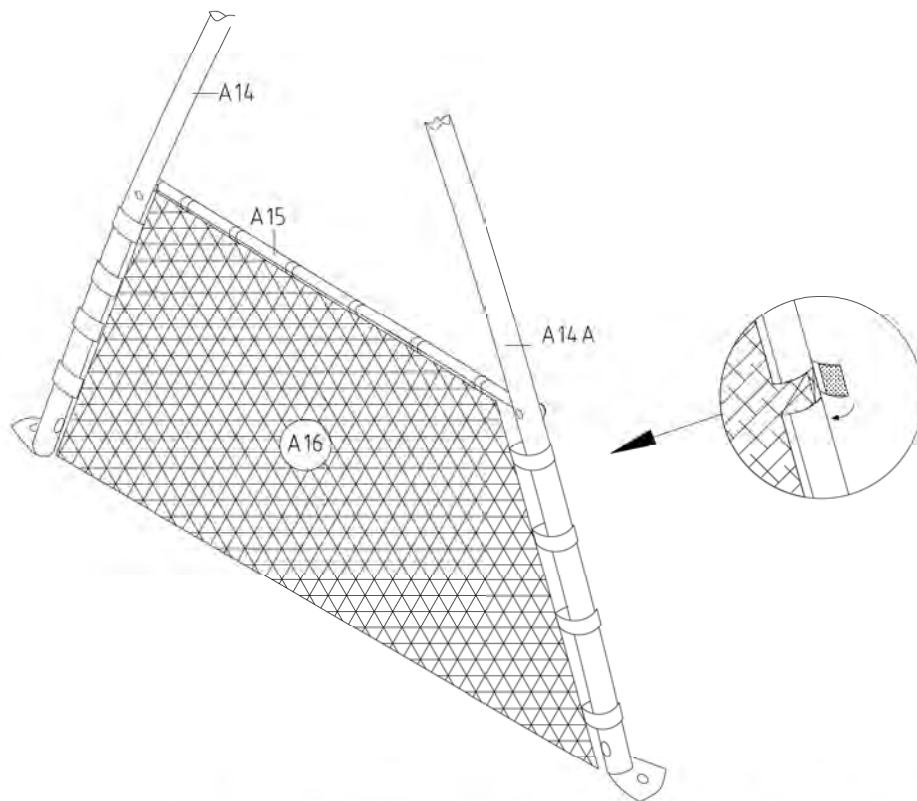


Step 8

Attach the Protective Net A16 onto Leg A14, Leg A14A, and Cross Bar A15 with the Velcro straps.

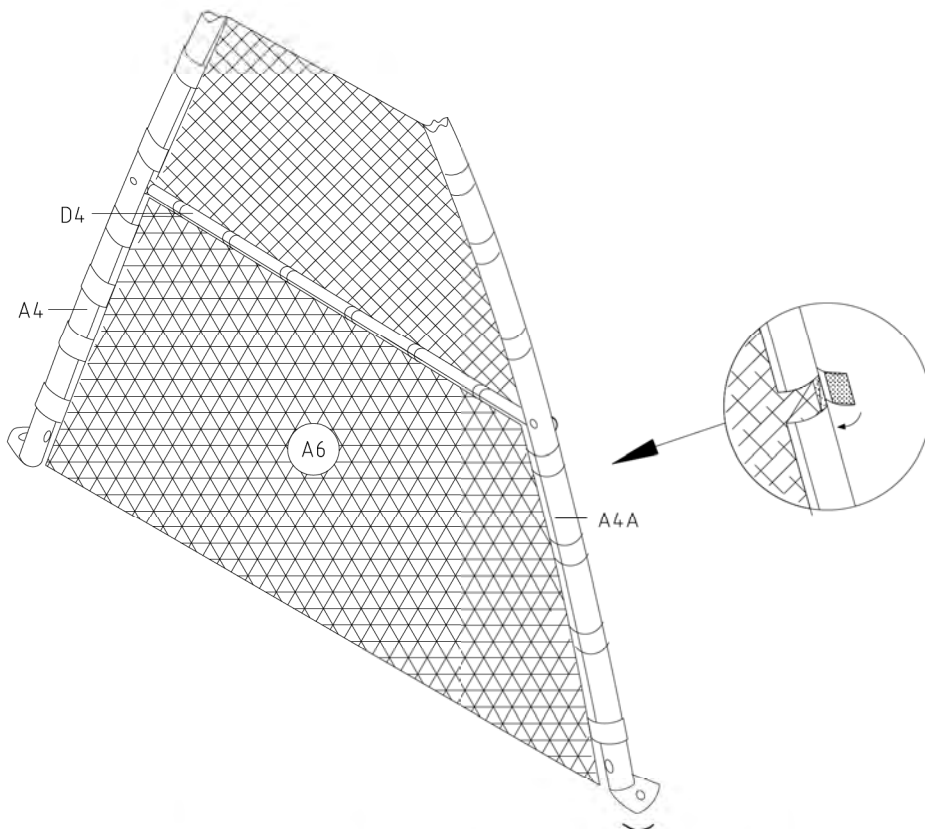



Step 9

- Attach the Protective Net A6 onto Leg A4, Leg A4A, and Cross Bar D4 with the Velcro straps.

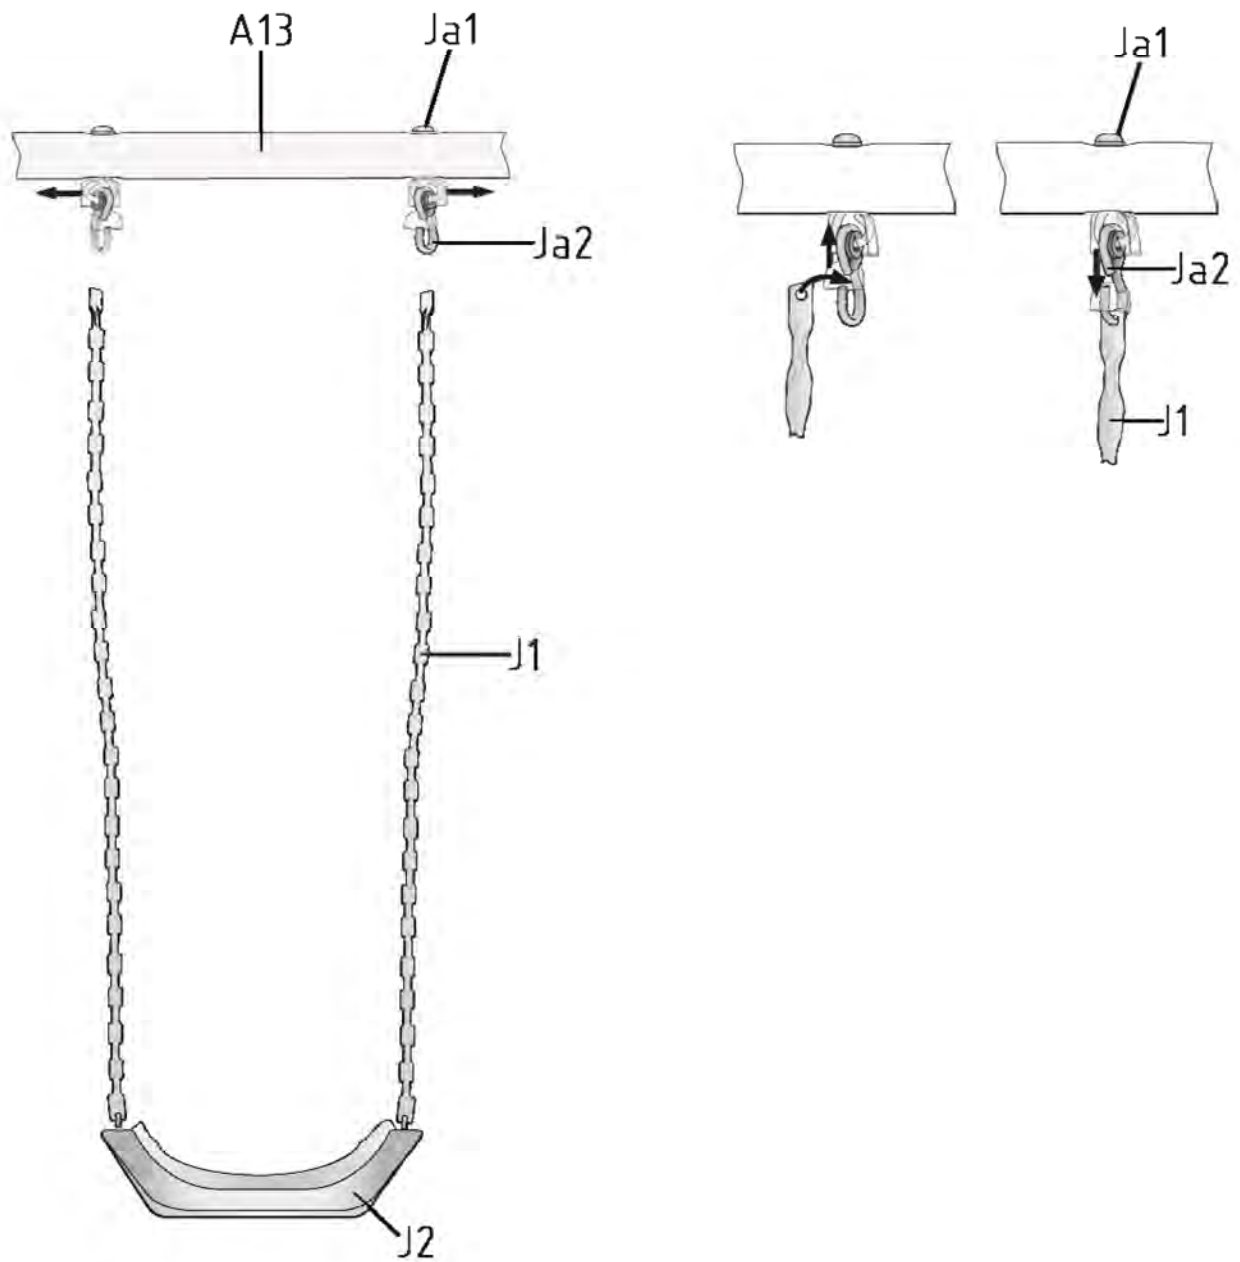


Step 10

- Attach the Protective Net A6 onto Leg A4, Leg A4A, and Cross Bar D4 with the Velcro straps.

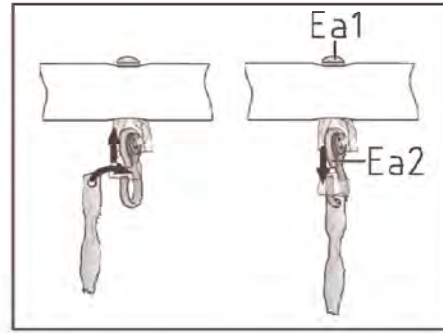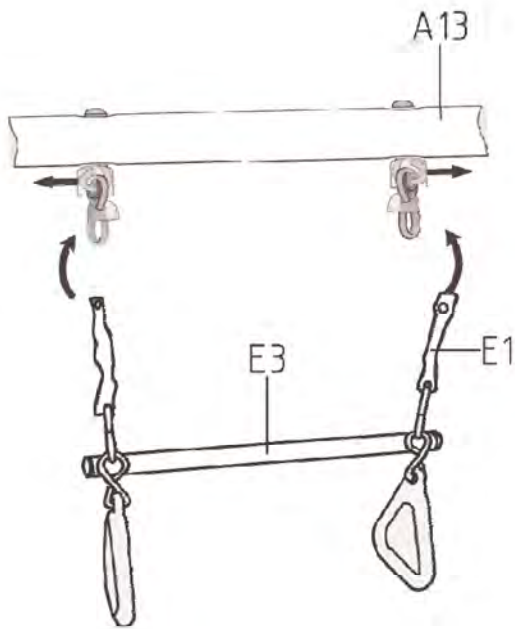


Step 11

- Hang both Trapeze Ring Hanger Handles E1 in place from the Eye Bolts Ea2 on the Top Bar III A13.

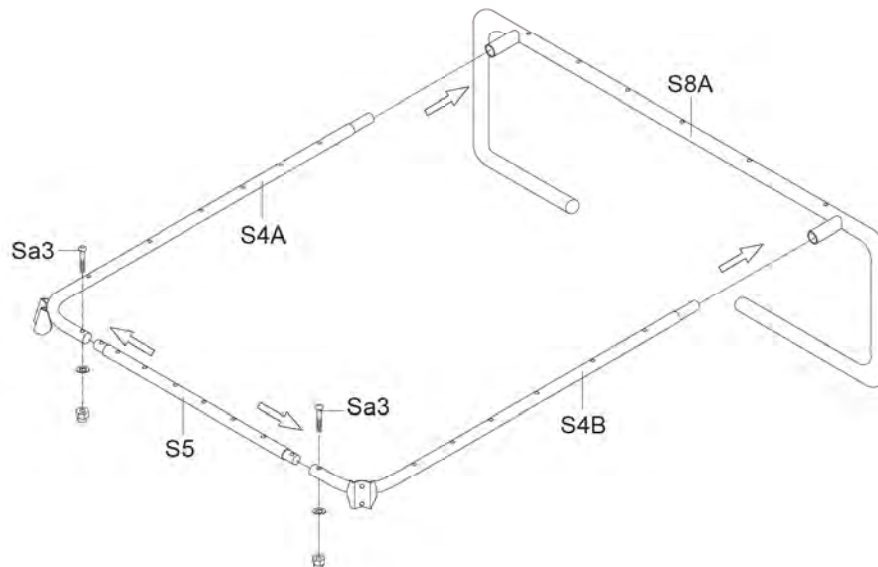

Step 12

- Remove two sets of Pre-installed Hardware Sa3.
- Insert the small ends of the L-Shaped Tube (Left) S4A and L-Shaped Tube (Right) S4B into the sockets of the Elbow Tube S8A. The Welded bracket of the L-Shaped Tube (Left) S4A and L-Shaped Tube (Right) S4B Should face outside.
- Insert the small end of Straight Tube S5 into the opening of the L-Shaped Tube (Left) S4A and L-Shaped Tube (Right) S4B, align the holes.
- Secure using the two sets of Pre-installed Hardware Sa3 that were removed.

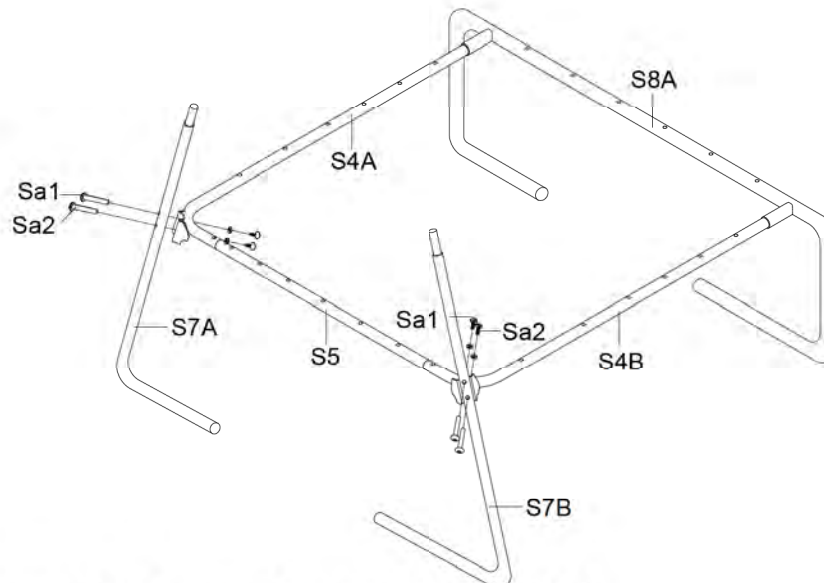


Step 13

- Remove two sets of Pre-installed Hardware Sa1 and Sa2.
- Align the Handlebar Base Tube (Left) S7A to the outside of the L-Shaped Tube (Left) S4A, and put the Handlebar Base Tube (Right) S7B to the outside of the L-Shaped Tube (Right) S4B, align the holes.
- Secure using the two sets of Pre-installed Hardware Sa1 for the upper hole of the Handlebar Base Tube (Left) S7A and Handlebar Base Tube (Right) S7B.
- Secure using two sets of Pre-installed Hardware Sa2 for the lower hole of Handlebar Base Tube (Left) S7A and Handlebar Base Tube (Right) S7B.

Note: The bolt set Sa1 is longer than the Sa2.


Do not over-tighten the screws as it will make STEP 15 more difficult to assemble.

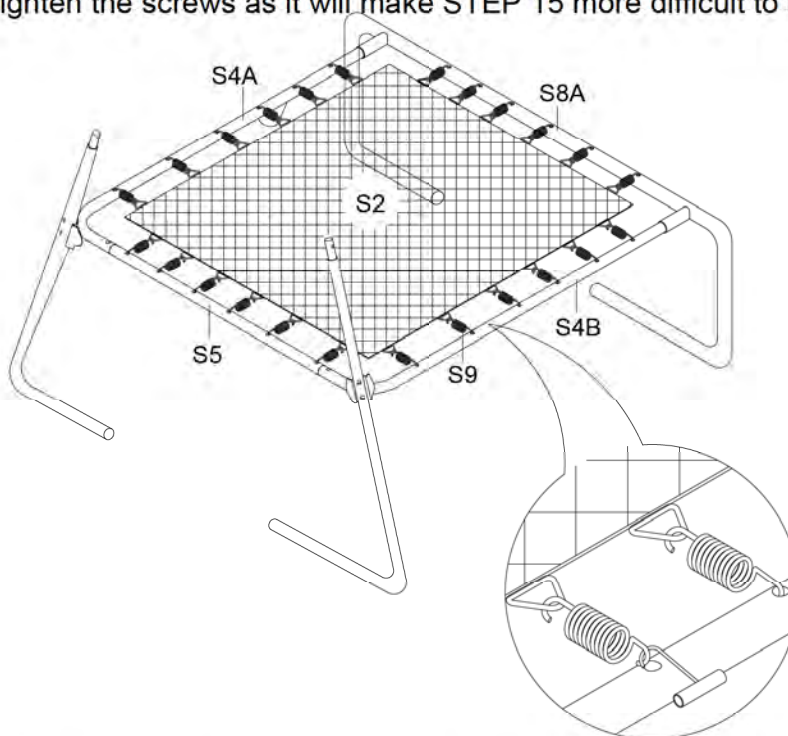

Step 14


- Layout the Jump Mat S2 and align each triangle ring of the mat towards the opposite holes of the Trampoline Frame, one triangle ring to one hole.
- Attach a Spring S9 with spring hooks facing down on to the triangle ring of the mat. Hold the spring loading tool underhand and pull the Spring S9 towards the hole in the Trampoline frame. Drop the hook into the frame hold unit it latches on.

Note: Be careful not to pinch hands or fingers on springs. Use gloves to prevent pinching. Keep springs dry; wet springs are very slippery.

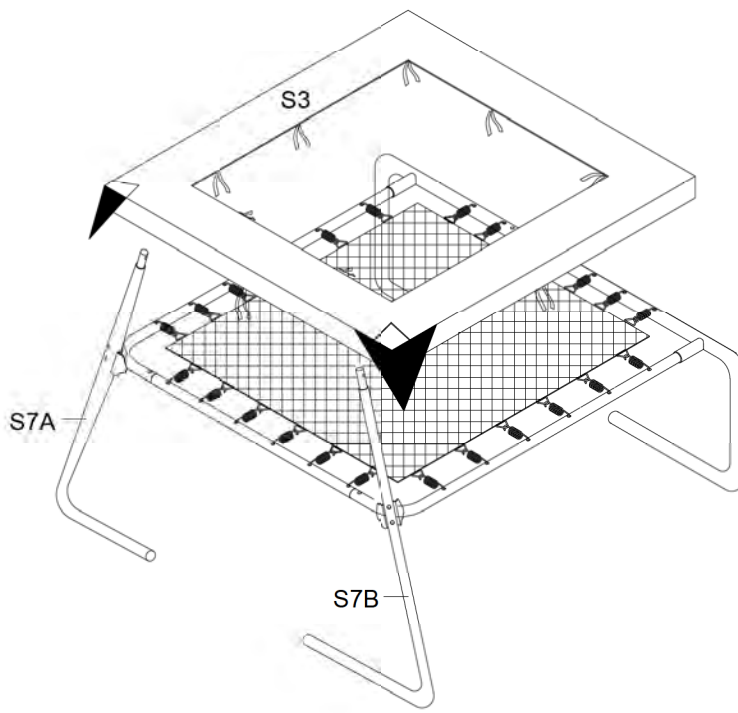

Step 15


- Insert two corners of the Frame Pad S3 onto the Trampoline Frame.
- Lay the Frame Pad S3 over the trampoline, so that the springs and the steel frame are covered. ensure that the Frame Pad S3 covers all metal parts.

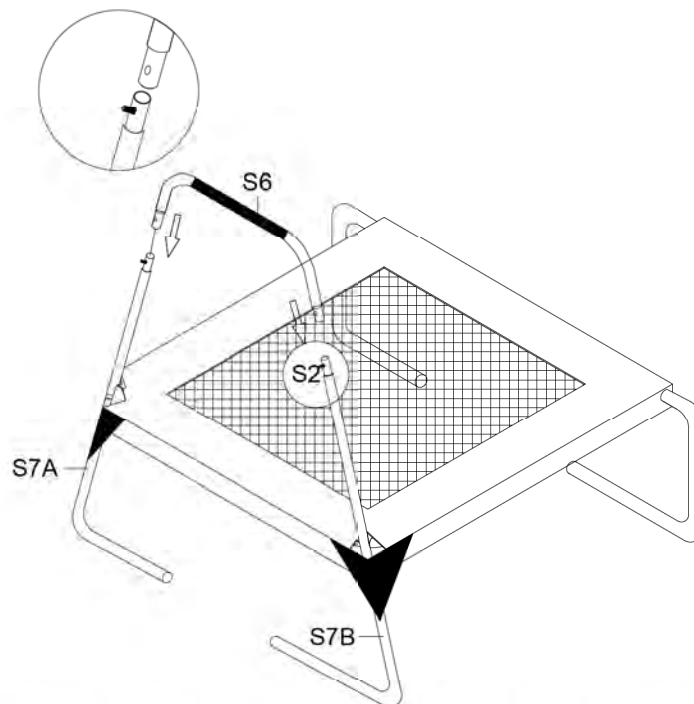

Step 16

- Insert the Handlebar with Foam S6 onto the small end of the Handlebar Base Tube (Left) S7A and Handlebar Base Tube (Right) S7B.


TIGHTEN ALL HARDWARE AT THIS TIME!

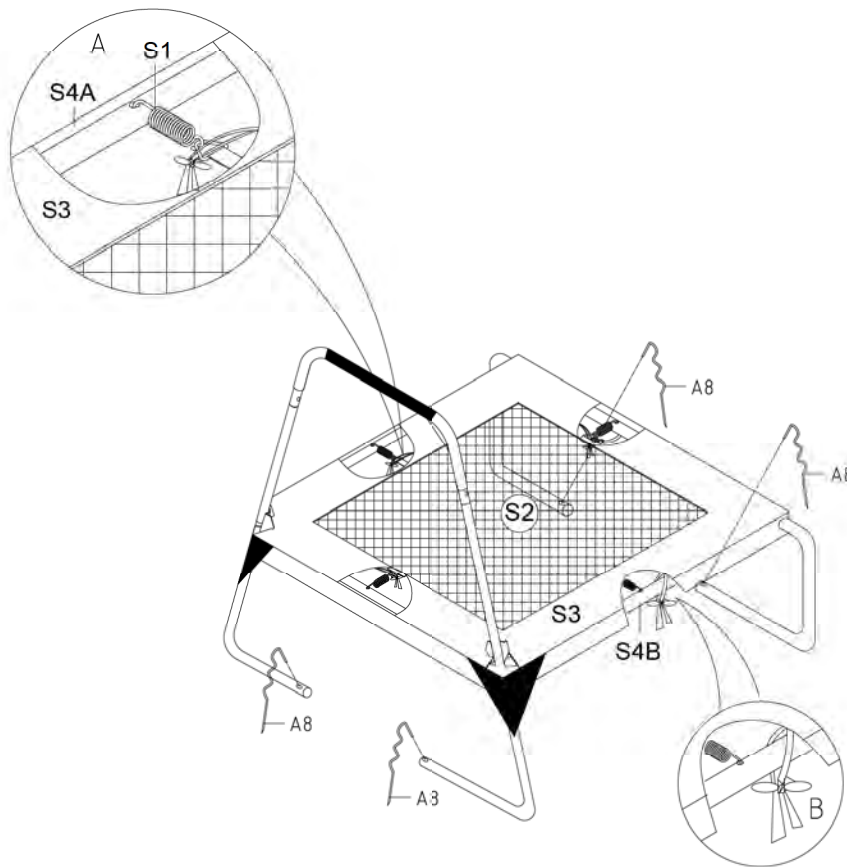


Step 17

- Bring one end of the strap on Frame Pad S3 which is nearest to the Jump Mat S2, then tie the strap to the triangle ring with a knot as shown in Fig A. Repeat this step for the other straps near the Jump Mat S2 in the same way. Make sure the knot is tight and the frame pad fits securely on the trampoline.
- Line up the elastic straps over the main frames (S4A, S4B, S8A, and S5) of the trampoline, aligning alternate straps over, and then tie the straps as shown in Fig B. Make sure every strap is tied well.
- Turn the four Anchors A8 into the ground until only the hooked end is above the ground next to the Handlebar Base Tube (Left) S7A, Handlebar Base Tube (Right) S7B, and Elbow Tube S8A. Insert the hooked end into the bottom openings. Ensure that the hooked end is secure.

Position for Playground

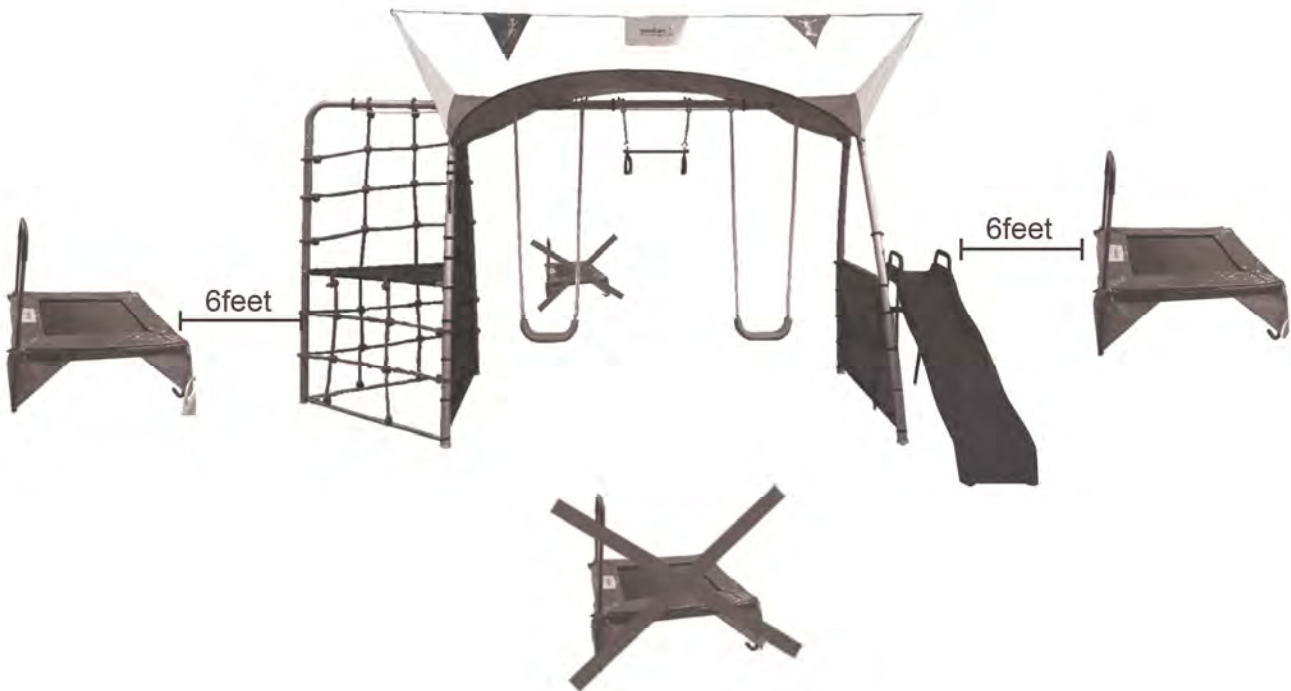


1. Do not place the trampoline in front or back of the swing set to avoid injuries from collisions.
2. Only place the trampoline at the side of swing set and keep at least 6 feet of distance between them.

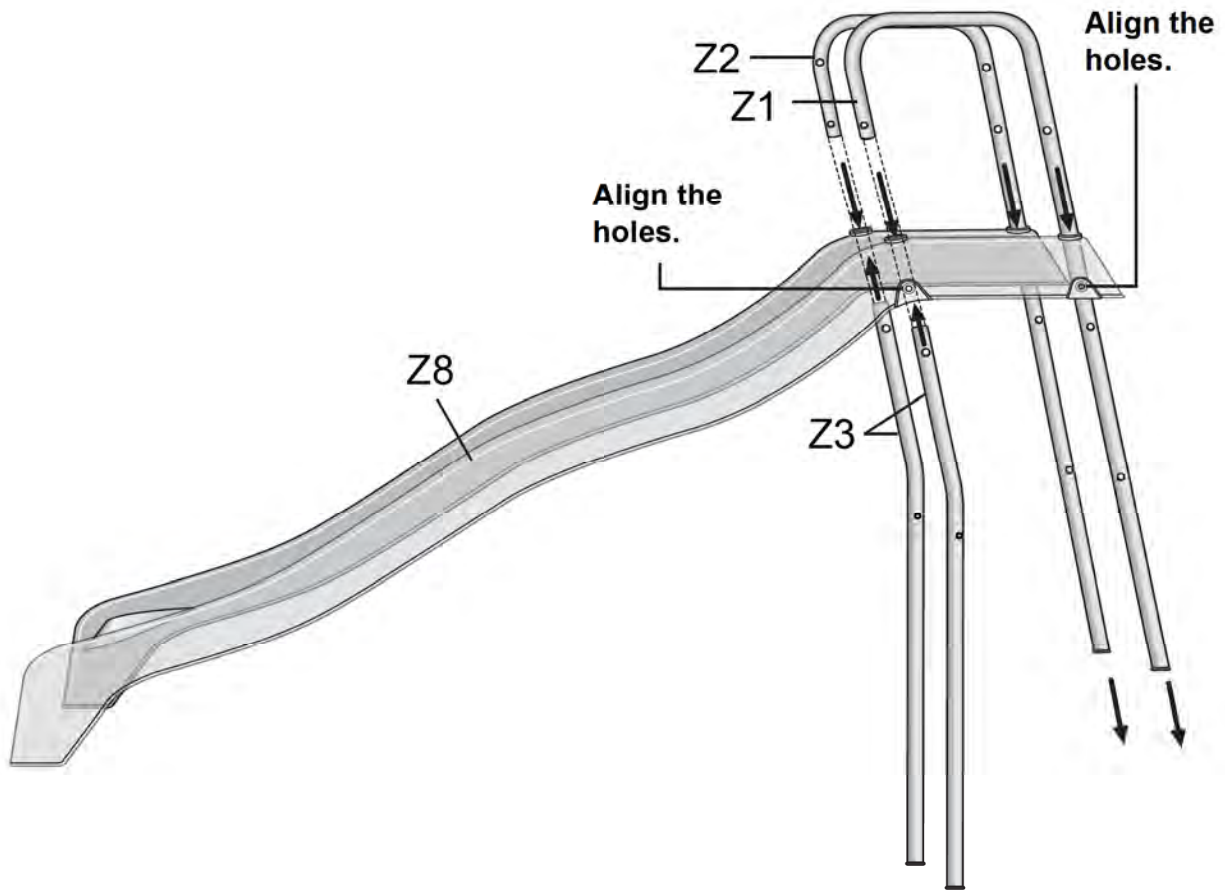


Step 18

- Remove all the preassembled Phillips Head Bolt sets Za1 from the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2.
- Insert the longer ends of the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2 into the holes on the rear end of the Slide Z8 and align the holes.
- Insert both Slide Leg Tubes Z3 into the holes on the front end of the Slide Z8 and align the holes.

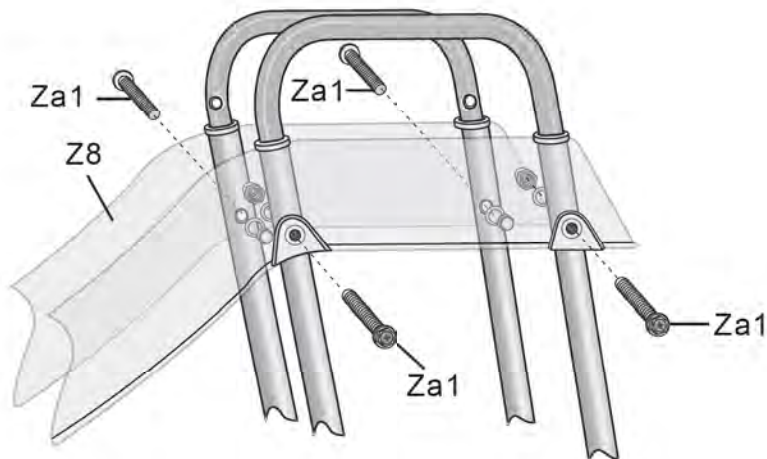


Step 19

- Secure the Slide Z8 using the 4 sets of Hardware Za1 previously Removed.

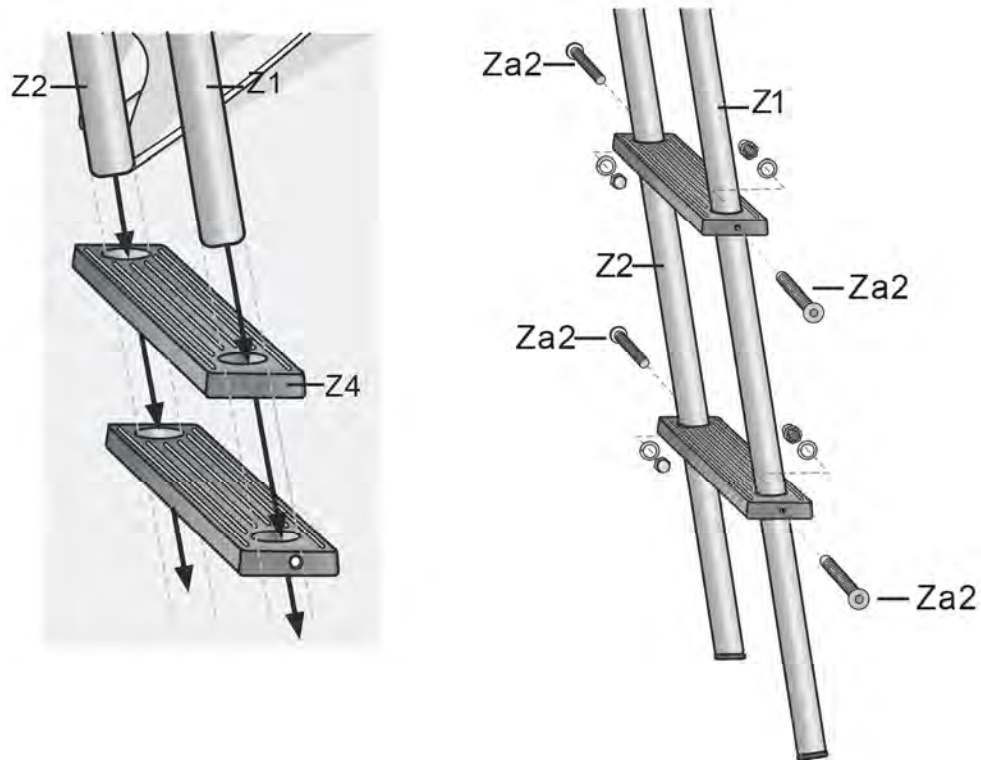


Step 20

- Slide the two Slide Ladder Steps Z4 up the bottom ends of the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2. Align the holes of the Slide Ladder Steps Z4 with the TOP and BOTTOM set of holes on the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2.
- Secure the Slide Ladder Steps Z4 using the four sets of Hardware Za2 previously removed.

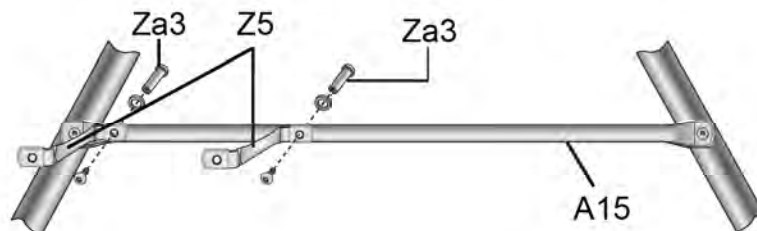


Step 21

- Remove two sets of preinstalled Hardware Za3 from the two Connecting Plates Z5.
- Attach both Connecting Plates Z5 to the Slide Mounting Bar A15 with the two removed sets of Hardware Za3.

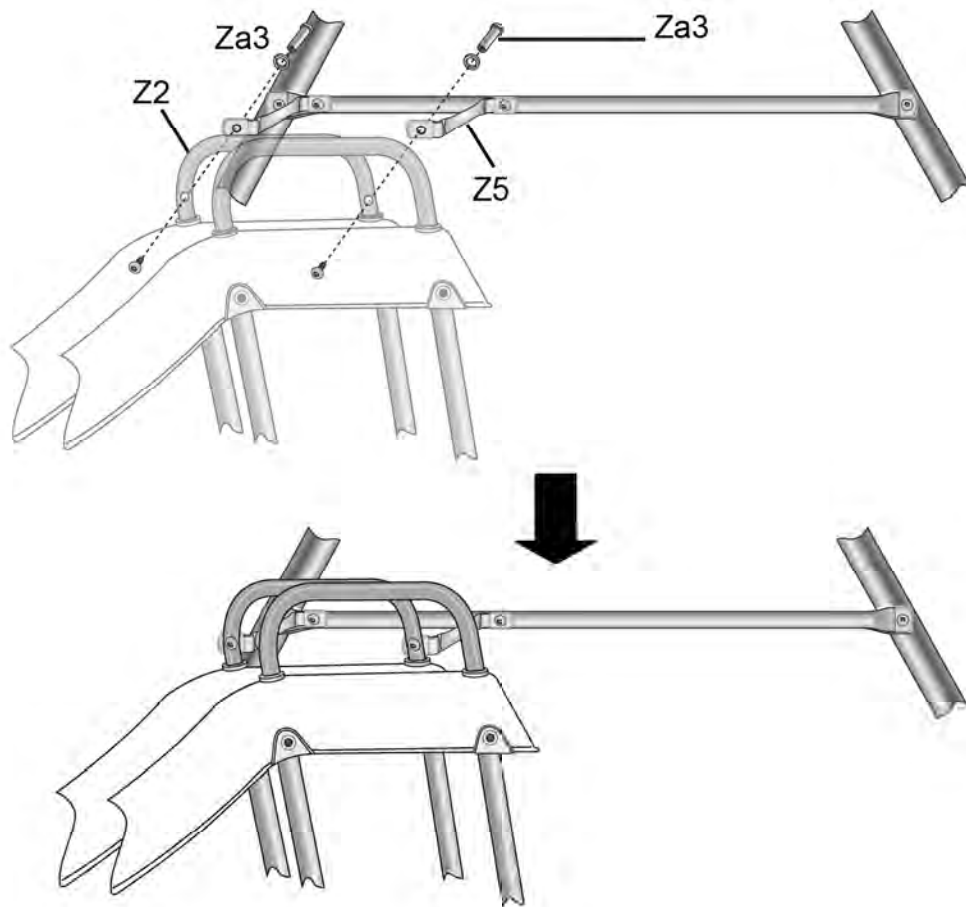

Step 22


- Attach the Slide Ladder Connecting Tube Z2 onto the Cross Bar A15 using the two Connecting Plates Z5 and the two sets of Hardware Za3 that was previously removed.

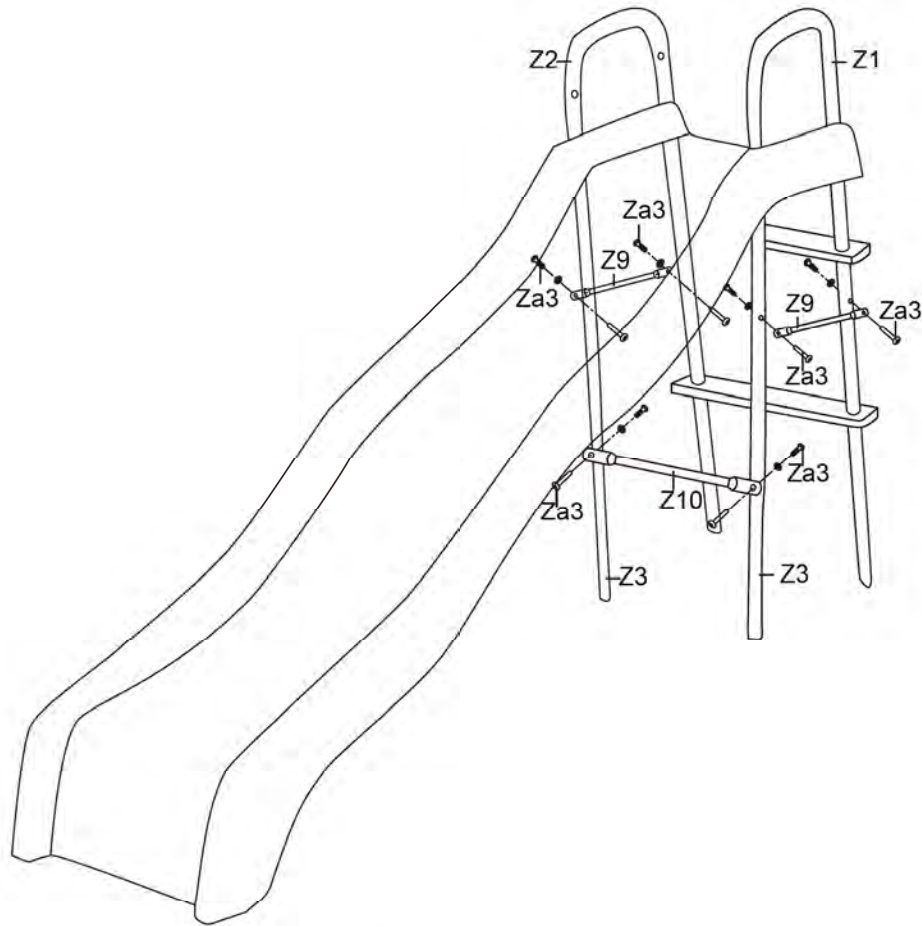

Step 23


- Remove two sets of Hardware Za3 from both Slide Ladder Support Tube Cross Bars Z9.
- Attach one Slide Ladder Support Tube Cross Bar Z9 onto each side of the ladder using the
- hardware sets Za3 that were removed.
- Remove two sets of Hardware Za3 from the Slide Leg Cross bar Z10.
- Attach the Slide Leg Cross Bar Z3 to the slide using the two sets of Hardware Za3 that were removed.

NOTICE: SECURELY TIGHTEN ALL BOLTS ON THE SLIDE

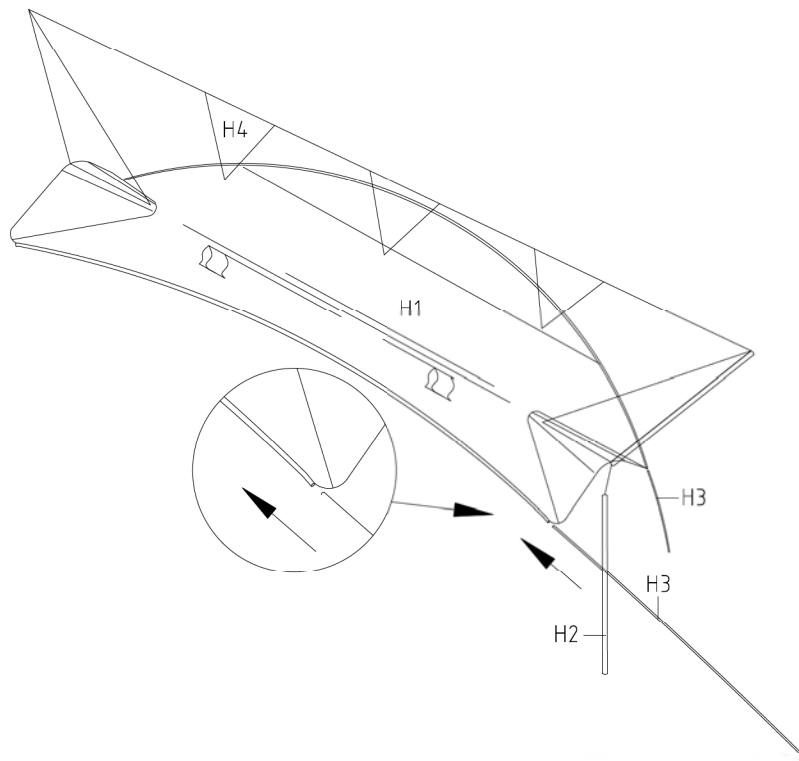

Step 24

- Insert the Long Plastic Sticks H3 into the holes in the side of the Sunshade H1.
- Insert Short Plastic Sticks H2 into the holes on each end of the Sunshade H1.

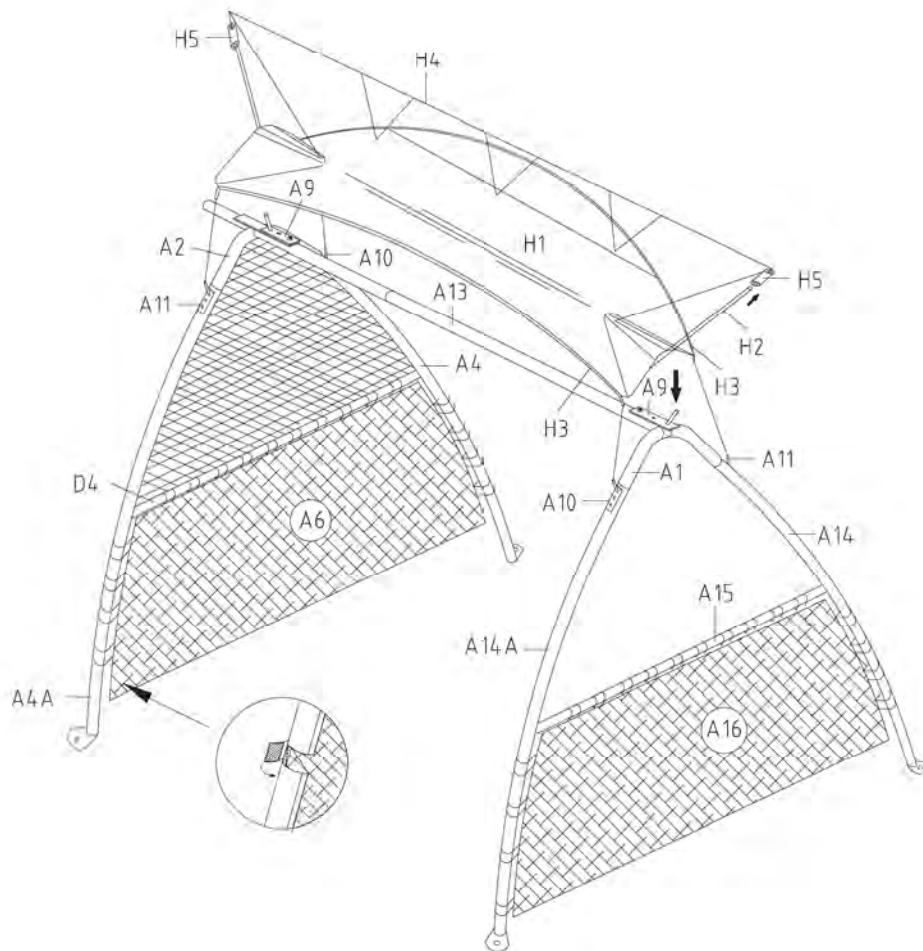

Step 25

- Insert one end of the Long Plastic Stick H3 into the hole of the Plastic Stick Holder A11 on the Leg A14 and the other end of the Long Plastic Stick H3 into the hole of the Plastic Stick Holder A10 on the Leg A14A.
- Insert the other Long Plastic Stick H3 into the hole of the Plastic Stick Holder A10 on the Leg A4 and the other end of the Long Plastic Stick H3 into the hole of the Plastic Stick Holder A11 on the Leg A4A.
- Insert the Short Plastic Stick H2 into the holes on the Plastic Stick Holder A9.
- Attach all Velcro straps onto frames.
- Insert the two ends of the Plastic Connector H5 onto the Short Plastic Sticks H2.

GROUND ANCHOR INSTALLATION





You may either anchor the feet of the frame in hard soil or if your soil is soft (sand, etc.), you may use the corkscrew (A8) anchor to secure the playground. If you wish to permanently secure your swing set, setting the legs in concrete secured by a brick or gravel bed is recommended. Ensure equipment is firmly anchored before use. When cementing equipment, bury the legs about three inches below the ground. This will ensure sufficient space remains under the swings. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface or below ground level to prevent tripping. Be sure the swing set is located on level ground.

For Soil Ground Installation:


Turn the corkscrew anchor into the ground until only the hooked end is above the ground next to the leg.

Insert the hooked end into the bottom opening of the leg.

Ensure that the hooked end is secure in the leg opening.

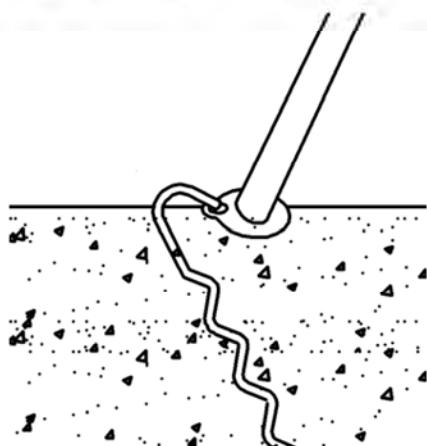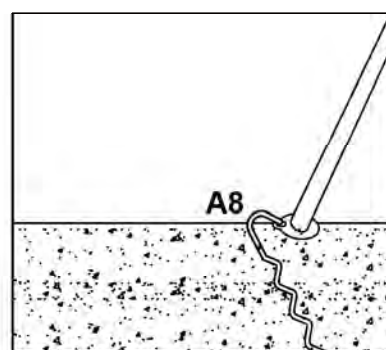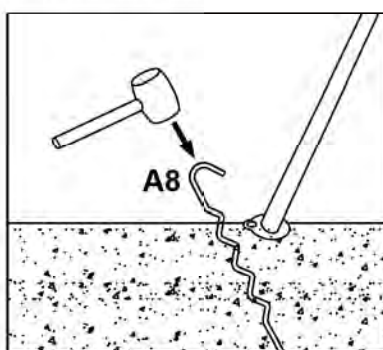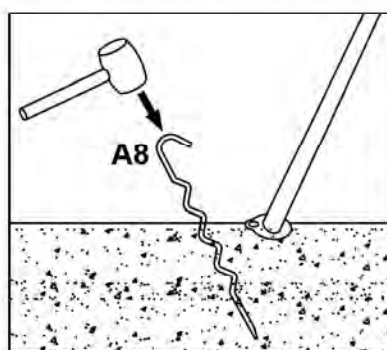

Correct

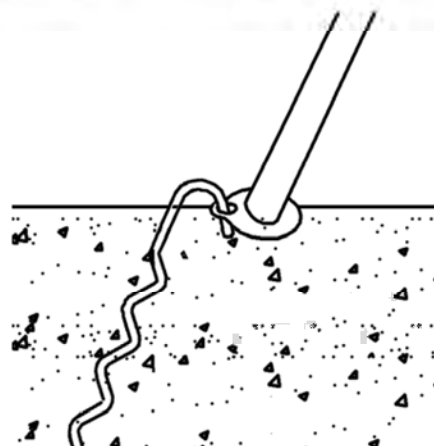


Incorrect


When turning the corkscrew anchor into the ground, please make sure the anchor is roughly perpendicular to the playground feet.

For Concrete Ground Installation:

- If the swing set is set up on grounds with sandy soil condition, it must be anchored with concrete footing (concrete not included).
- Dig holes around swing leg tube as shown below in drawing. As you dig down and create a cylindrical hole, you should use a shovel to carve out the lower part of the hole, to create a larger diameter hole at the bottom.
- Place 2 inch high brick or 2 inches of gravel bed as shown in drawing below.
- Use about 45lb of concrete per leg.
- Cover concrete with dirt and protective surface material.
- Allow about 6-7 days for concrete to dry properly.

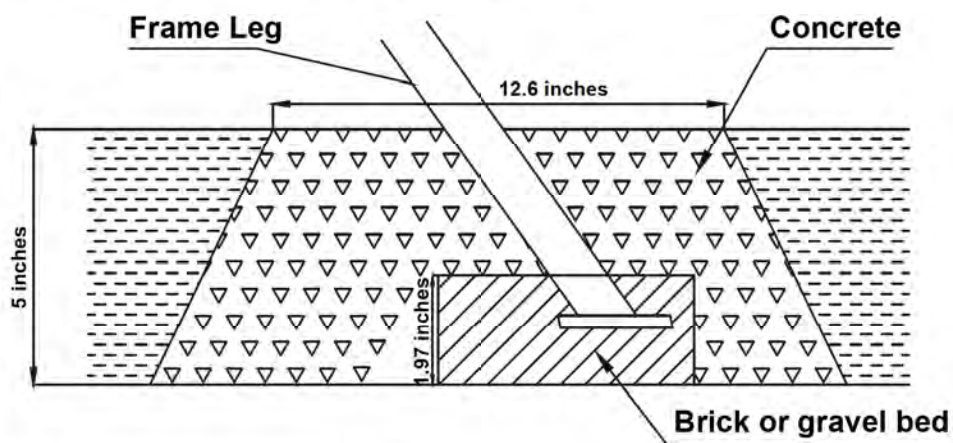

Note: The maximum fall height for this product is 6 feet. The minimum ground clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

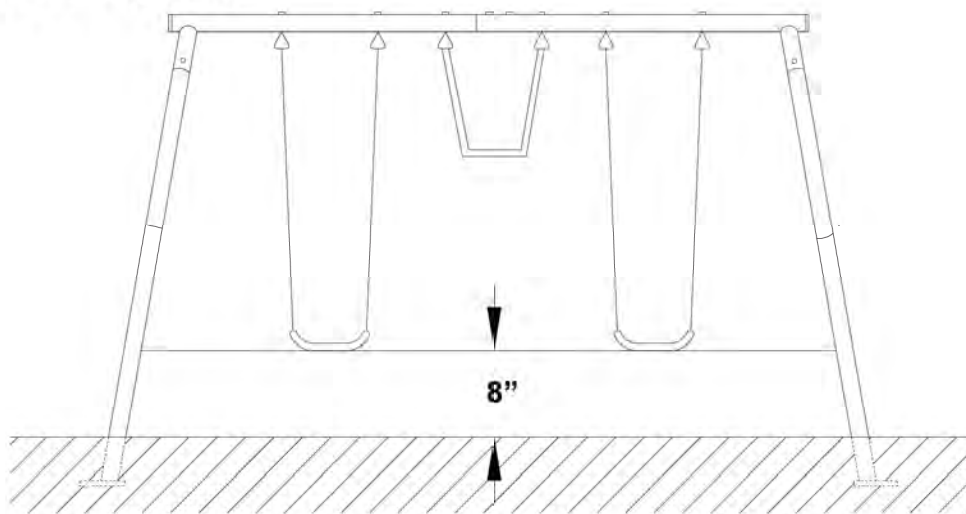

Must keep a minimum 8 inches of space with the soil.

Warning: Please bury the legs of the swing set as per instruction. If the swing set is used without proper anchoring, it may be dangerous and may tilt over.

This play ground received ASTM F2276 and CPSIA certification.

IRONKIDS

PARTS REQUEST FORM

Please fax this form to (1-626-810-2166)

OR YOU CAN EMAIL CUSTOMER SERVICE REQUESTS TO

service@paradigmhw.com

NAME: _____

ADDRESS: _____

CITY _____ STATE _____ ZIP _____

TELEPHONE: (Day) _____

(Night) _____

(Email Address) _____

SERIAL#: _____

MODEL#: _____

PURCHASE DATE: _____

PURCHASE FROM: _____

[illegible]

"YOUR ORDER WILL BE PROCESSED WITHIN 3 BUSINESS DAYS"