

# OWNER'S MANUAL



## iControl Disk Brake Inversion Table

Item#5610

The specifications of this product may vary from this photo and are subject to change without notice.  
IRONMAN, IRONMAN TRIATHLON and M-DOT are registered trademarks of World Triathlon Corporation.  
This product is licensed by the World Triathlon Corporation.



## TABLE OF CONTENTS

SERVICE-----	2
IMPORTANT SAFETY INSTRUCTIONS-----	3
LABELPLACEMENT-----	5
OVERVIEW DRAWING-----	6
PART LIST-----	8
HARDWARE LIST & TOOLS-----	10
ASSEMBLY-----	11
HOW TO USE-----	18
OPERATION AND ADJUSTMENTS-----	20
STORAGE-----	22
WARM UP-----	23
WARRANTY-----	24
FAX FORM-----	25

## SERVICE

### **IMPORTANT: FOR NORTH AMERICA ONLY**

**To request product service and order replacement parts, please call our customer service department at:  
1-844-641-7922**

Daily 8:00 AM-5:00 PM Pacific Standard Time,  
or email us at: [service@paradigmhw.com](mailto:service@paradigmhw.com)  
Please visit our website at [www.paradigmhw.com](http://www.paradigmhw.com).

**Please have the following information ready when requesting for service:**

Your name  
Phone number  
Model number  
Serial number  
Part number  
Proof of Purchase

**\*Before returning this product to the store please contact customer service at the contact number.**

Paradigm Health & Wellness, Inc.  
1189 Jellick Ave,  
City of Industry, CA 91748, USA

## IMPORTANT SAFETY INSTRUCTIONS

This inversion table was designed and built for optimum safety. However, certain precautions apply whenever you operate the exercise equipment. Be sure to read the entire manual before assembling and operating this equipment. When using an appliance, basic precautions should always be followed, including the following:

### **WARNING** - To reduce the risk of injury to persons:

1. Consult your physician or other health care professionals before using the inversion table.
2. Use this appliance only for its intended use as described in this manual.  
Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it is damaged, if it is not working properly, if it has been dropped or damaged. Return the appliance to a service center for examination and repair.
4. Do not use outdoors.
5. Do not exceed the maximum rated weight (load) and maximum rated height of the user.
6. For Household Use Only.
7. Always wear proper exercise apparel when using the equipment.
8. If any time you feel faint, light-headed or dizziness while operating the equipment, stop exercise immediately. You should also stop exercising if you are experiencing pain or pressure.
9. Only one person should use the equipment at a time.
10. Make sure your equipment is correctly assembled before you use it. Be sure all screws, nuts, and bolts are tightened prior to use.
11. Watch your body: come up slowly, dizziness after a session means you came up too fast. Wait a while after eating before using the inversion table. If you get nauseous, come up as soon as you feel queasy.
12. Always use this equipment on a clear and level surface. Do not use near water.
13. Close supervision is necessary when this inversion table is used by, on, or near children, invalids, or disabled persons.
14. Never drop or insert any object into any opening.
15. **WARNING:** ALWAYS HOLD ON TO THE SAFETY HANDLES AND GO BACK SLOWLY WHEN INVERTING. FAILURE TO COMPLY COULD RESULT IN SERIOUS BODILY INJURY.
16. **WARNING:** To reduce the risk of personal injury, read and understand all the instructions before using the inversion table.
17. **WARNING:** Risk of personal injury – Do not allow children to use this machine.
18. **WARNING:** Risk of personal injury – Keep children away from machine while in use.
19. **WARNING:** Risk of personal injury – Do not grab brake level for getting up, use handle bar instead.

## IMPORTANT SAFETY INSTRUCTIONS

20. **WARNING** - Risk of personal injury - Keep body parts, hair, loose clothing and jewelry clear of all moving parts.

**NOTE:** Maximum user weight for this product is 300 lbs (136 kgs.)  
Maximum Rated Height for this product is 6'6"/198cm.

**WARNING:** Before using this equipment you should consult with your personal physician to see if inversion equipment is appropriate for you. Do not use this equipment without your physician's approval. Do not use this equipment if you have any of the following conditions or ailments:

- Extreme obesity
- Glaucoma, retinal detachment or conjunctivitis
- Pregnancy
- Spinal injury, Cerebral Sclerosis, or acutely swollen joints
- Middle ear infection
- High blood pressure, Hypertension, Recent stroke or Transient is chemic attack
- Heart or circulatory disorders for which you are being treated.
- Hiatus hernia or Ventral hernia
- Bone weaknesses including Osteoporosis, Unhealed fractures, Modularly pins, or surgically implanted orthopedic supports.
- Use of anti-coagulants including Aspirin in high doses.

## SAVE THESE INSTRUCTIONS



**Correct:**  
Locking pin  
fully engaged



**Incorrect:**  
Locking pin not  
fully engaged

Always check to make sure that the ankle locking pin is fully engaged before each use. Make sure that the front and rear ankle clamps are secured tightly against your ankles to prevent from falling when the tables inverts.

**WARNING:** Failure to fully engage the locking pin could result in serious injury.

## LABEL PLACEMENT



### ⚠ WARNING

Maximum weight capacity is 300 lbs.

### ⚠ AVERTISSEMENT

Le poids maximum pour ce produit est 136 kgs.

### ⚠ WARNING

To avoid serious injury, hold on to handle bars and invert slowly.

### ⚠ AVERTISSEMENT

Pour éviter des blessures graves, bien tenir les poignées de sécurité et procéder à l'inversion lentement.

### ⚠ WARNING

Feet must be secured properly before use

### ⚠ AVERTISSEMENT

Les pieds doivent être proprement serrés avant utilisation


### ⚠ WARNING

THIS EQUIPMENT IS INTENDED FOR USE BY ADULTS AND CHILDREN 12 YEARS AND OLDER. POSSIBILITY OF SEVERE INJURY OR DEATH IF USED IMPROPERLY. PLEASE FOLLOW ALL DIRECTIONS BEFORE USE. KEEP PERSON UNDER THE AGE OF 12 AWAY! REPLACE LABELS IF THEY ARE DAMAGED, ILLEGIBLE, OR REMOVED. PLEASE REVIEW ALL WARNING AND INSTRUCTIONS BEFORE ASSEMBLY AND USAGE. ALL INSTRUCTIONS SHOULD BE FOLLOWED PRIOR TO ASSEMBLY AND USAGE.

### ⚠ AVERTISSEMENT


CET ÉQUIPEMENT EST DESTINÉ À ÊTRE UTILISÉ PAR DES ADULTES ET DES ENFANTS DE PLUS 12 ANS. TOUTE UTILISATION INCORRECTE PEUT OCCASIONNER DES BLESSURES GRAVES OU MORTELLES. SUIVRE LES INSTRUCTIONS D'UTILISATION. TENIR LES PERSONNES DE MOINS DE 12 ANS À L'ÉCART ! REMPLACEZ LES ÉTIQUETTES ENDOMMAGÉES, ILLISIBLES, OU MANQUANTES. VEUILLEZ LIRE ATTENTIVEMENT TOUTES LES INSTRUCTIONS ET MISES EN GARDES AVANT DE PROCÉDER À L'ASSEMBLAGE OU D'UTILISER L'APPAREIL. BIEN SUIVRE TOUTES LES INSTRUCTIONS AVANT L'UTILISATION OU L'ASSEMBLAGE.

## OVERVIEW DRAWING

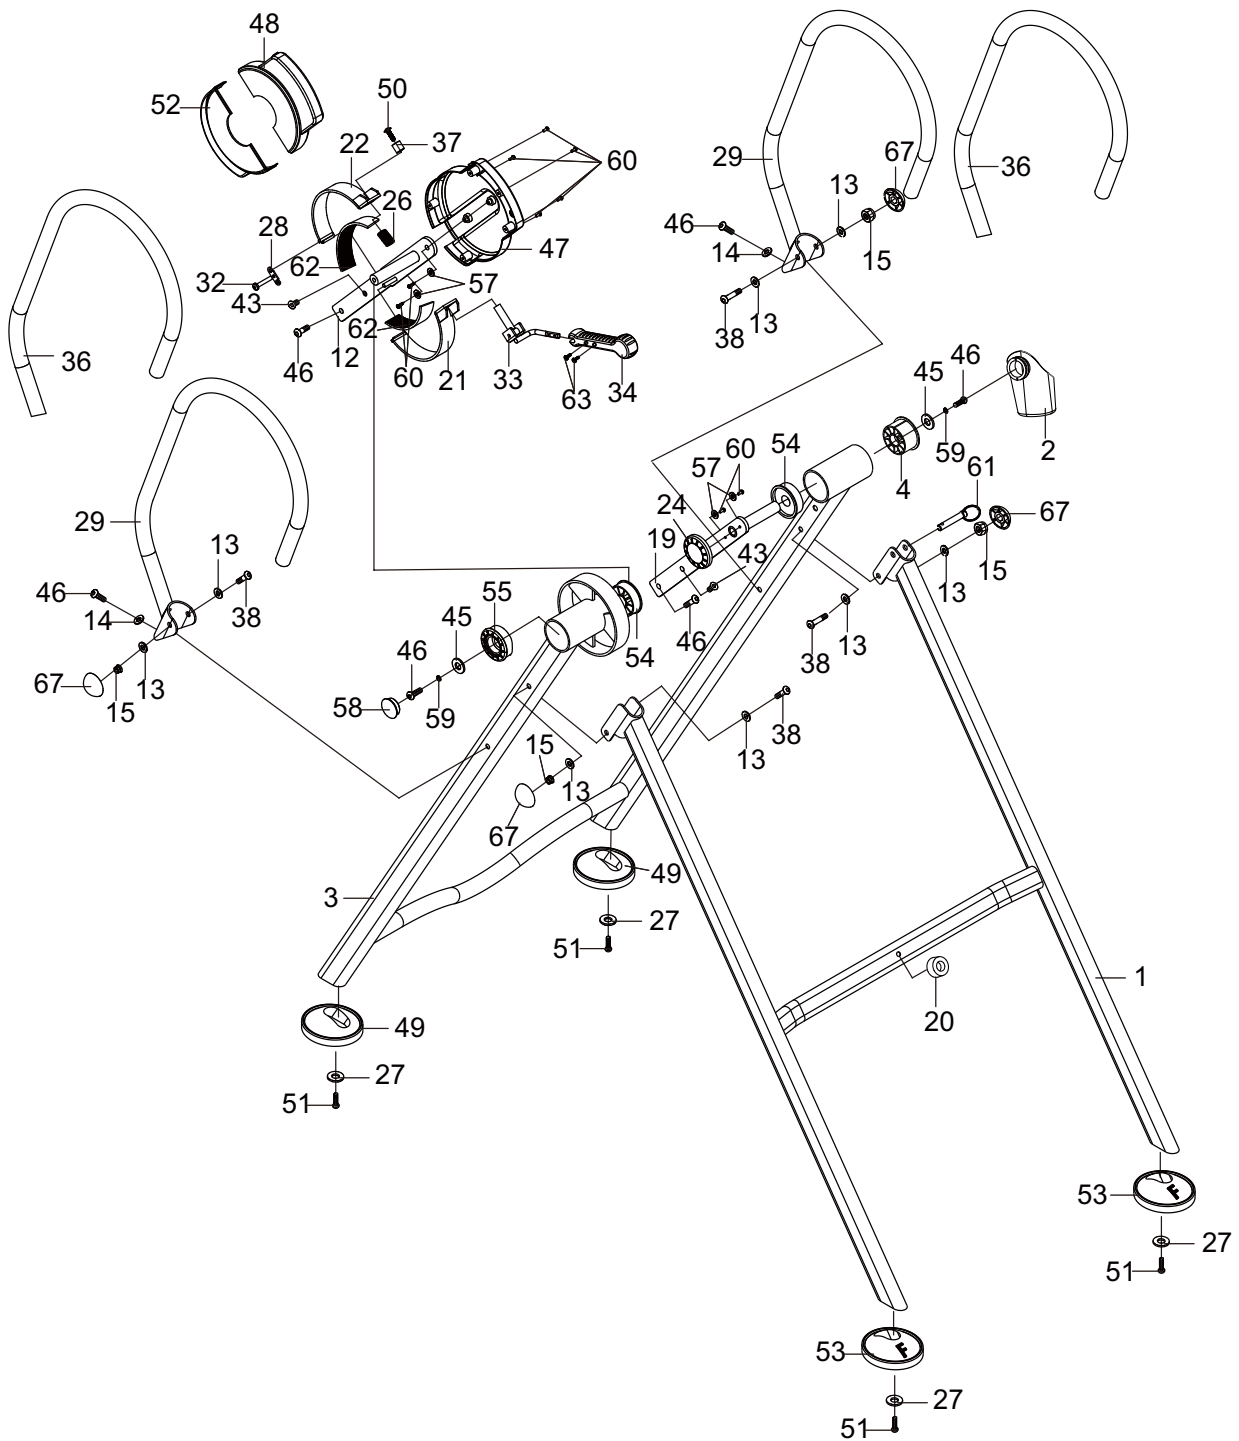



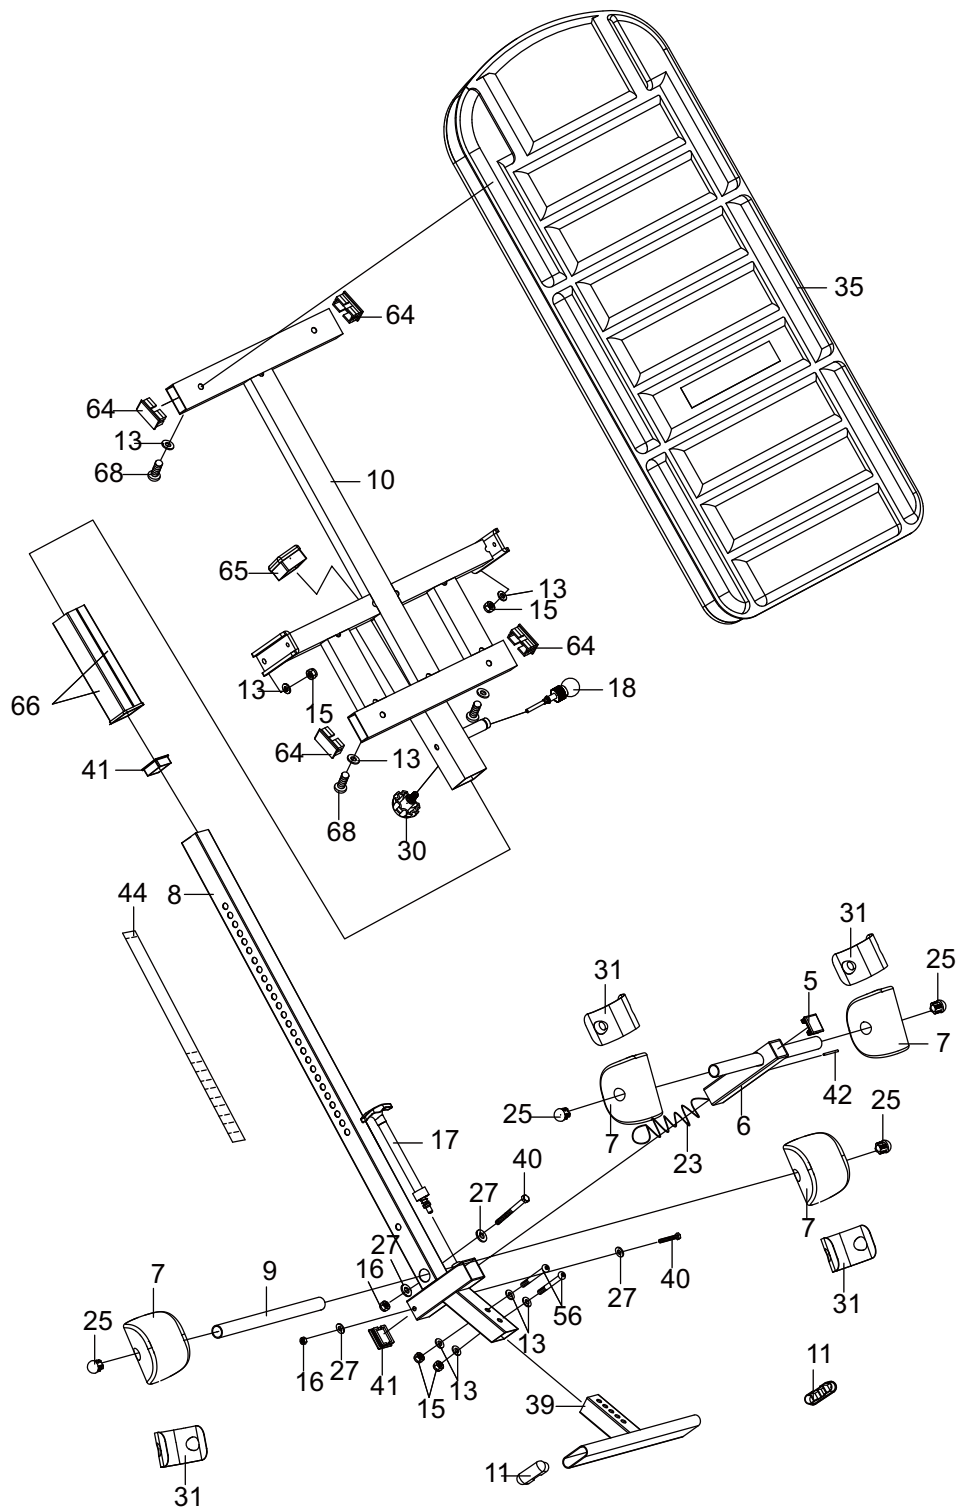

# OVERVIEW DRAWING




## PART LIST

No.	Description	Q'ty	No.	Description	Q'ty
1	Front Frame	1	29	Handlebar	2
2	Cup Holder	1	30	Knob Ø45x3/8"x19L	1
3	Rear Frame	1	31	Steel Bracket	4
4	Cup Holder Rotation Cap	1	32	Bolt M6x30	1
5	Rectangle End Cap  33.4x33.4xt2	1	33	Lock Mechanism	1
6	Front Rod	1	34	Lock Handle Plastic Bar	1
7	Rubber Heel Holder	4	35	Foam Bed	1
8	Adjustable Boom	1	36	Handlebar Foam Grip	2
9	Rear Rod	1	37	Metal Sleeve	1
10	Bed Frame	1	38	Bolt M8x45	4
11	Foot bar End Cap 20x60xt1.5	2	39	Foot Bar	1
12	Right Pivot Arm	1	40	Hex Bolt M6x47	1
13	Washer Ø8.5xØ20xt1.5	18	41	Square End Cap  38x38xt2	2
14	Curve Washer Ø8.5xØ16xt2.0	2	42	Spring Latch Ø4x32	1
15	Lock Nut M8 (Galvanize)	8	43	Bolt M8x12	2
16	Lock Nut M6	2	44	Height Scale	1
17	Spring Knob	1	45	Washer Ø8.5xØ24x2mm	2
18	Boom Spring Knob	1	46	Bolt M8x20	6
19	Left Pivot Arm	1	47	Brake Bracket	1
20	Rubber Pad	1	48	Upper Plastic Cover	1
21	Right Brake Pad I	1	49	Rear Foot Cap	2
22	Right Brake Pad II	1	50	Bolt M6x25	1
23	Spring Ø10xØ1x110Lx85N	1	51	Bolt M6x15	4
24	Rotor Cover	1	52	Lower Plastic Cover	1
25	Round End Cap Ø22x1.5	4	53	Front Foot Cap	2
26	Spring Ø13xt2x(230)	1	54	Pivot Arm Rotation Cap I Ø60xØ19.5x18	2
27	Washer Ø12xØ6.5x1.0	8	55	Pivot Arm Rotation Cap II Ø60xØ19.5x21	1
28	Fixed Plate	1	56	Bolt M8x50	2


## PART LIST

No.	Description	Q'ty	No.	Description	Q'ty
57	Washer Ø4.3xØ9xt0.3	4	63	Bolt M4x20	2
58	Round Cap	1	64	Rectangle End Cap  25x50xt1.5	4
59	Spring Washer Ø8.1xØ12.3x2.1	1	65	Upper Bed Frame End cap  50x50xt2	1
60	Screw ST3.5x10	9	66	Lower Bed Frame Bushing	2
61	Locking Pin	1	67	Cap ¢ 27x13.5	4
62	Brake Strap	2	68	Bolt M8x40	4


## HARDWARE LIST & TOOLS




(13) Washer  
10 PCS




(14) Curve Washer  
2 PCS




(15) Lock Nut  
6 PCS




(16) Lock Nut  
2 PCS



(27) Washer  
8 PCS




(38) Bolt  
2 PCS

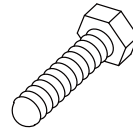


(40) Hex Bolt  
2 PCS




(43) Bolt  
2 PCS




(46) Bolt  
4 PCS




(51) Bolt  
4 PCS

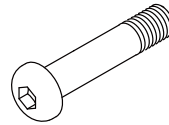


(56) Bolt  
2 PCS

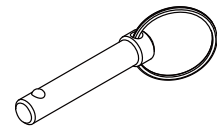


(61) Locking Pin  
1 PC




(63) Bolt  
2 PCS

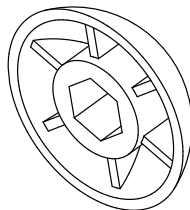


(67) Cap  
4 PCS

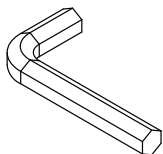


Allen Wrench #5  
1 PC

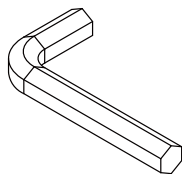

Allen Wrench #6  
1 PC

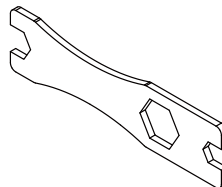

Hex Wrench  
2 PCS

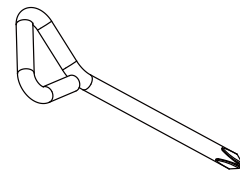


Phillips Screwdriver  
1 PC

## ASSEMBLY



The product weighs more than 44lbs / 20kgs and should be assembled and moved by two or more people.

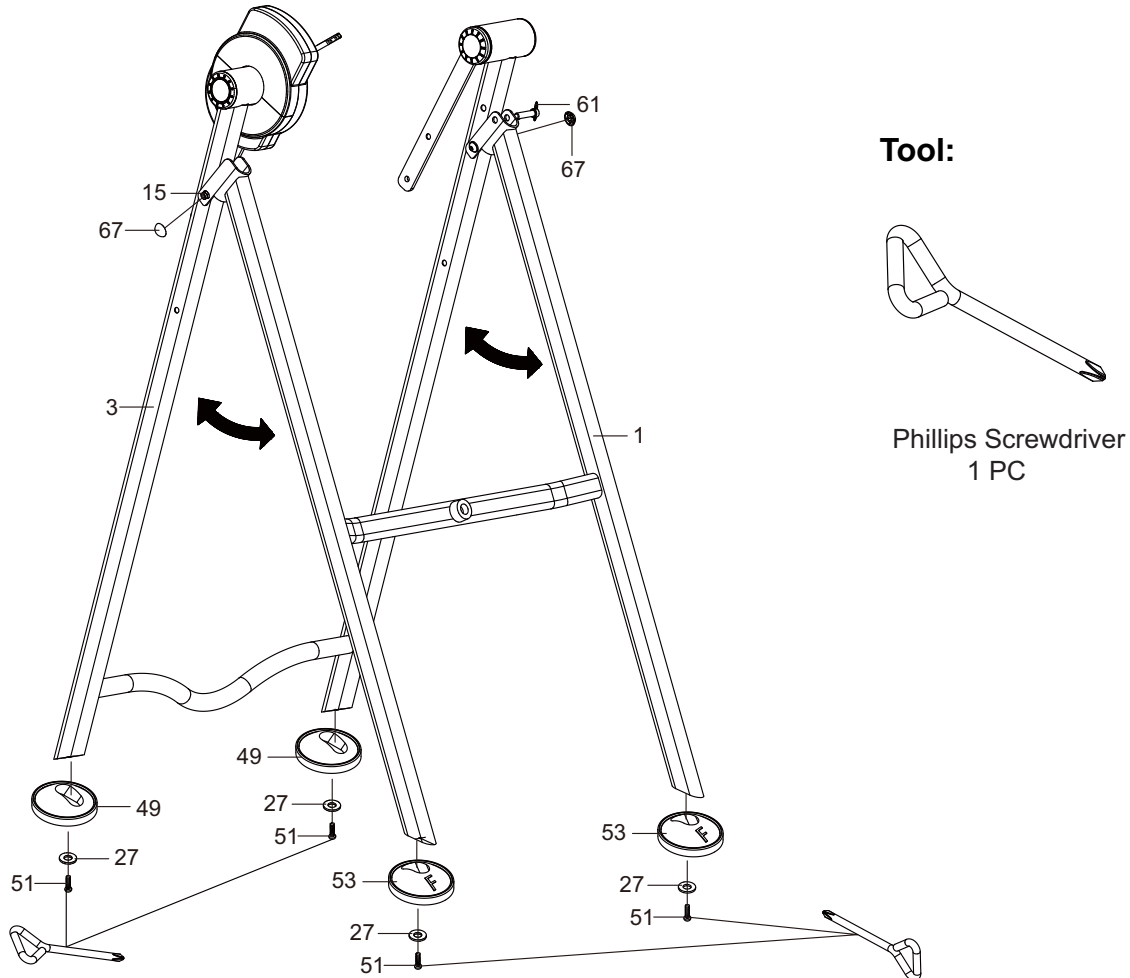


### Step 1.


Attach Front Foot Cap (53) and Rear Foot Cap (49) to the Feet of the Front Frame (1) and Rear Frame (3); tighten Bolts (51) and Washers (27) with the Phillips Screwdriver Provide.

Unfold the Frame fully; inset Locking Pin (61) into whole of the joint of the Front and Rear Frames (1,3). Attach the Cap (67) to the Lock Nut (15).


### Hardware:




(51) Bolt  
4 PCS



(27) Washer  
4 PCS

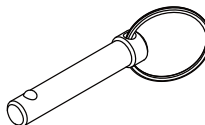


(61) Locking Pin  
1 PC

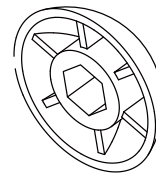


(67) Cap  
2 PCS


## ASSEMBLY

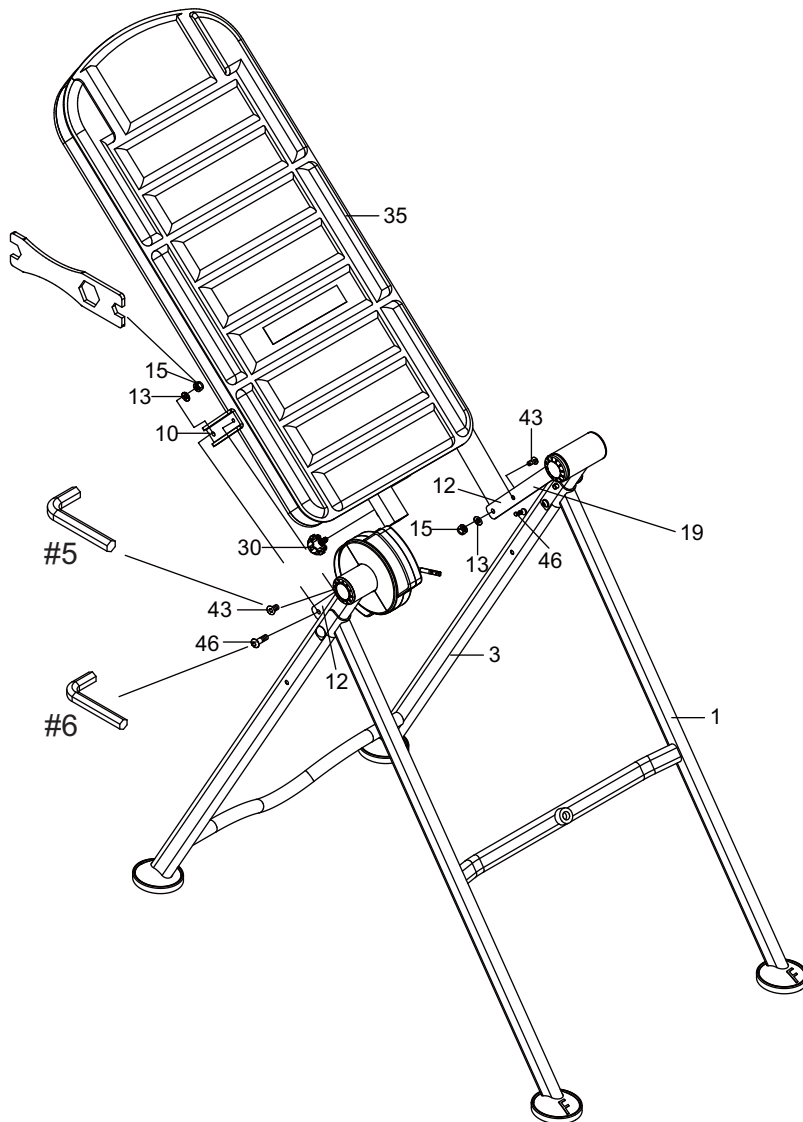


### Tool:

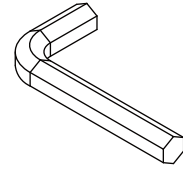

Allen Wrench #5  
1 PC

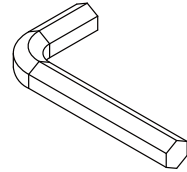

Allen Wrench #6  
1 PC

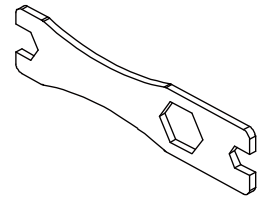

Hex Wrench  
2 PCS


### Step 2.

Attach the Bed Frame (10) onto the Right Pivot Arm (12) and Left Pivot Arm (19) by using two Lock Nuts (15), two Bolts (46) and two Washers (13);


Tighten Bolts (43) with #5 Allen Wrench provided.

Tighten Bolts (46) and Lock Nuts (15) with #6 Allen Wrench and Hex Wrench provided.  
Install the Knob (30) onto the Bed Frame (10).

### Hardware:




(13) Washer  
2 PCS



(15) Lock Nut  
2 PCS





(43) Bolt  
2 PCS




(46) Bolt  
2 PCS

# ASSEMBLY


## Tool:

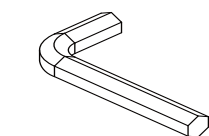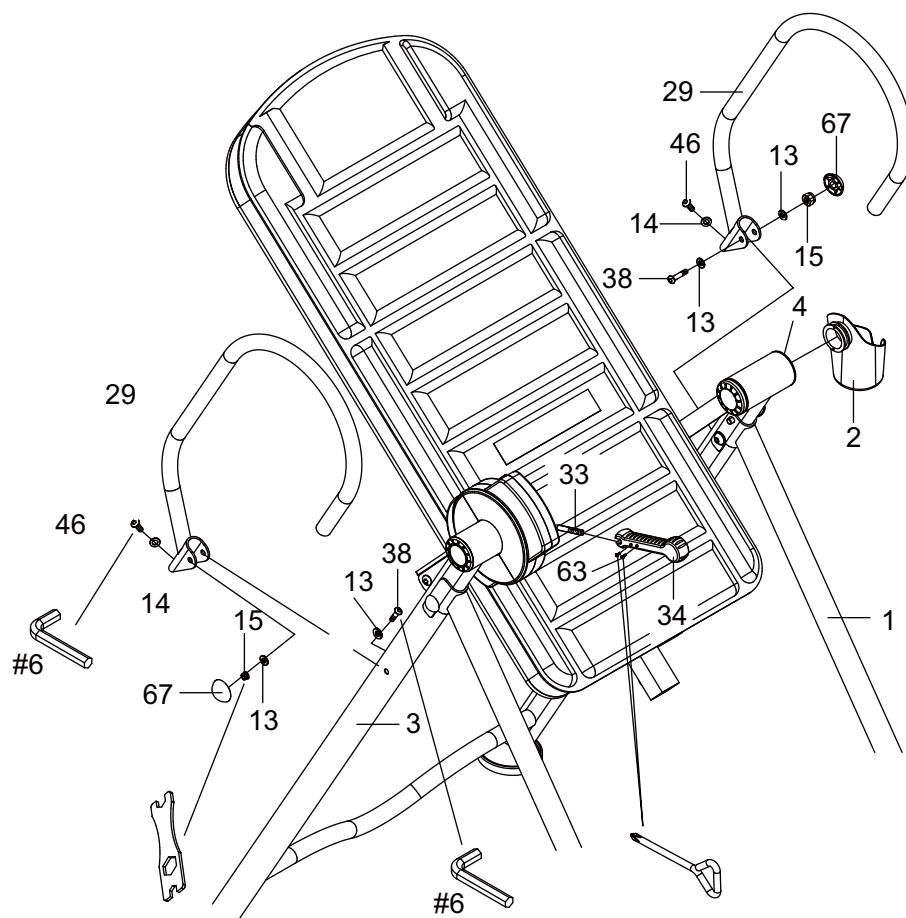


Allen Wrench #5  
1 PC

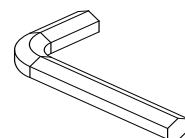

Allen Wrench #6  
1 PC

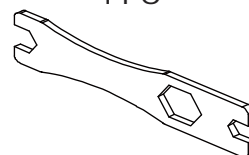

Hex Wrench  
2 PCS

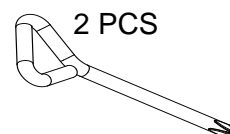

Phillips Screwdriver  
1 PC

## Step 3.

Attach both Handlebars (29) onto Rear Frame (3) with four Washers (13), two Curve Washer (14), two Lock Nuts (15), two Bolts (38) and two Bolts (46).

Tighten Bolts (46) with #6 Allen Wrench provided.

Tighten Bolts (38) and Lock Nuts (15) with #6 Allen Wrench and Hex Wrench provided, attach the Caps (67) to the Lock Nuts (15).

Install the Cup Holder (2) to the Cup Holder Rotation Cap (4).

Install the Lock Handle Plastic Bar (34) onto the Lock Mechanism (33) and secure with Bolts (63). Tighten the Bolts (63) with the Phillips Screwdriver provided.


## Hardware:




(13) Washer  
4 PCS




(14) Curve Washer  
2 PCS




(15) Lock Nut  
2 PCS




(38) Bolt  
2 PCS



(46) Bolt  
2 PCS




(63) Bolt  
2 PCS

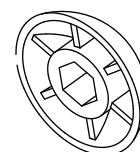

(67) Cap  
2 PCS

## ASSEMBLY

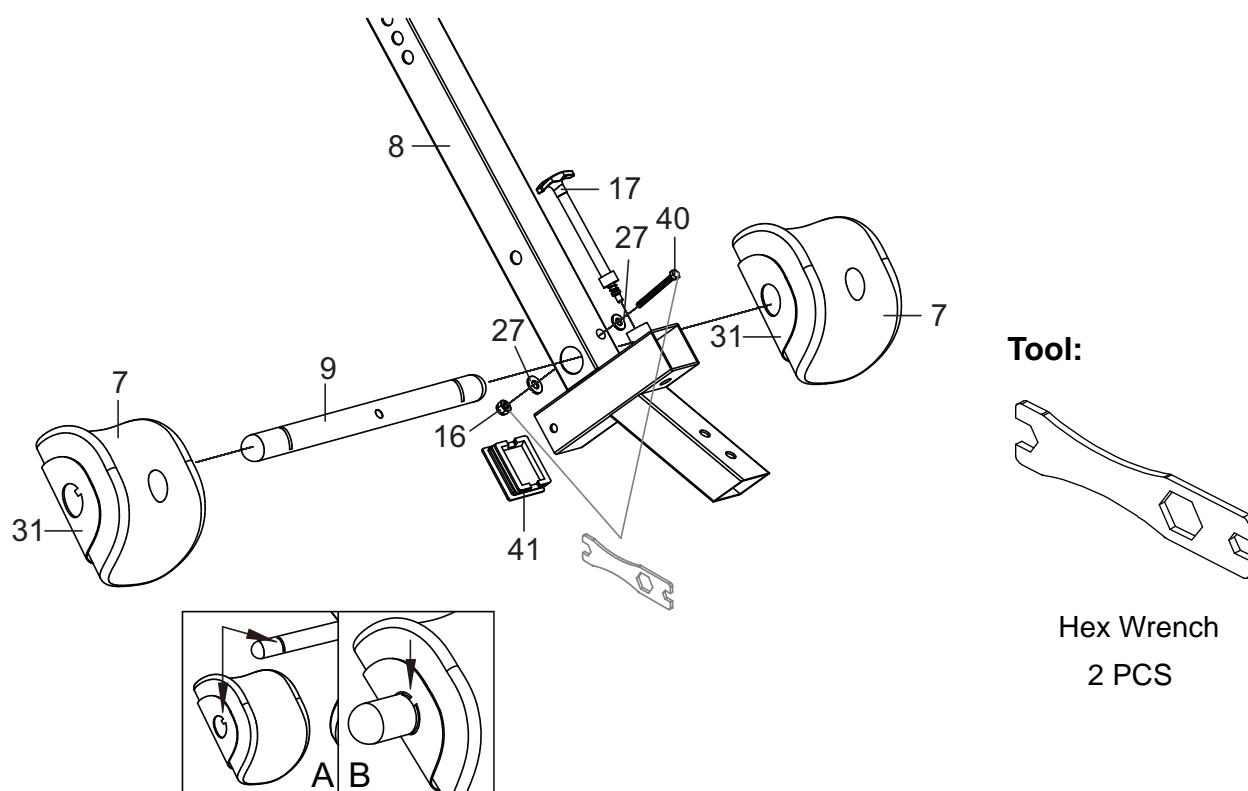


### Step 4.

Remove the Square End Cap (41) on the back of square bracket of the Adjustable Boom (8); Slide the Rear Rod (9) through the large round hole on the side of Adjustable Boom (8), and secure the Rear Rod (9) on the Adjustable Boom (8) with one Hex Bolt (40), two Washers (27) and one Lock Nut (16).

Tighten the Bolt, Washers and the Lock Nut with two Hex Wrenches provided.

Unite one Steel Bracket (31) and one Rubber Heel Holder (7); slide them onto one end of the Rear Rod (9) until the lock tooth is wedged into the slot in the Rear Rod (9). Note: Make sure the lock teeth are wedged into the slots in the Rear Rod (9) as shown in small figures A and B before use. Attach the Spring Knob (17) onto the Adjustable Boom (8).


### Hardware:

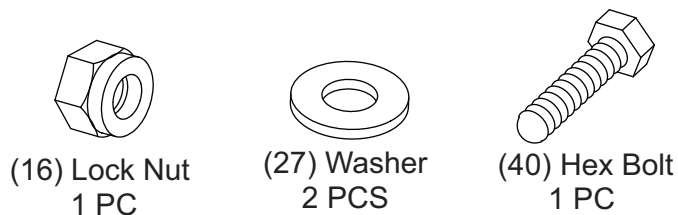




## ASSEMBLY


### Tool:

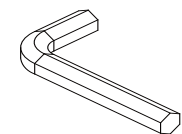

Allen Wrench #6  
1 PC

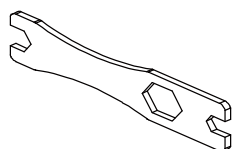

Hex Wrench  
2 PCS

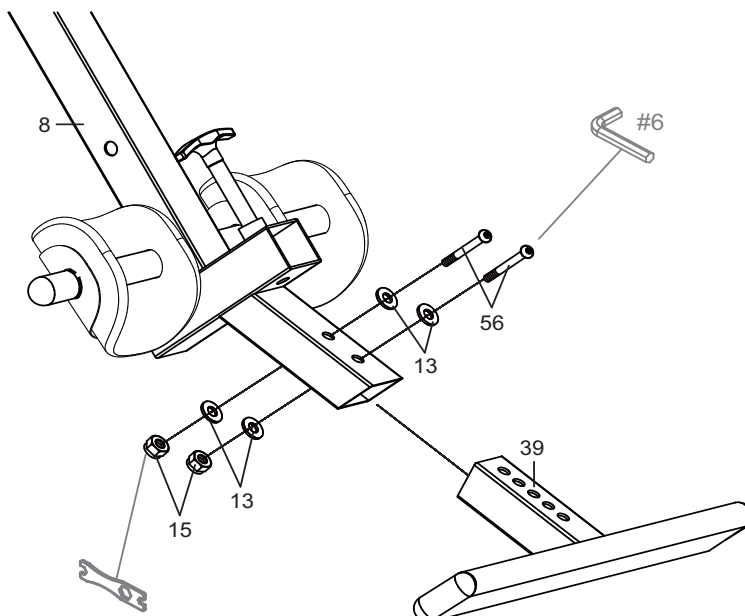


### Hardware:



(13) Washer  
4 PCS



(15) Lock Nut  
2 PCS

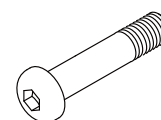


(56) Bolt  
2 PCS

### Step 5.


Slide the Foot Bar (39) into the bottom of the Adjustable Boom (8) and align two of the holes on the Foot Bar (39) with two holes on the Adjustable Boom (8). Secure the Foot Bar (39) in place using two Bolts (56), two Lock Nuts (15) and four Washers (13).

Tighten Bolts and Lock Nuts with the #6 Allen Wrench and Hex Wrench provided.

### Step 6.

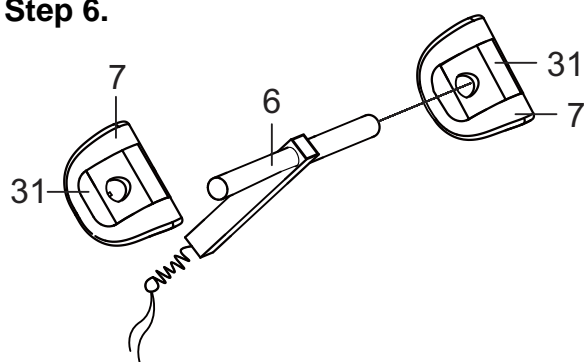


Install Steel Bracket (31) and one Rubber Heel Holder (7) onto the Front Rod (6).

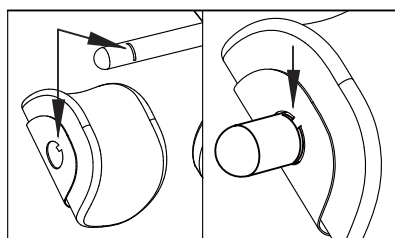


**NOTE:** Make sure the lock teeth are wedged into the slots in the Front Rod (6) to lock the Steel Brackets (31) in place before use.

## ASSEMBLY


### Step 7.

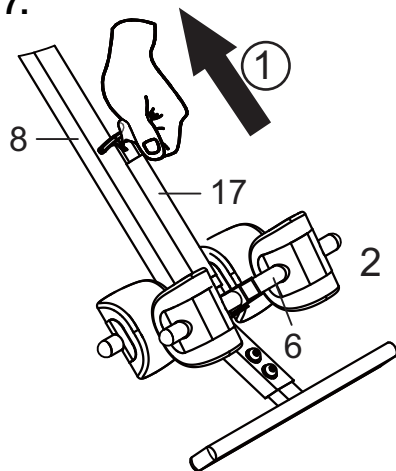

Pull up Spring Knob (17) and insert the Front Rod (6) into the Adjustable Boom (8).

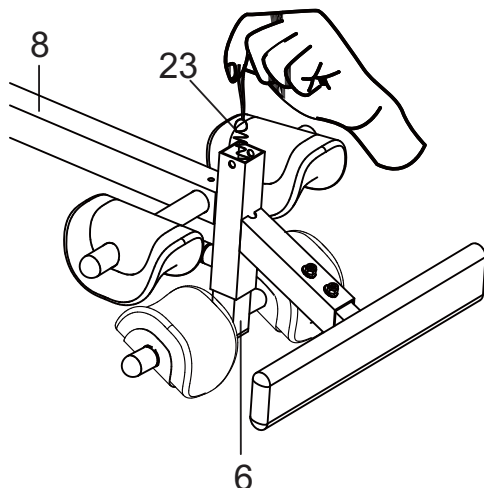

Insert the Front Rod (6) all the way in, pull the plastic string through.

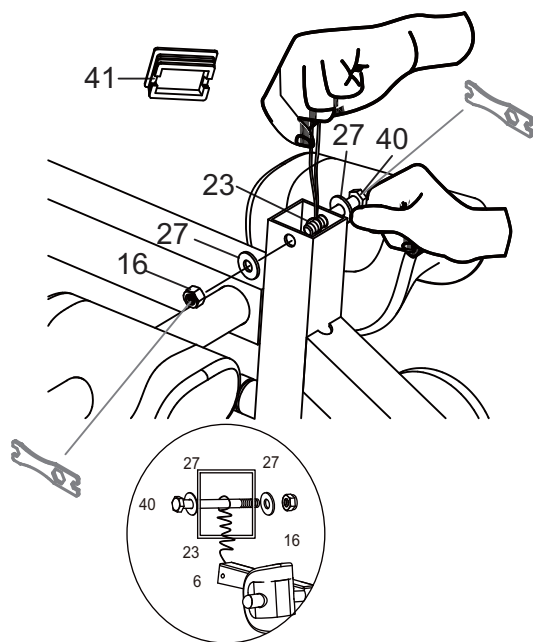

Pull the string as you insert the Hex Bolt (40) with a Washer (27) through the Spring (23). Secure with a Washer (27) and a Lock Nut (16).


Tight the Bolt (40), Washers (27) and the Lock Nut (16) with two Hex Wrenches provided.

Attach the Square End Cap (41) onto the Adjustable Boom (8).


### Hardware:



(16) Lock Nut  
1 PC




(27) Washer  
2 PCS

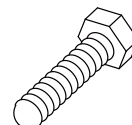

(40) Hex Bolt  
1 PC

## ASSEMBLY

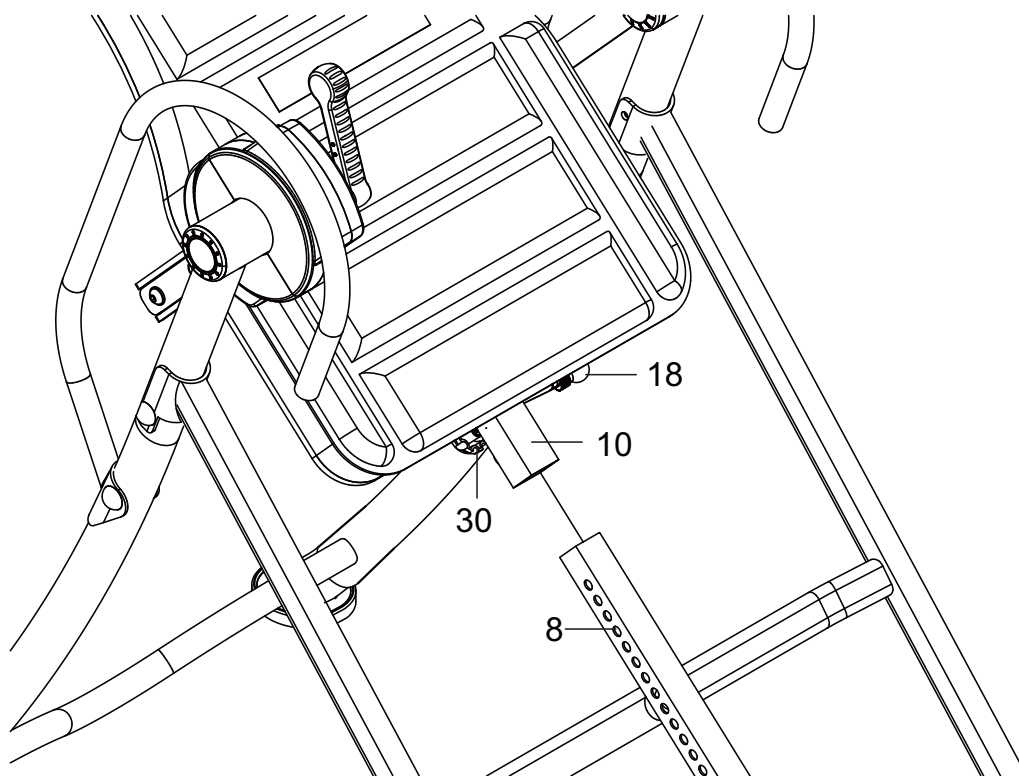

### Step 8.

Loosen the Knob (30). Pull the Boom Spring Knob (18) and slide the Adjustable Boom (8) in. Slide the Adjustable Boom (8) up to be desired height. Release the Boom Spring Knob (18) and make sure it “pops” into the hole. Tighten the Knob (30) for additional safety.


## HOW TO USE

### Set the Adjustable Boom to your height

Turn Knob counter-clockwise to loosen the Adjustable Boom.

Pull Boom Spring Knob as you adjust the Adjustable Boom to desired height.

Turn Knob clockwise to de-rattle the Adjustable Boom.

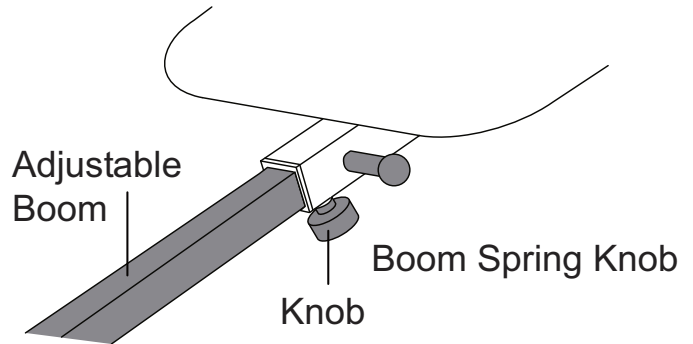


*Note: When you invert, readjust the height adjustment*


*Boom up if the bed doesn't rotate.*

*Adjust the height adjustment boom down if the bed rotates too fast.*

### Mounting the table

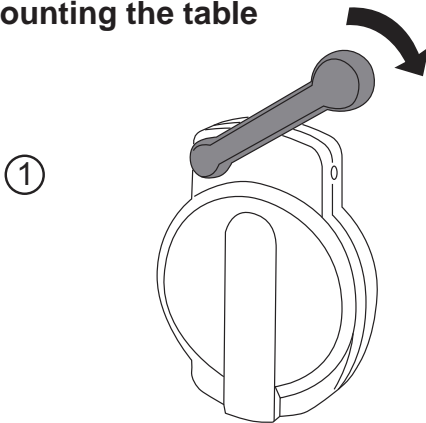


Make sure the Lever is at LOCK position.

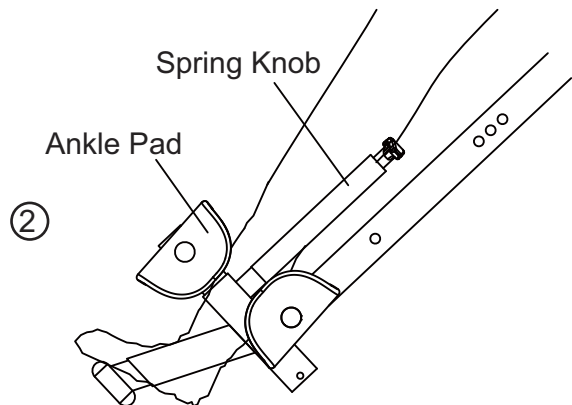


Pull the Spring Knob to unlock, allow the Ankle Pads to press against your ankles. Make sure the Spring Knob locks into the hole.

*Wearing shoes will help ankles stay more secure.*

### Dismounting the table

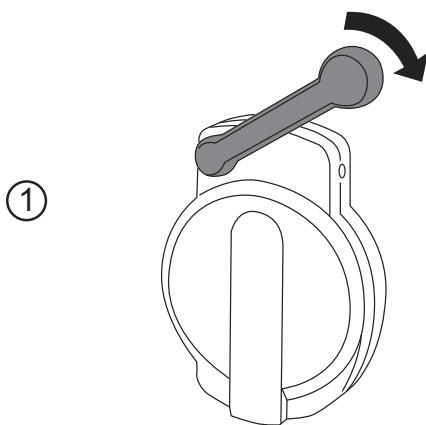


Make sure the Lever is at LOCK position.

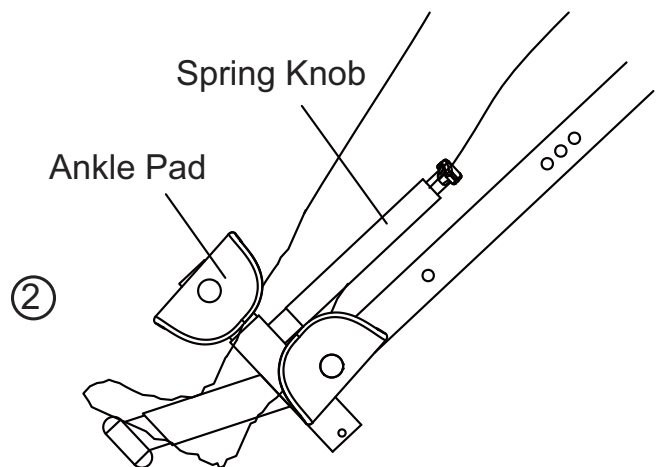


Pull the Spring Knob.  
Press Ankle Pads forward.

## HOW TO USE

### Get to inversion

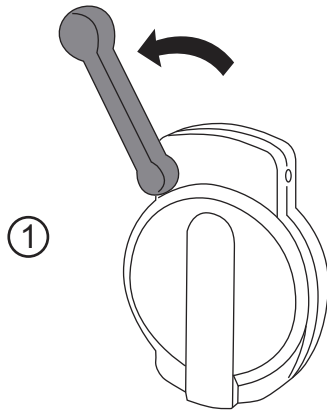


Push Lever to UNLOCK position.  
With both hands on handles, slowly lie down.

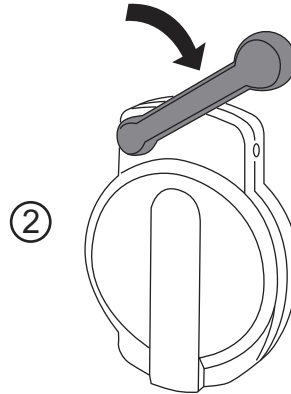


When you're at desired angle, pull Lever forward to LOCK position to lock the bed.

### Get to vertical inversion

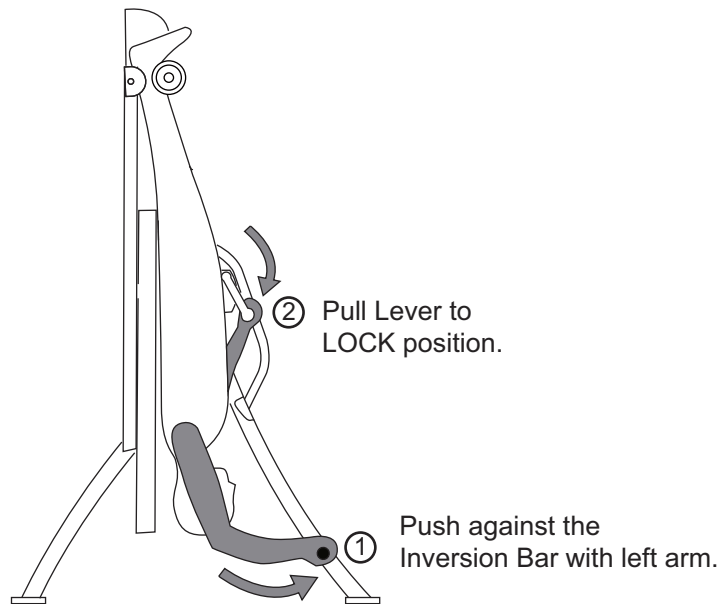

### Calibrating the iControl Disk Brake

The brake might become loose after long period of time of use. To calibrate, insert the Philips Screwdriver into the hole as indicated on the diagram, turn the calibrating, turn the calibrating inside clockwise no more than  $\frac{1}{4}$  turn.

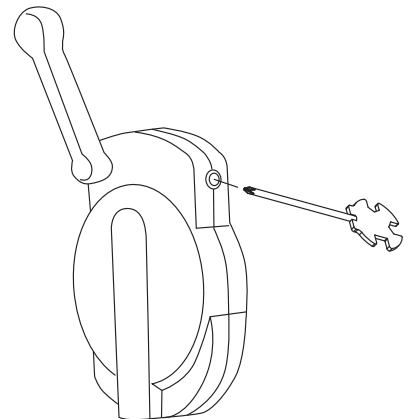

## OPERATION AND ADJUSTMENT

### The Handlebars

For added convenience and safety, a set of Handlebars has been added to the inversion table. These Handlebars are located at the top of the Rear Frames. The Handlebars are there to help you return to the upright position from any degree of inversion. If you wish to return to the upright position, and the bed is moving too slowly, or not moving at all, simply grab the Handlebars and pull on them until you return to the upright position.

**NOTE:** The inversion table should always return to the upright position when you move your hands below your waist. If it does not, the inversion table is probably not adjusted correctly to your height.

- ★ Always hold on to the handlebars and go back slowly. Failure to comply could result in serious physical injury.

### GENERAL PRECAUTIONS

1. It is recommended that someone be with you while you are using this inversion table for the first few times.
2. Make sure that the Rubber Heel Holders and Front Heel Holders are holding your feet securely.
3. Make sure that the Adjustable Boom is properly set to your height.
4. Make sure that the Adjustable Boom is held securely by both the Boom Spring Knob and the Knob.
5. Make sure that there is enough room for the bed to rotate completely.


### BALANCING THE INVERSION TABLE

The inversion table is like a very sensitively balanced fulcrum. It responds to very slight changes in weight distribution. So, it is very important to make sure that the height is adjusted properly. To do this, mount the inversion table, lock your ankles into the heel holders, and lie back with your hands at your sides. Slowly place your hands across your chest. While in this position, your head should still be above your feet. If your feet are above your head, dismount and adjust the height again.

## OPERATION AND ADJUSTMENT

### USING THE INVERSION TABLE


1. Start by lying fully back on the bed with your hands at your side, or resting on your thighs.
2. Keeping your hands close to your body begins to raise your arms slowly allowing the table to rotate backward. Stop, or lower your arms to control the downward rotation of the table.
3. Raise your arms until they are over your head. At this point, the inversion table will be as far back as it can go.
4. As you get more comfortable with the use, rock the bed slowly by moving your arms up and down slowly.
5. It is recommended that the inversion table be used for five or ten minutes each morning, and again each evening.
6. Return to the upright position by slowly moving your hands back down to your thighs.

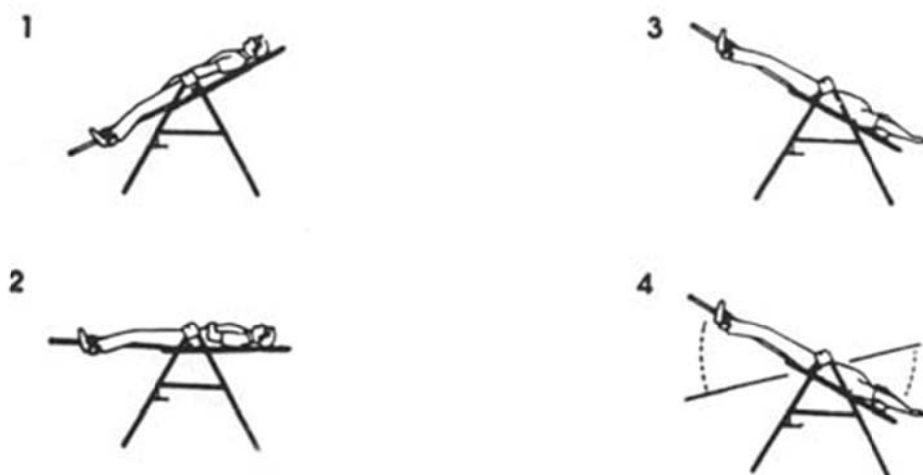

### SUGGESTIONS FOR USE

1. Begin slowly: invert only 15~20 degrees to begin with. Stay inverted only as long as you are comfortable. Return upright slowly.
2. Make gradual changes: increase the angle only if it is comfortable. Increase angle only a few degrees at a time. Increase the time of use 1~2 minutes up to ten over a period of weeks. Add stretching and light exercise only after you are comfortable with inversion.
3. Watch your body. Come up slowly, dizziness after a session means you came up too fast. Wait a while after eating before using table. If you get nauseous, do not fight it, come up as soon as you feel queasy.
4. Keep moving: movement while inverted encourages blood, circulation.  
Movement may be accomplished by either rhythmic traction or light exercise. Do not exercise strenuously while inverted, limit partial inversion without movement to one or two minutes. Limit full inversion with no movement to only a few seconds.
5. Invert regularly: we recommend two or three times a day depending upon your current condition. Try to schedule it for the same time each day.

## STORAGE

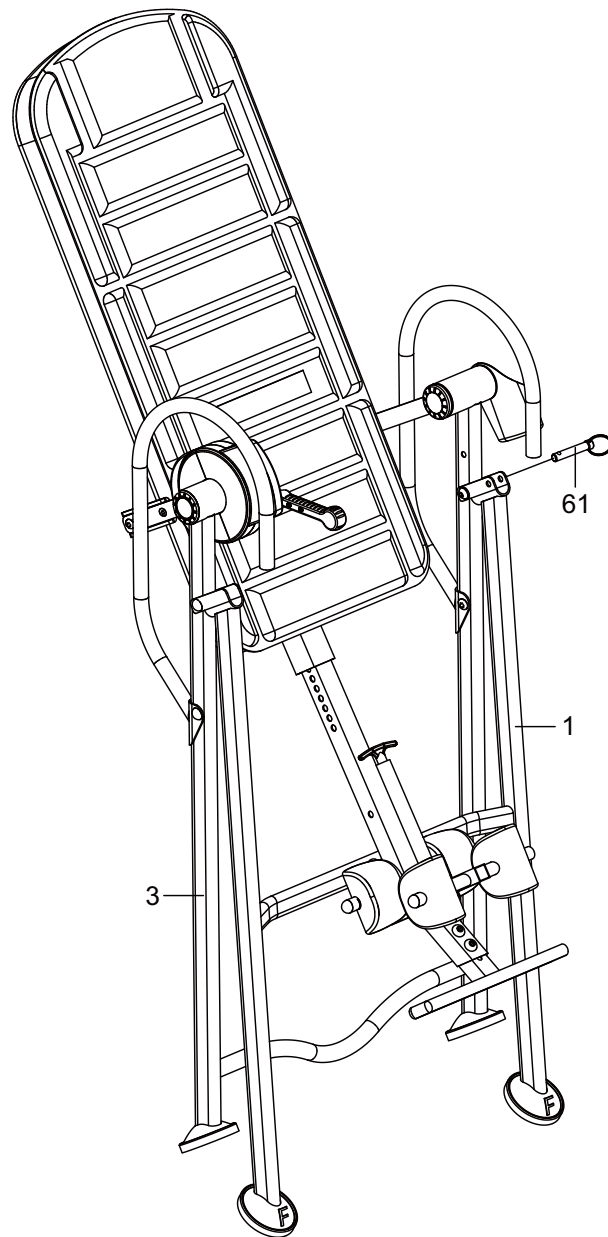

Pull out the Locking Pin (61), and then fold the Front Frame (1) and the Rear Frame (3)



## WARM UP

### Quadriceps Stretch

With one hand against a wall for balance, reach behind you and pull your right foot up. Bring your heel as close to your buttocks as possible. Hold for 15 counts and repeat with left foot up.



### Inner Thigh Stretch

Sit with the soles of your feet together with your knees pointing outward. Pull your feet as close into your groin as possible.

Gently push your knees towards the floor. Hold for 10 counts.



### Toe Touches

Slowly bend forward from your waist, letting your back and shoulders relax as you stretch toward your toes. Reach down as far as you can and hold for 15 counts.



### Hamstring Stretches

Sit with your right leg extended. Rest the sole of your left foot against your right inner thigh. Stretch toward your toe as far as possible. Hold for 15 counts. Relax and then repeat with left leg extended.



## WARRANTY

### **MANUFACTURER'S LIMITED WARRANTY**

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with Paradigm's Owner's Manual. Paradigm's obligation under this warranty applies to the following:

<b><u>COMPONENT</u></b>	<b><u>LENGTH OF WARRANTY</u></b>
Structural Frame	1 year
All Other Components	90 days

#### **Exclusions from Warranty Coverage:**

Paradigm does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by Paradigm's installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
5. Any act of Nature (such as fire, flooding, snow, ice, hurricane, earthquake, lightning or other natural disaster), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to, among other things, flake, chalk, accumulate dirt or stains.
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

**Paradigm, using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.**

#### Ordering Replacement Parts

Replacement parts can be ordered by calling or emailing our customer service department:

**1-844-641-7922**

Daily 8:00 AM - 5:00 PM (PST).

**service@paradigmhw.com**

When ordering replacement parts please have the following information ready:

1. **Owner's Manual**
2. **Model Number**
3. **Description of Parts**
4. **Part Number**
5. **Date of Purchase**

## FAX FORM

### Paradigm Health & Wellness, Inc.

#### PARTS REQUEST FAX FORM

Please fax this form to (1-626-810-2166)

OR YOU CAN EMAIL CUSTOMER SERVICE REQUESTS TO  
**service@paradigmhw.com**

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

TELEPHONE: (Day) \_\_\_\_\_

(Night) \_\_\_\_\_

(Email Address) \_\_\_\_\_

SERIAL#: \_\_\_\_\_

MODEL#: \_\_\_\_\_

PURCHASE DATE: \_\_\_\_\_

PURCHASE FROM: \_\_\_\_\_

PART #	DESCRIPTION	QTY

***"YOUR ORDER WILL BE PROCESSED WITHIN 3 BUSINESS DAYS"***

#### OFFICIAL USE ONLY

SHIP DATE: \_\_\_\_\_

TRK #: \_\_\_\_\_

BACK ORDER: \_\_\_\_\_