


FITHESS PLAYGROUND *ITEM NO: 8103*

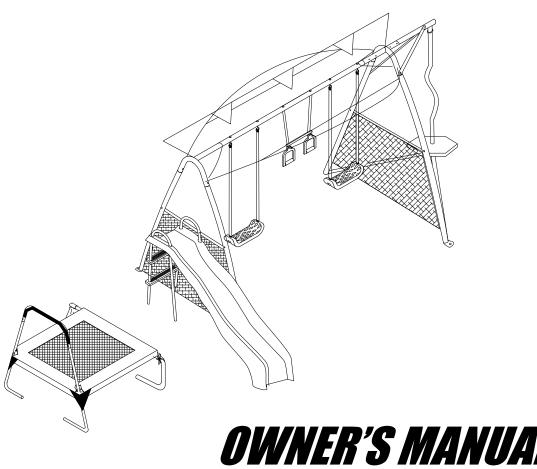

OWNER'S MANUAL

CAUTION: This unit is designed to be used safely by up to 6 children between the ages of 3 years to 8 years old with a maximum weight of 80 pounds (36.3kgs) each, simultaneously, not to exceed a combined weight of 480 pounds (218kgs).

The specifications of this product may vary from this photo and are subject to change without notice.

IRONKIDS® and the "K-DOT" logo are registered trademarks of World Triathlon Corporation. Official Product of IRONKIDS. Used here by permission. For more brand information please visit www.ironkids.com

IMPORTANT: FOR NORTH AMERICA ONLY

To request product service and order replacement parts, please call our customer service department at:

1-844-641-7922

Daily 8:00 AM-5:00 PM Pacific Standard Time,

or email us at: **service@paradigmhw.com**

Please visit our website at www.paradigmhw.com.

Please have the following information ready when requesting for service:

Your name

Phone number

Model number

Serial number

Part number

Proof of Purchase

*Before returning this product to the store please contact customer service at the contact number.

Paradigm Health & Wellness, Inc. 1189 Jellick Ave. City of Industry, CA 91748, USA

TABLE OF CONTENTS

Warranty	- 3
Important Labels	- 4
Important Safety Precautions	- 5
Tools Required for Assembly	6
Hardware for Assembly	. 7
Parts Numbers and Illustrations	11
Overview Drawing	- 22
Assembly Instructions	- 23
Ground Anchor Installation	42
Parts Request Form	45

MANUFACTURER'S LIMITED WARRANTY (IRONKIDS FITNESS PLAYGOUND)

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with Paradigm's Owner's Manual. Paradigm's obligation under this warranty applies to the following:

COMPONENT LENGTH OF WARRANTY

Structural Frame Life time For Home Use Only

All Other Components 180 days For Home Use Only

Exclusions from Warranty Coverage:

Paradigm does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

- 1. Improper installation and/or failure to abide by Paradigm's installation guidelines;
- 2. Use of this product beyond normal home use, or in an application for which it was not designed;
- 3. Cosmetic items such as scratches, dents or discolorations;
- 4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
- 5. Any act of Nature (such as fire, flooding, snow, ice, hurricane, earthquake, lightning or other natural disaster), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
- 6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to, among other things, flake, chalk, accumulate dirt or stains.
- 7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

Paradigm, using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

Ordering Replacement Parts

Replacement parts can be ordered by calling or emailing our customer service department:

1-844-641-7922


Daily 8:00 AM - 5:00 PM (PST).

service@paradigmhw.com

When ordering replacement parts please have the following information ready:

- 1. Owner's Manual
- 2. Model Number
- 3. Description of Parts
- 4. Part Number
- 5. Date of Purchase

IMPORTANT LABELS

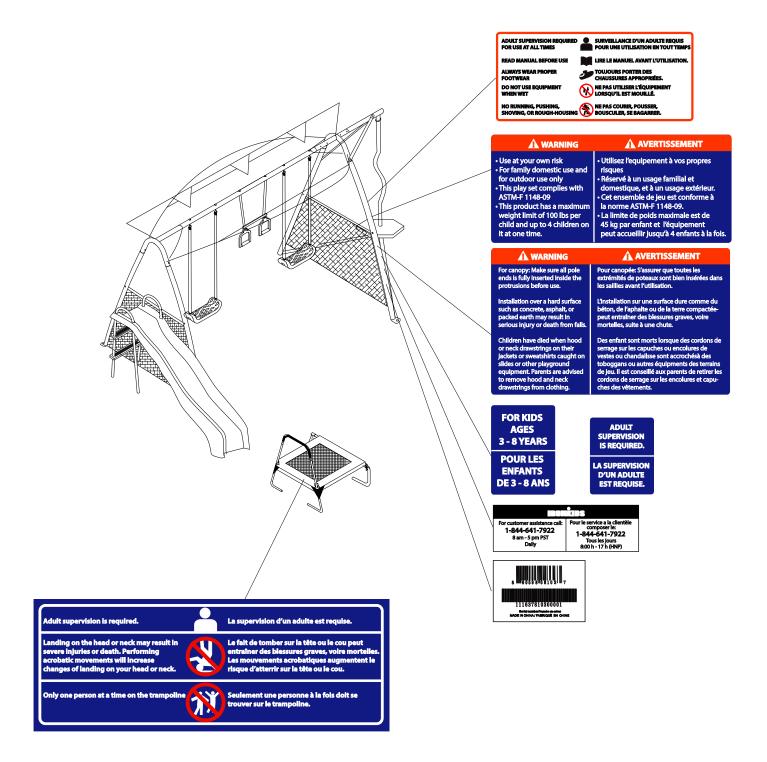

IMPORTANT SAFETY PRECAUTIONS

Read all instructions carefully before assembling operating this product. Retain this owner's manual and keep the original purchase receipt for future reference.

- 1. Before you assemble the Fitness Playground, find level ground not less than 6 feet from any structure or obstruction to the Fitness Playground. Your Fitness Playground must have clearance on all sides.
- 2. To prevent serious injury, do not allow children to play on the Fitness Playground until it is completely installed.
- 3. Do not install the Fitness Playground over concrete, packed dirt, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the user.
- 4. Only adults should assemble or disassemble this Fitness Playground.
- 5. This product must be anchored.
- Adult supervision of children is required at all times when on or around this Fitness Playground. Never leave children unattended.
- 7. Do not swing too high or at an angle.
- 8. Do not hang on or climb from structural members of the Fitness Playground.
- Do not exceed the intended weight limit or maximum number of users for the Fitness Playground.
- 10. This product is intended to be used by children between the ages of 3-8 years old.
- 11. Be sure to observe your children and insure that they have the strength and skills to enjoy all the rides safely before use on their own.
- 12. Do not allow children to walk close to, behind, or in front of moving items.
- 13. Do not allow children to twist the chains on the swing or loop them over the top bar. This may reduce the strength of the chain.
- 14. Teach and instruct children not to swing empty seats.
- 15. Instruct children how to sit in the center of the seats and swing with their full weight on the seat.
- 16. Warn children not to use the equipment in any manner other than intended.
- 17. Warn children not to get off the rides while in motion.
- 18. Warn children to dress appropriately. Loose fitting clothing is potentially hazardous when using the Fitness Playground.
- 19. Equipment may be slippery when wet. Do not allow children to use the equipment when wet.
- 20. Parents should regularly check openings and surfaces, such as slides, for items that may be hazardous.
- 21. Parents should check swing chains to insure they are secure and can not be looped back on themselves.
- 22. Do not place any part of the body near moving parts.
- 23. Never slide head first down the slide.
- 24. Ensure that all swings and chains are secured at both ends.
- 25. Never attach any materials that are not specifically designed for use with this swing set, such as jump ropes, pet leashes, rope or cords and other chains as these pose a potential strangulation hazard.
- 26. Children must be supervised at all times. No playground is safe without adult supervision.
- 27. When using the trampoline, do not perform flips, as this will increase your chances of landing on your head or neck. No more than one person at a time on the trampoline. Use trampoline only with adult supervision.

Play Ground Rules


- 1. Do not use equipment when wet.
- 2. No running, pushing, shoving, or roughhousing.
- 3. Do not use play equipment before reading manual.
- 4. Always wear proper footwear.

CARE AND MAINTENANCE

Check all nuts and bolts by monthly during the usage season for tightness and tighten as required. It is particularly important that all nuts and bolts are checked prior to the first use each season.

TOOLS REQUIRED FOR ASSEMBLY

Please prepare the following tools prior to assemble this equipment.

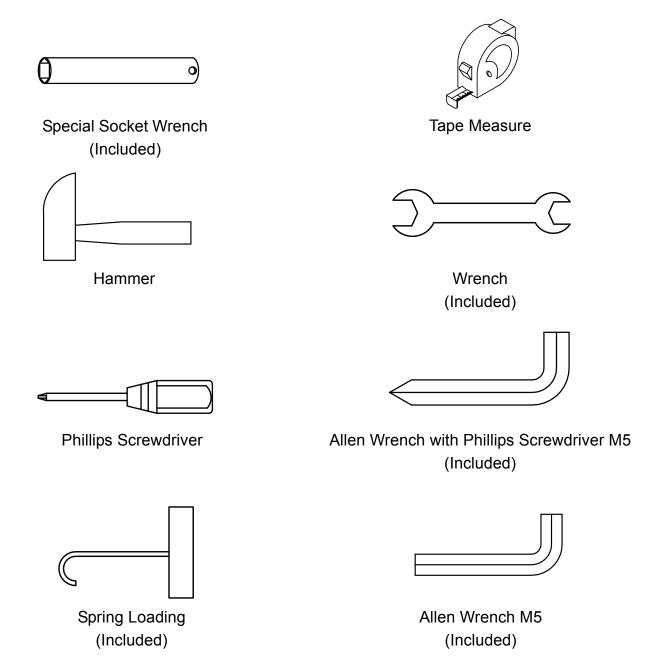

HARDWARE FOR ASSEMBLY


Hardware used for main frame assembly

(Aa1)
Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x50 Sleeve Nut 4 SETS
(Aa2)
Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x50 Sleeve Nut 8 SETS
(Aa3)
M6x15 Bolt Set (Preassembled) 2 SETS
(Aa4)


M6x60 Bolt Set (Preassembled) 8 SETS

Hardware used for playground roundabout assembly

(Da1)
Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x50 Sleeve Nut 2 SETS
(Da2)
Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x52 Sleeve Nut 2 SETS
(Da3)
Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x56 Sleeve Nut 2 SETS
(Da4)
Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x52 Sleeve Nut 5 SETS
(Da5)
Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x50 Sleeve Nut 2 SETS
(Da6)
Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x38 Sleeve Nut 2 SETS

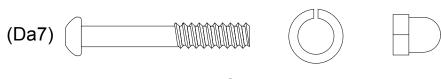

M6x40 Bolt Set (Preassembled) 4 SETS

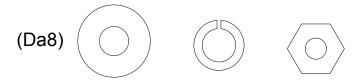

Washer & Nut Set (Preassembled) Ø16xØ8x1.5 Washer M8 Nut 1 SET

Hardware used for trampoline assembly



Binder Post & Bolt Set (Preassembled)

M6x12 Bolt

Ø8x52 Sleeve Nut

2 SETS



Binder Post & Bolt Set (Preassembled)

M6x12 Bolt

Ø8x26 Sleeve Nut

2 SETS



M6x32 Bolt Set (Preassembled) 2 SETS

Hardware used for slide assembly

(Za1)		
	M6x36 Bolt Set (Pre 4 SETS	
(Za2)		
	M6x42 Bolt Set	4 SETS

(Za3)

Binder Post & Bolt Set (Preassembled)

M6x12 Bolt

Ø8x24 Sleeve Nut

10 SETS

PARTS NUMBERS AND ILLUSTRATIONS

Parts used for main frame assembly

A1		Top Bar III	1 PC
A2		Top Bar II	1 PC
A8		Ground Anchor	9 PCS
A9		Plastic Stick Holder	2 PCS
A10		Plastic Stick Holder	2 PCS
A11		Plastic Stick Holder	2 PCS
A12		Top Bar III	1 PC
A13		Leg	1 PC
A13A	°	Leg	1 PC

A14	·	Leg	1 PC
A14A		Leg	1 PC
A15		Cross Bar	1 PC
A16	0	Connect Bar	1 PC
A17		Protective Net	2 PCS

Hardware used for main frame assembly

Aa1	Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x50 Sleeve Nut	4 SETS
Aa2	Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x50 Sleeve Nut	8 SETS
Aa3	M6x15 Bolt Set (Preassembled)	2 SETS
Aa4	M6x60 Bolt Set (Preassembled)	8 SETS

Parts used for trapeze assembly

E1	Trapeze Ring Hanger Handle (Preassembled)	2 SETS
E2	Trapeze Ring Tube	1 PC
E3	Cap for Trapeze Ring Tube (Preassembled)	2 PCS

Hardware used for trapeze assembly

Ea1	Sleeve Nut Set (Preassembled)	2 SETS
Ea2	Eye Bolt Set (Preassembled)	2 SETS
Ea3	Screw Hook (Preassembled)	2 PCS
Ea4	Cap Nut Set (Preassembled)	2 SETS

Parts used for swings assembly

J1	Swing Ring	4 PCS
J2	Swing Seat	2 PCS

Hardware used for swing seats assembly

Ja1	Sleeve Nut Set (Preassembled)	4 SETS
Ja2	Eye Bolt Set (Preassembled)	4 SETS
Ja3	Screw Hook (Preassembled)	4 PCS
Ja4	Screw Hook Cap Set (Preassembled)	4 SETS

Parts used for playground roundabout assembly

D1	60)	Connecting Bar	1 PC
D2		Main Spinning Bar	1 PC
D3		Base Bar	1 PC
D4		Connecting Bar	1 PC
D5		Connecting Bar	1 PC
D6	(1) (2)	Connecting Bar	1 PC
D7	(1) (1)	Connecting Bar	1 PC
D8		Supporting Bracket	2 PCS
D9		Spinning Disk	1 PC

D10	Connecting Bracket	1 PC
-----	--------------------	------

Hardware used for playground roundabout assembly

Da1	Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x50 Sleeve Nut	2 SETS
Da2	Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x52 Sleeve Nut	2 SETS
Da3	Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x56 Sleeve Nut	2 SETS
Da4	Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x52 Sleeve Nut	5 SETS
Da5	Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x50 Sleeve Nut	2 SETS
Da6	Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x38 Sleeve Nut	2 SETS
Da7	M6x40 Bolt Set (Preassembled)	4 SETS
Da8	Washer & Nut Set (Preassembled) Ø20xØ8x2.0 Washer M8 Nut	1 SET
Da9	Bearing	1 PC

Da10 Cap for Connecting Bar (Preassembled) 1 PC	
---	--

Parts used for trampoline assembly

T1		Spring	28 PCS
T2		Jump Mat	1 PC
Т3		Frame Pad	1 PC
T4A		L-Shaped Tube (Left)	1 PC
T4B		L-Shaped Tube (Right)	1 PC
T5	(<u>a(o o o o o o o (a</u>)	Straight tube	1 PC
Т6		Handlebar with Foam	1 PC
T7A		Handlebar Base Tube (Left)	1 PC

T7B	Handlebar Base Tube (Right)	1 PC
T8A	Elbow Tube	1 PC
Т9	Handlebar Base Tube End Cap (Preassembled)	2 PCS
T10	Elbow Tube End Cap (Preassembled)	2 PCS

Hardware used for trampoline assembly

Ta1	Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x52 Sleeve Nut	2 SETS
Ta2	Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x26 Sleeve Nut	2 SETS
Ta3	M6x32 Bolt Set (Preassembled)	2 SETS

Parts used for slide assembly

Z1		Slide Ladder Support Tube	1 PC
Z2		Slide Ladder Support Tube	1 PC
Z3	·	Slide Leg Tube	2 PCS
Z4		Slide Ladder Step	2 PCS
Z5	0	Connecting Plate	2 PCS
Z6		Cap for Z1 and Z2 (Preassembled)	2 PCS
Z 7		Cap for Z3 (Preassembled)	2 PCS
Z8		Slide	1 PC
Z9	0	Slide Ladder Support Tube Cross Bar	2 PCS
Z10	0	Slide Leg Cross Bar	1 PC


Hardware used for slide assembly

Za1		M6x36 Bolt Set (Preassembled)	4 SETS
Za2		M6x42 Bolt Set	4 SETS
Za3		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x24 Sleeve Nut	10 SETS

Parts used for shade assembly

H1	Sunshade	1 PC
H2	 Short Plastic Stick	2 PCS
НЗ	Long Plastic Stick	2 PCS
H4	Logo	1 PC
H5	Plastic Connector	2 PCS

OVERVIEW DRAWING

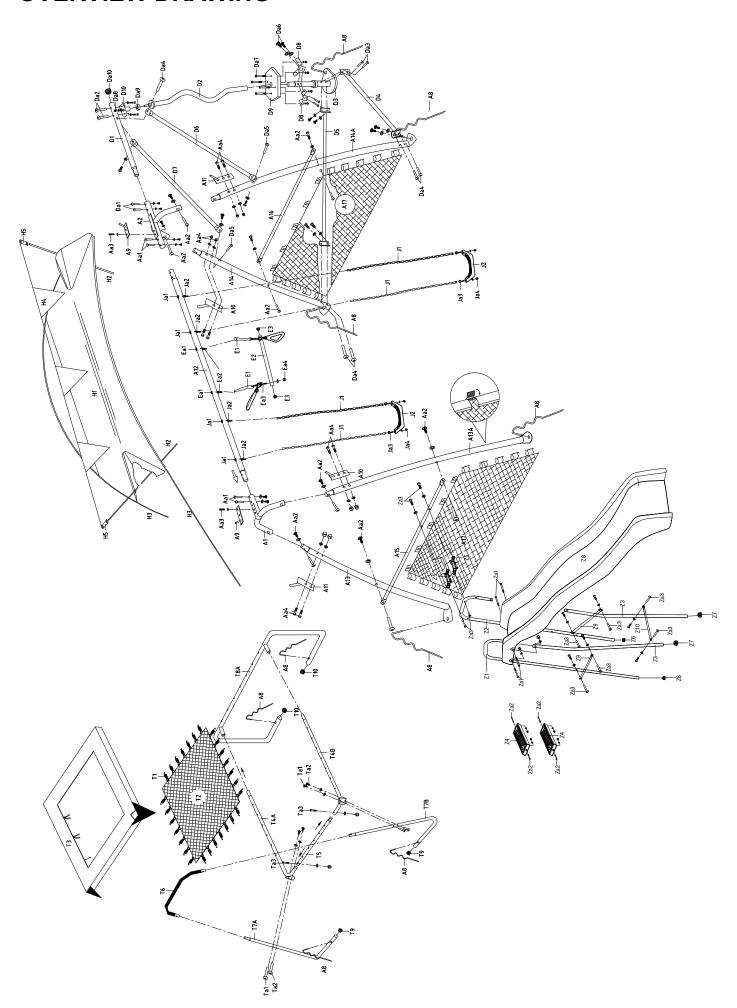


ASSEMBLY INSTRUCTIONS


- Place the playground equipment on level ground, not less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury to the user.

TIGHTENING NUTS & BOLTS


- Do not over-tighten the nuts and bolts when you are assembling your playground equipment.
 This will allow for some possible adjustments and ease of installation.
- Once you have completed the assembly of the playground equipment, go back over all of the nuts
 and bolts and properly tighten all of them before using the playground equipment.

Main Frame Layout

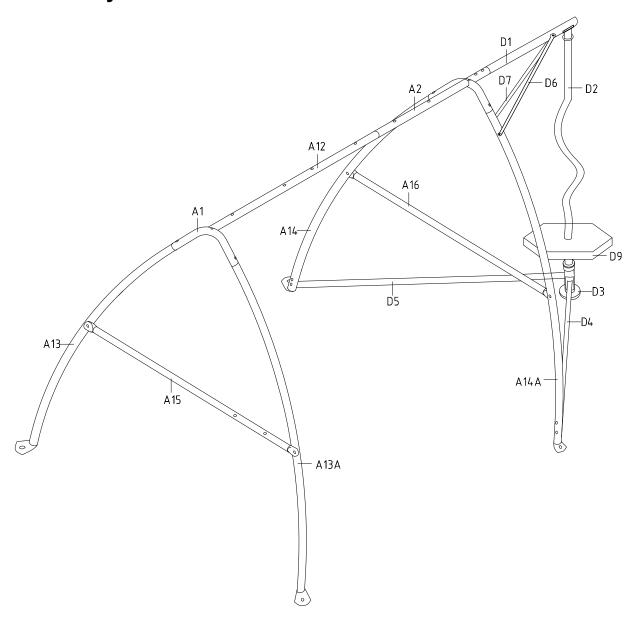


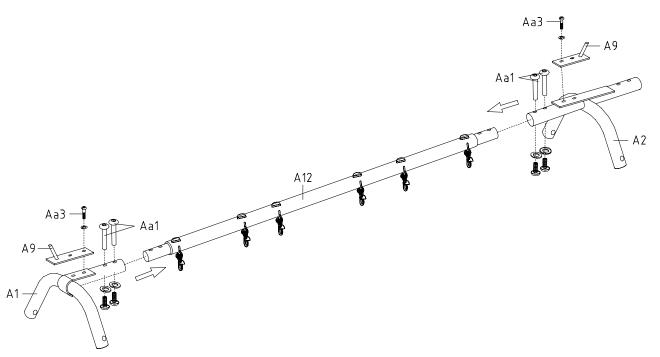


- Remove one set of Pre-installed Hardware Aa3 from the Top Bar I A1.
- Attach the Plastic Stick Holder A9 onto the Top Bar I A1 with the set of Pre-installed Hardware Aa3 that was removed.
- Remove two sets of Pre-installed Hardware Aa1 from Top Bar I A1.
- Insert the small end of Top Bar III A12 into the socket of Top Bar I A1, secure with the two sets of Pre-installed Hardware Aa1 that were removed.
- Remove one set of Pre-installed Hardware Aa3 from the Top Bar II A2.
- Attach the Plastic Stick Holder A9 onto the Top Bar II A2 with the set of Pre-installed Hardware Aa3 that was removed.
- Remove two sets of Pre-installed Hardware Aa1 from Top Bar II A2.
- Insert the small end of Top Bar III A12 into the socket of Top Bar II A2, secure with the two sets
 of Pre-installed Hardware Aa1 that were removed.

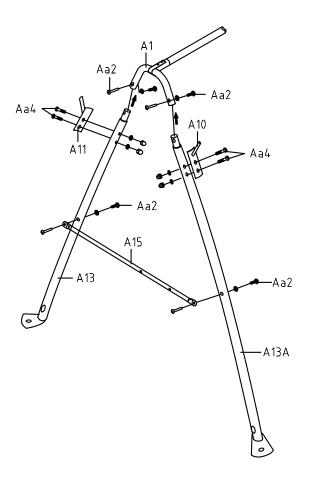


- Remove two sets of Pre-installed Hardware Aa2 from the Top Bar I A1
- Insert the small ends of the Legs A13 and A13A into the sockets at end of Top Bar I A1.
- Align the holes and secure using the two sets of Pre-installed Hardware Aa2 that were removed.
- Remove two sets of Pre-installed Hardware Aa2 from the Legs A13 and A13A.
- Attach the Cross Bar A15 onto the Legs A13 and A13A with the two sets of Pre-installed Hardware Aa2 that were removed.
- Remove two sets of Pre-installed Hardware Aa4 from the Leg A13A.
- Attach the Plastic Stick Holder A10 onto the Leg A13A with the two sets of Pre-installed Hardware Aa4 that were removed.
- Remove two sets of Pre-installed Hardware Aa4 from the Leg A13.
- Attach a Plastic Stick Holder A11 onto Leg A13 with the two sets of Pre-installed Hardware Aa4 that were removed.

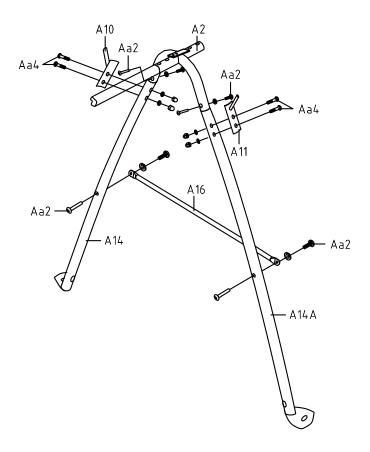


- Remove two sets of Pre-installed Hardware Aa2 from the Top Bar II A2.
- Insert the small ends of the Legs A14 and A14A into the sockets at the end of the Top Bar II A2.
- Align the holes and secure using the two sets of Pre-installed Hardware Aa2 that were removed.
- Remove two sets of Pre-installed Hardware Aa2 from the Legs A14 and A14A.
- Attach the Cross Bar A16 onto the Legs A14 and A14A with the two sets of Pre-installed Hardware Aa2 that were removed.
- Remove two sets of Pre-installed Hardware Aa4 from the Leg A14A.
- Attach a Plastic Stick Holder A11 onto the Leg A14A with the two sets of Pre-installed Hardware Aa14 that were removed.
- Remove two sets of Pre-installed Hardware Aa4 from the Leg A14.
- Attach a Plastic Stick Holder A10 onto the Leg A14 with the two sets of Pre-installed Hardware Aa4 that were removed.

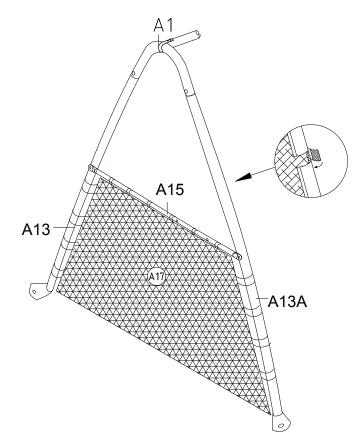


Step 4Attach a Protective Net A17 onto the Legs A13, A13A, and Cross Bar A15 with Velcro straps.

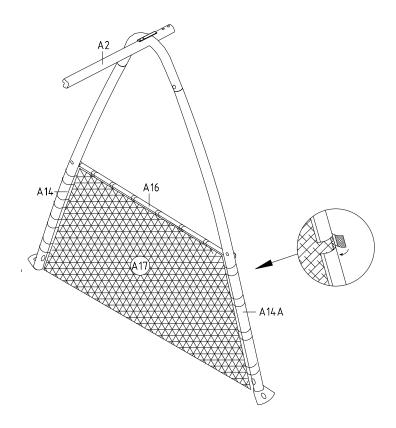

Step 5Attach a Protective Net A17 onto the Legs A14, A14A, and Cross Bar A16 with Velcro straps.

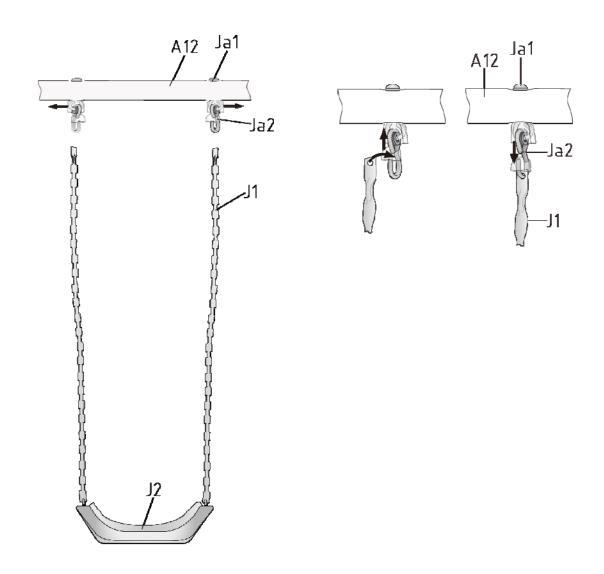


• Hang the Swing Chains J1 in place from the Eye Bolts Ja2 on the Top Bar III A12.

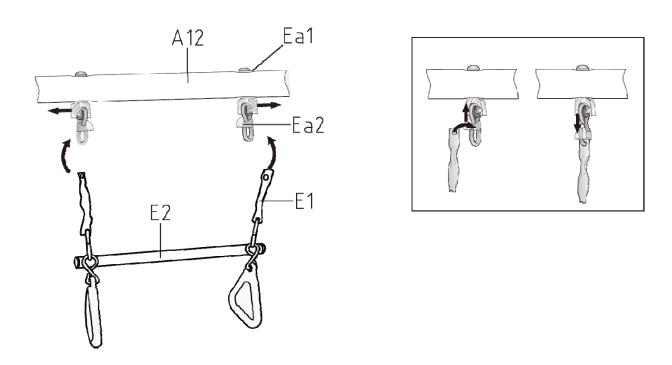


Step 7


 Hang both Trapeze Ring Hanger Handles E1 in place from the Eye Bolts Ea2 on the Top Bar III A12.

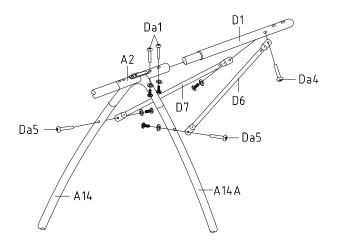


- Remove two sets of Pre-installed Hardware Da1 from Top Bar II A2.
- Insert the small end of the Connecting Bar D1 into the socket of the Top Bar II A2, secure with the two sets of Pre-installed Hardware Da1 that were removed.
- Remove two sets of Pre-installed Hardware Da5 from the Legs A14 and A14A.
- Remove one set of Pre-installed Hardware Da4 from the Connecting Bar D1.
- Attach the Connecting Bars D6 and D7 onto Legs A14, A14A, and Connecting Bar D1 with the two sets of Pre-installed Hardware Da5 and one set of Pre-installed Hardware Da4 that were removed.

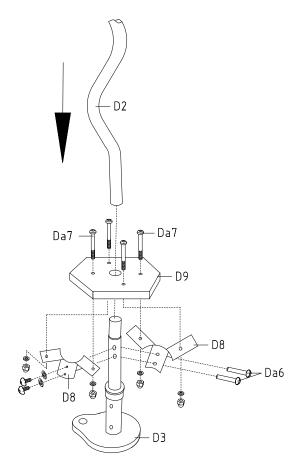

- Remove four sets of Pre-installed Hardware Da7.
- Remove two sets of Pre-installed Hardware Da6.
- Insert the Main Spinning Bar D2 into the hole on the Spinning Disk D9.
- Insert the Base Bar D3 into Main Spinning Bar D2.
- Attach both Supporting Brackets D8 onto the Base Bar D3 and bottom of the Spinning Disk D9 with the four sets of Pre-installed Hardware Da7 and two sets of Pre-installed Hardware Da6 that were removed.

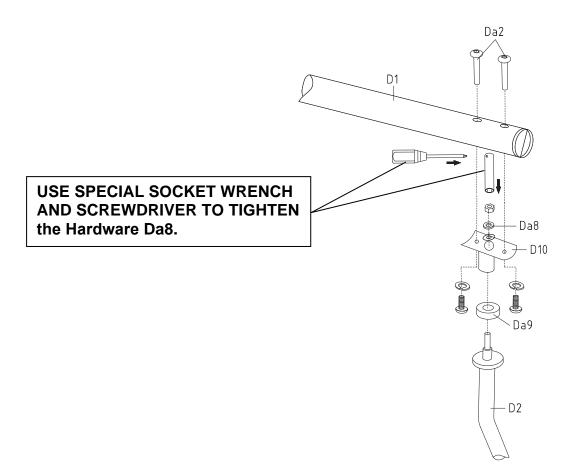


- Remove one set of Da8 from D2.
- Attach Da9 and D10 onto the top end of D2 with one set of Da8 that was removed.
- Remove two sets of Da2 from D1.
- Attach D10 onto D1 with two sets of Da2 that were removed.

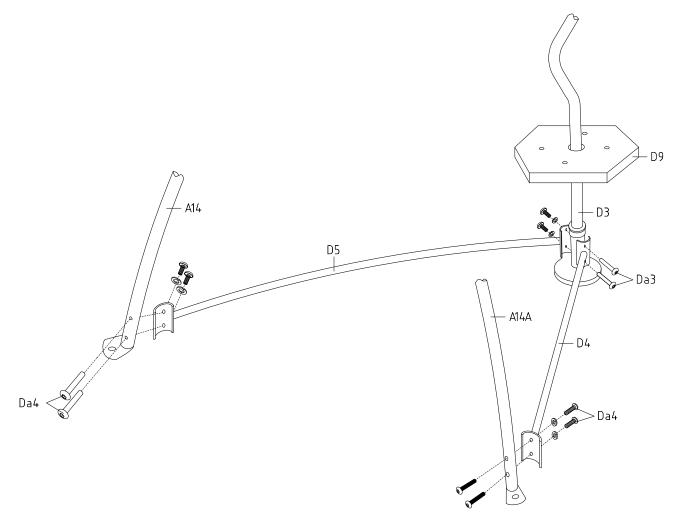


- Remove two sets of Pre-installed Hardware Da3.
- Attach one end of the Connecting Bars D4 and D5 onto the Base Bar D3 with the two sets of Pre-installed Hardware Da3 that were removed.
- Remove four sets of Pre-installed Hardware Da4 from the Legs A14 and A1A.
- Attach the other end of the Connecting Bars D4 and D5 onto Legs A14 and A14A with the four sets of Pre-installed Hardware Da4 that were removed.

TIGHTEN ALL BOLTS ON THE PLAYGROUND!

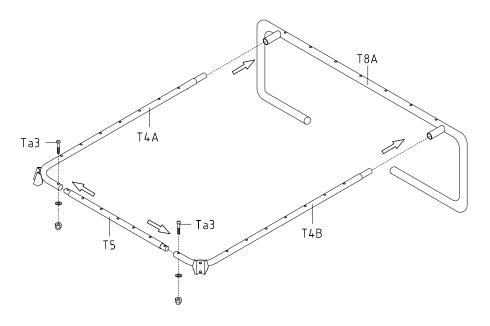

- Remove two sets of Pre-installed Hardware Ta3.
- Insert the small ends of the L-Shaped Tube (Left) T4A and L-Shaped Tube (Right) T4B into the sockets of the Elbow Tube T8A. The Welded bracket of the L-Shaped Tube (Left) T4A and L-Shaped Tube (Right) T4B Should face outside.
- Insert the small end of Straight Tube T5 into the opening of the L-Shaped Tube (Left) T4A and L-Shaped Tube (Right) T4B, align the holes.
- Secure using the two sets of Pre-installed Hardware Ta3 that were removed.

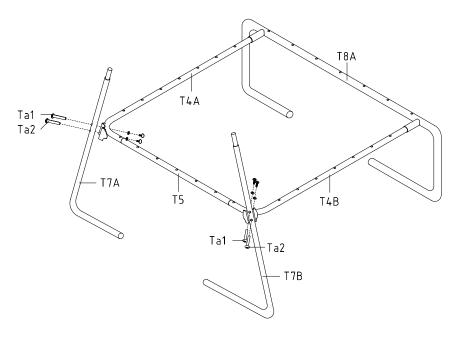


Step 13

- Remove two sets of Pre-installed Hardware Ta1 and Ta2.
- Align the Handlebar Base Tube (Left) T7A to the outside of the L-Shaped Tube (Left) T4A, and put the Handlebar Base Tube (Right) T7B to the outside of the L-Shaped Tube (Right) T4B, align the holes.
- Secure using the two sets of Pre-installed Hardware Ta1 for the upper hole of the Handlebar Base Tube (Left) T7A and Handlebar Base Tube (Right) T7B.
- Secure using two sets of Pre-installed Hardware Ta2 for the lower hole of Handlebar Base Tube (Left) T7A and Handlebar Base Tube (Right) T7B.


Note: The bolt set Ta1 is longer than the Ta2.

Do not over-tighten the screws as it will make STEP 15 more difficult to assemble.

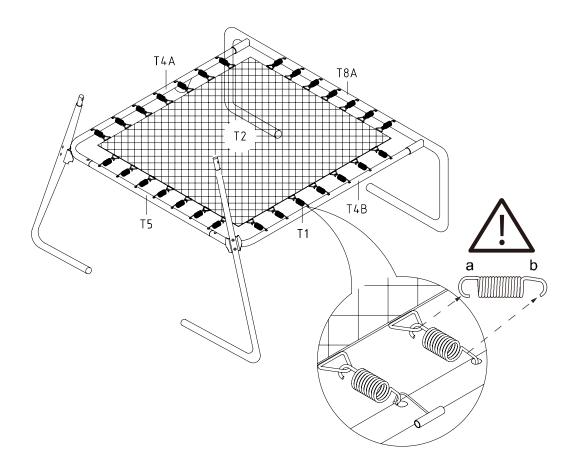


- Lay out the Jump Mat T2 and align each triangle ring of the mat towards the opposite holes of the Trampoline Frame, one triangle ring to one hole.
- Attach a Spring T1 with spring hooks a face down to the triangle ring of the mat. Hold the srping loading tool underhand and pull spring hook b towards the hole on the frame as shown in detailed drawing. Drop hook into the frame hole until it latches on.

Note: Be careful not to pinch hands or fingers on springs. Use gloves to prevent pinching. Keep springs dry; wet springs are very slippery.

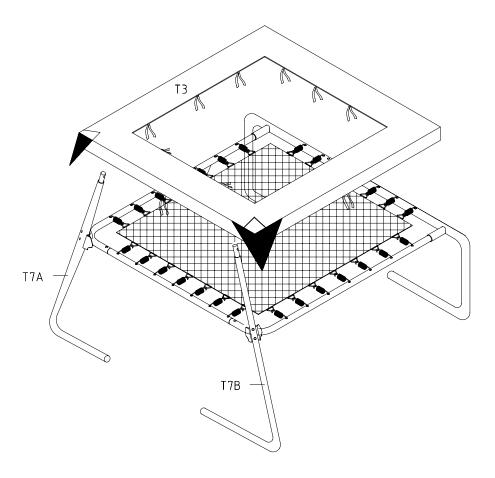


- Insert two corners of the Frame Pad T3 onto the Trampoline Frame.
- Lay the Frame Pad T3 over the trampoline, so that the springs and the steel frame are covered.
 ensure that the Frame Pad T3 covers all metal parts.

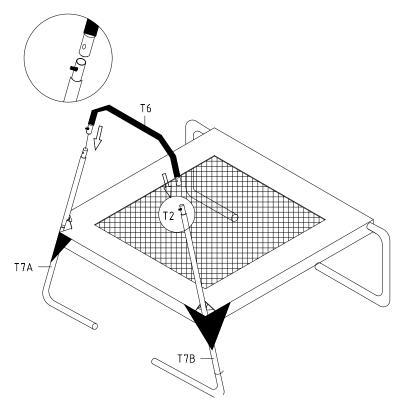

Step 16


• Insert the Handlebar with Foam T6 onto the small end of the Handlebar Base Tube (Left)T7A and Handlebar Base Tube (Right) T7B.

TIGHTEN ALL HARDWARE AT THIS TIME!

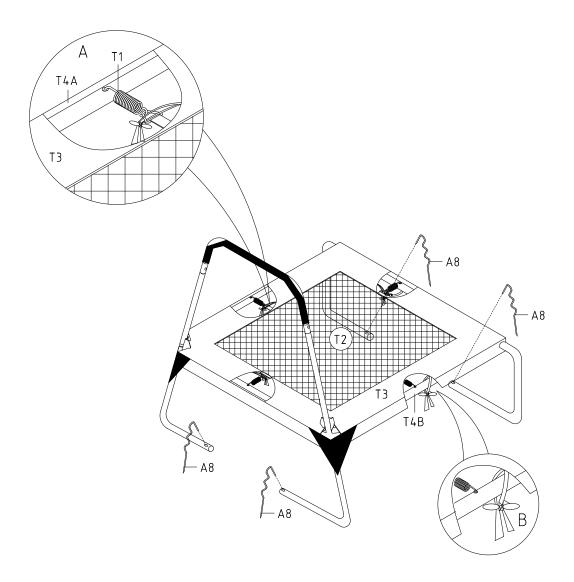


- Bring one end of the strap on Frame Pad T3 which is nearest to the Jump Mat T2, then tie the strap to the triangle ring with a knot as shown in drawing A. Repeat this step for the other straps near the Jump Mat T2 in the same way. Make sure the knot is tight and the frame pad fits securely on the trampoline.
- Line up the elastic straps over the main frames (T4A, T4B, T8A, and T5) of the trampoline, aligning alternate straps over, and then tie the straps as shown drawing B. Make sure every strap is tied well.
- Turn the four Anchors A8 into the ground until only the hooked end is above the ground next to the Handlebar Base Tube (Left) T7A, Handlebar Base Tube (Right) T7B, and Elbow Tube T8A. Insert the hooked end into the bottom openings. Ensure that the hooked end is secure.


Position for Playground

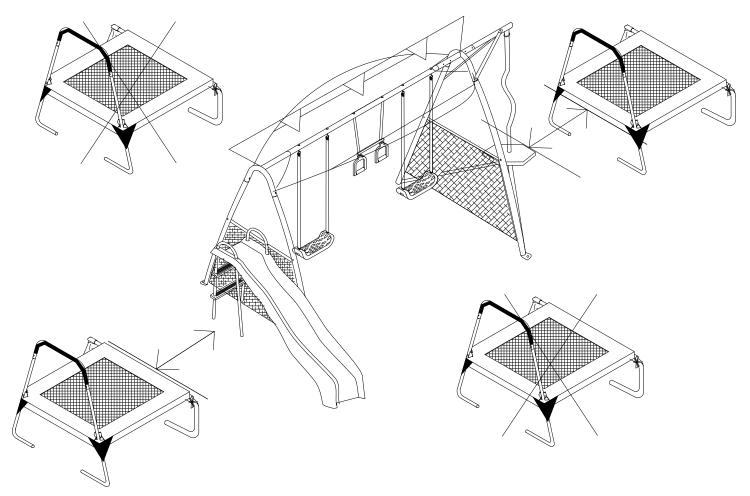

- 1.Do not place the trampoline in front or back of the swing set to avoid injuries from collisions.
- 2.Only place the trampoline at the side of swing set and keep at least 6 feet of distance between them.

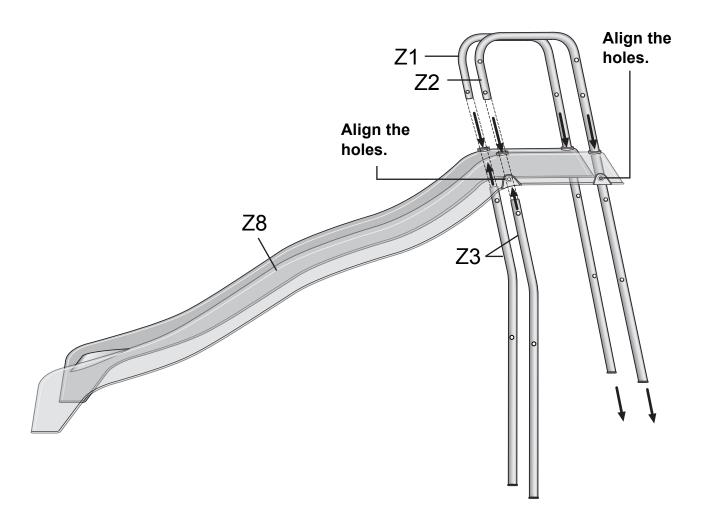


- Remove all the preassembled Phillips Head Bolt sets Za1 from the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2.
- Insert the longer ends of the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2 into the holes on the rear end of the Slide Z8 and align the holes.
- Insert both Slide Leg Tubes Z3 into the holes on the front end of the Slide Z8 and align the holes.

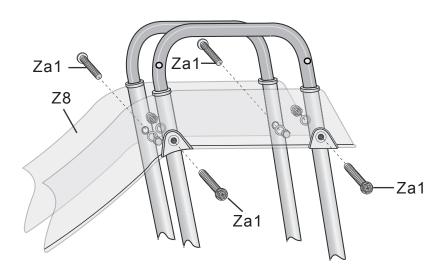


Step 19


Secure the Slide Z8 using the 4 sets of Hardware Za1 previously Removed.

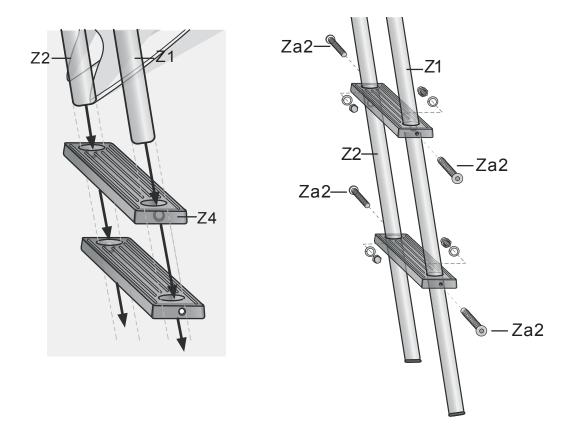


- Slide the two Slide Ladder Steps Z4 up the bottom ends of the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2. Align the holes of the Slide Ladder Steps Z4 with the TOP and BOTTOM set of holes on the Slide Ladder Support Tube Z1 and Slide Ladder Connecting Tube Z2.
- Secure the Slide Ladder Steps Z4 using the four sets of Hardware Za2 previously removed.

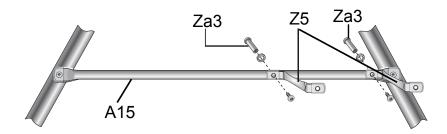

- Remove two sets of preinstalled Hardware Za3 from the two Connecting Plates Z5.
- Attach both Connecting Plates Z5 to the Slide Mounting Bar A15 with the two removed sets of Hardware Za3.

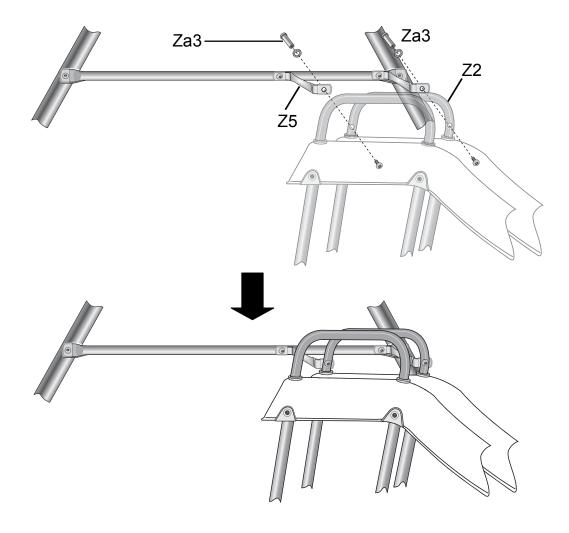


 Attach the Slide Ladder Connecting Tube Z2 onto the Cross Bar A15 using the two Connecting Plates Z5 and the two sets of Hardware Za3 that was previously removed.

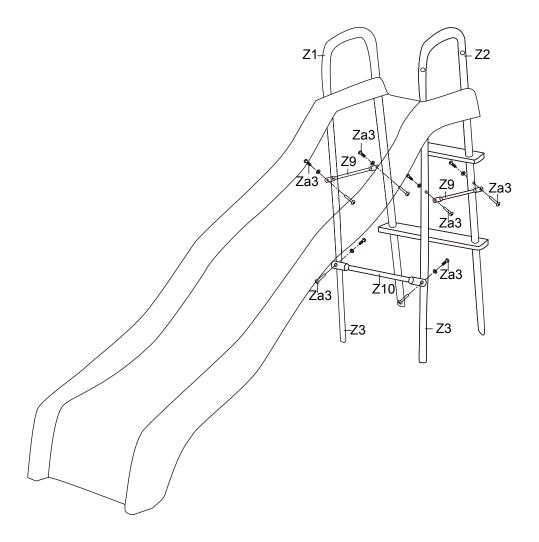


- Remove two sets of Hardware Za3 from both Slide Ladder Support Tube Cross Bars Z9.
- Attach one Slide Ladder Support Tube Cross Bar Z9 onto each side of the ladder using the
- hardware sets Za3 that were removed.
- Remove two sets of Hardware Za3 from the Slide Leg Cross bar Z10.
- Attach the Slide Leg Cross Bar Z3 to the slide using the two sets of Hardware Za3 that were removed.

SECURELY TIGTHEN ALL BOLTS ON THE SLIDE

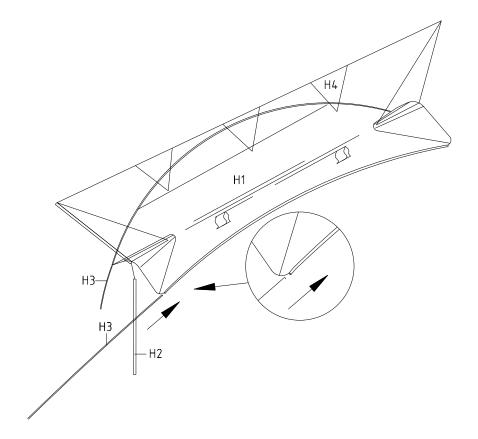

- Insert the two Long Plastic Sticks H3 into the holes on the Sunshade H1.
- Insert the Short Plastic Stick H2 into the holes on the Sunshade H1.

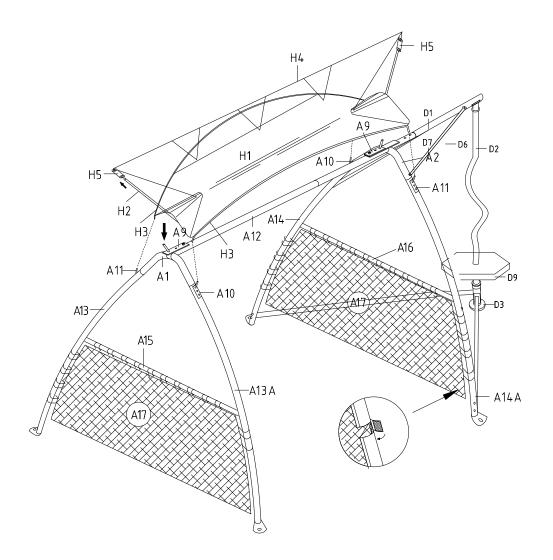

- Insert one end of the Long Plastic Stick H3 into the hole of Plastic Stick Holder A11 on the Leg A13 and the other end of the Long Plastic Stick H3 into the hole of the Plastic Stick Holder A10 on the Leg A14.
- Insert the opposite Long Plastic Stick H3 into the hole of the Plastic Stick Holder A10 on the Leg A13A and the other end of the Long Plastic Stick H3 into the hole of the Plastic Stick Holder A11 on the Leg A14A.
- Insert the two Short Plastic Sticks H2 into the holes on the Plastic Stick Holder A9.
- Attach all Velcro straps onto frame.
- Attach the two Plastic Connectors H5 with the Logo H4 onto the two Short Plastic Sticks H2.


GROUND ANCHOR INSTALLATION

You may either anchor the feet in hard soil or if your soil is soft (sand, etc.), you may use the corkscrew (A8) anchor to secure the playground. If you wish to permanently secure your swing set, setting the legs in concrete secured by a brick or gravel bed is recommended. Ensure equipment is firmly anchored. When cementing equipment, bury the legs about three inches below the ground. This will ensure sufficient space remains under the swings. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface or below ground level to prevent tripping. Be sure the swing set is located on level ground.

For Soil Ground Installation:

Turn the corkscrew anchor into the ground until only the hooked end is above the ground next to the leg.


Insert the hooked end into the bottom opening of the leg. Ensure that the hooked end is secure in the leg opening.

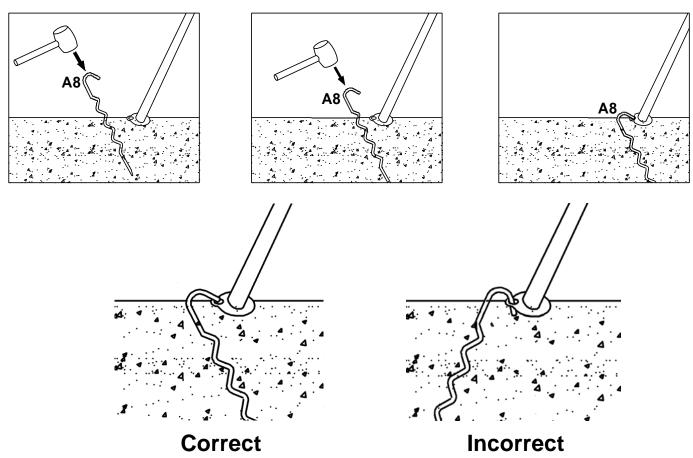


When turning the corkscrew anchor into the ground, please make sure the anchor is roughly perpendicular to the playground feet.

For Concrete Ground Installation:

- If the swing set is set up on grounds with sandy soil, it must be anchored with concrete footing (concrete not included).
- Dig holes around swing leg tube as shown below in drawing. As you dig down and create a
 cylindrical hole, you should use a shovel to carve out the lower part of the hole, to create a larger
 diameter hole at the bottom.
- Place 2 inch high brick or 2 inches of gravel bed as shown in drawing below.
- Use about 45lb of concrete per leg.
- Cover concrete with dirt and protective surface material.
- Allow about 6-7 days for concrete to dry properly.

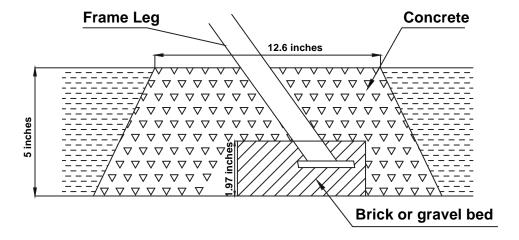

Note: The maximum fall height for this product is 6 feet. The minimum ground clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

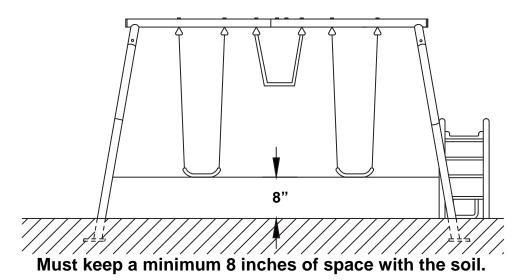

Warning: Please bury the legs of the swing set as per instruction. If the swing set is used without proper anchoring, it may be dangerous and may tilt over.

This play ground received ASTM F2276 and CPSIA certification.

PART REQUEST FORM

Paradigm Health & Wellness, Inc.

EMAIL THIS FORM WITH YOUR RECIEPT OF PURCHASE TO

NAME:

Service@paradigmhw.com *

(Night) ERIAL#: ODEL#: JRCHASE DATE: LACE OF PURCHASE:	JDKE99:		
ELEPHONE: (Day)	TY	STATE ZIP	
(Night) ERIAL#: ODEL#: URCHASE DATE: LACE OF PURCHASE:			
ODEL#: URCHASE DATE: LACE OF PURCHASE:			
ODEL#: URCHASE DATE: LACE OF PURCHASE:	ERIAL#:		
URCHASE DATE:			
LACE OF PURCHASE:			
PART # DESCRIPTION QTY			
PART # DESCRIPTION QTY			
	PART#	DESCRIPTION	ΩΤΥ
		DEGGINI HON	
			-
			-

[&]quot;YOUR ORDER WILL BE PROCESSED WITHIN 3 BUSINESS DAYS" * This form can also be faxed in Fax #: 626-810-2166