


# **IRONKIDS®** **fitnessplayground**

***FITNESS PLAYGROUND***

***ITEM NO: 8010***

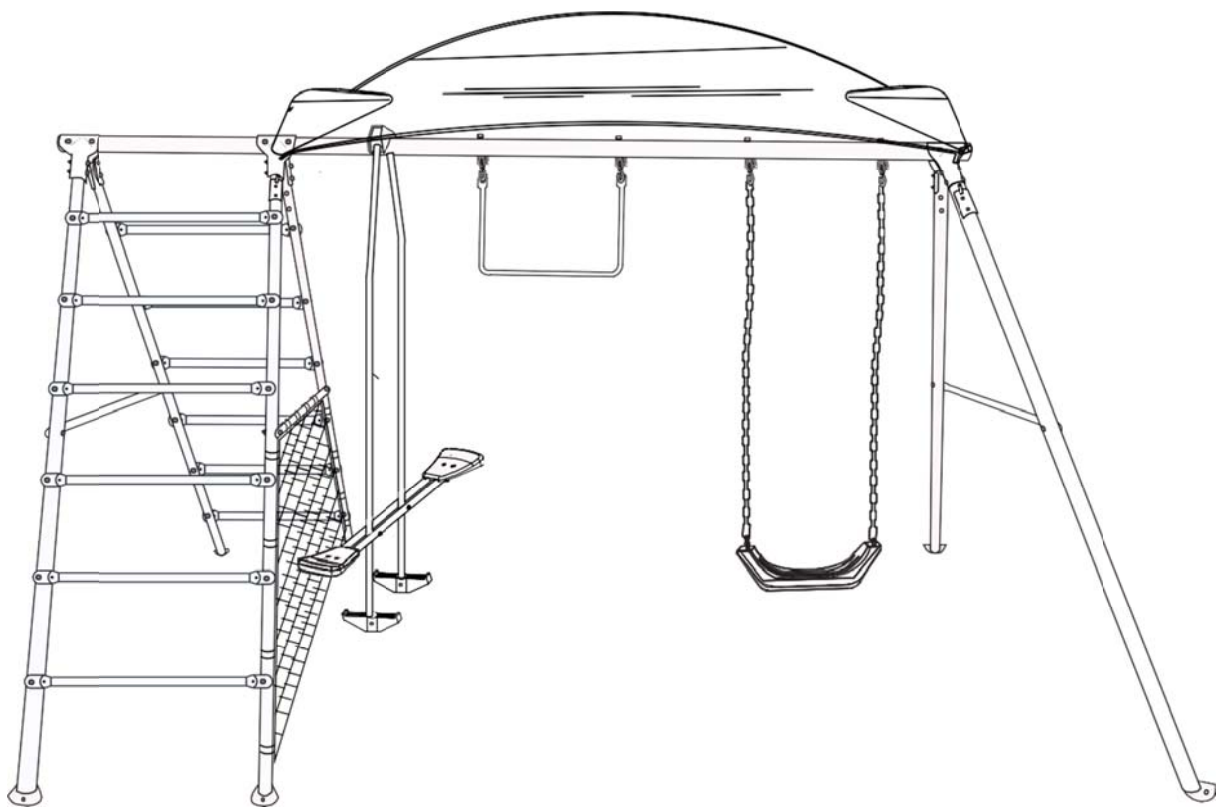

***OWNER'S MANUAL***

8010.7-101619

**CAUTION:** This unit is designed to be used safely by children between the ages of 3 to 8 years old. This product has a maximum weight limit of 80 lbs per station. Glider swing can hold up to 1 child per seat. Trampoline can hold up to 1 child at a time. Slide can hold up to 1 child at a time. Nest swing can hold 2 children up to a maximum weight of 80 lbs.

The specifications of this product may vary from this photo and are subject to change without notice.

IRONKIDS® and the "K-DOT" logo are registered trademarks of World Triathlon Corporation.

Official Product of IRONKIDS. Used here by permission.

For more brand information please visit [www.ironkids.com](http://www.ironkids.com)



**PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.**

**STOP. Contact customer service if you have any questions regarding assembly or proper operation of the machine.**

**Email us at:**  
**[Service@paradigmhw.com](mailto:Service@paradigmhw.com)**

**Or call us at:**  
**1-844-641-7922**  
**Hours:**  
**8:00 am to 5:00 pm (PST)**  
**Monday thru Friday**

## **IMPORTANT: FOR NORTH AMERICA ONLY**

**For damage or defective product, questions, replacement parts or any other service support, please contact our customer service department (8:00 AM - 5:00 PM Pacific Standard Time, Monday thru Friday) by below methods:**

**For Best Service Email:**

**[Service@paradigmhw.com](mailto:Service@paradigmhw.com)**

**Website:**

**[www.paradigmhw.com](http://www.paradigmhw.com)**

**Toll-Free:**

**1-844-641-7922**

**Please have the following information ready when requesting for service:**

**Your name**

**Phone number**

**Model number**

**Serial number**

**Part number**

**Proof of Purchase**

**For damaged or defective product please contact our customer service before returning to the store.**

**\* Email us with detailed information will be this is the best method to receive immediately responds during peak business hours**

**Paradigm Health & Wellness, Inc.**

**1189 Jellick Ave.**

**City of Industry, CA 91748, USA**

# TABLE OF CONTENTS

Warranty ----- 4

Important Labels----- 5

Safety----- 6

Tools Required for Assembly ----- 10

Hardware for Assembly ----- 11

Parts Numbers and Illustrations ----- 13

Overview Drawing----- 20

Assembly Instructions ----- 21

Ground Anchor Installation----- 30

Parts Request Fax Form ----- 32

## **MANUFACTURER'S LIMITED WARRANTY (IRONKIDS FITNESS PLAYGROUND)**

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with Paradigm's Owner's Manual. Paradigm's obligation under this warranty applies to the following:

<b>COMPONENT</b>	<b>LENGTH OF WARRANTY</b>
<b>Structural Frame</b>	<b>Lifetime For Home Use Only</b>
<b>All Other Components</b>	<b>180 days For Home Use Only</b>

### **Exclusions from Warranty Coverage:**

Paradigm does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by Paradigm's installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
5. Any act of Nature (such as fire, flooding, snow, ice, hurricane, earthquake, lightning or other natural disaster), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to, among other things, flake, chalk, accumulate dirt or stains.
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

Paradigm, using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

### **Ordering Replacement Parts**

Replacement parts can be ordered by calling or emailing our customer service department:

**1-844-641-7922**

**Monday thru Friday, 8:00 AM - 5:00 PM (PST).**

**service@paradigmhw.com**

When ordering replacement parts please have the following information ready:

- 1. Owner's Manual**
- 2. Model Number**
- 3. Description of Parts**
- 4. Part Number**
- 5. Date of Purchase**

IMPORTANT LABELS

**⚠ WARNING**

For canopy: Make sure all pole ends is fully inserted inside the protrusions before use.

Installation over a hard surface such as concrete, asphalt, or packed earth may result in serious injury or death from falls.

Children have died when hood or neck drawstrings on their jackets or sweatshirts caught on slides or other playground equipment. Parents are advised to remove hood and neck drawstrings from clothing.

Risk of using helmets and other items that can warp around a child's neck, become entangled or entrapped by the equipment, and lead to strangulation or death.

**⚠ AVERTISSEMENT**

Pour canopy: S'assurer que toutes les extrémités de poteaux sont bien insérées dans les saillies avant l'utilisation.

L'installation sur une surface dure comme du béton, de l'asphalte ou de la terre compactée peut entraîner des blessures graves, voire mortelles, suite à une chute.

Des enfant sont morts lorsque des cordons de serrage sur les capuches ou encolures de vestes ou chandailles sont accrochés à des toboggans ou autres équipements des terrains de jeu. Il est conseillé aux parents de retirer les cordons de serrage sur les encolures et capuches des vêtements.

Risque d'utilisation de casques et d'autres objets pouvant gondoler autour du cou de l'enfant, se prendre dans l'enchevêtrement ou être pris au piège par l'équipement et provoquer l'étouffement ou la mort.

**⚠ WARNING**

- Use at your own risk
- For family domestic use and for outdoor use only
- This play set complies with ASTM-F 1148
- This product has a maximum weight limit of 80 lbs per station

**⚠ AVERTISSEMENT**

- Utilisez l'équipement à vos propres risques.
- Réservé à un usage familial et domestique, et à un usage extérieur.
- Cet ensemble de jeu est conforme à la norme ASTM-F 1148
- Ce produit a un limite de poids maximum de 36 kg par station

COMPANY NAME	Paradigm Health & Wellness	MANUFACTURING DATE	05/19
ADDRESS	1189 Jellick Ave. City of Industry, CA 91748	ORDER	13190527
TEL	1-844-641-7922	MADE IN	CHINA
MODEL	8010		

**ADULT SUPERVISION REQUIRED FOR USE AT ALL TIMES**

**READ MANUAL BEFORE USE**

**ALWAYS WEAR PROPER FOOTWEAR**

**DO NOT USE EQUIPMENT WHEN WET**

**NO RUNNING, PUSHING, SHOVING, OR ROUGH-HOUSING**

**SURVEILLANCE D'UN ADULTE REQUIS POUR UNE UTILISATION EN TOUT TEMPS.**

**LIRE LE MANUEL AVANT L'UTILISATION.**


**TOUJOURS PORTER DES CHAUSSURES APPROPRIÉES.**

**NE PAS UTILISER L'ÉQUIPEMENT LORSQU'IL EST MOUILLÉ.**

**NE PAS COURIR, POUSSER, BOUSSULER, SE BAGARRER.**

**FOR KIDS AGES 3 - 8 YEARS ADULT SUPERVISION IS REQUIRED.**

**POUR LES ENFANTS DE 3 - 8 ANS LA SUPERVISION D'UN ADULTE EST REQUISE.**

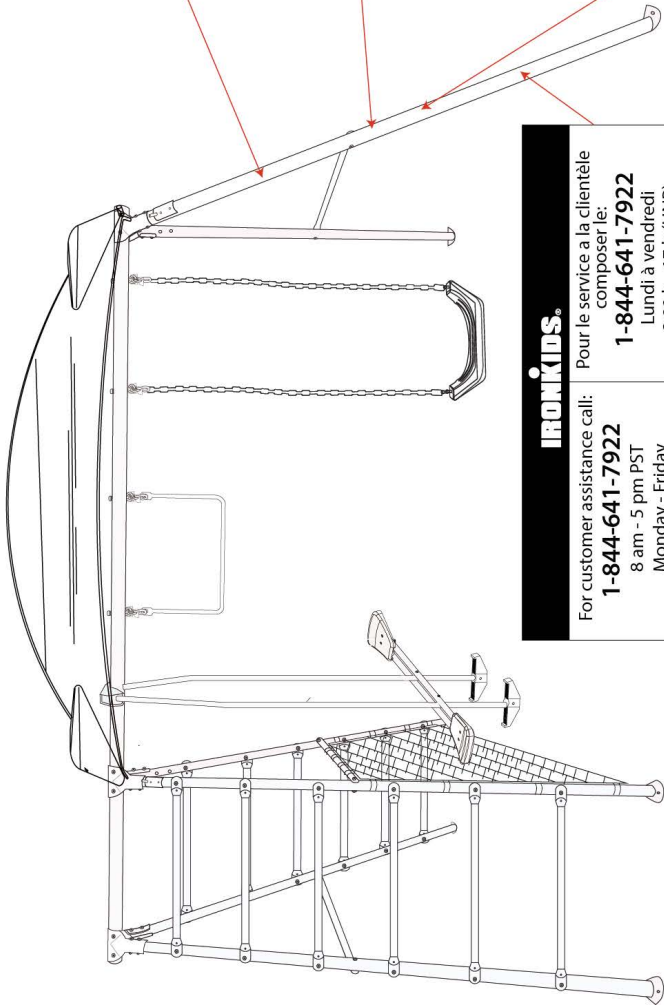

**IRONKIDS.**

For customer assistance call: **1-844-641-7922**  
8 am - 5 pm PST  
Monday - Friday

Pour le service à la clientèle composer le: **1-844-641-7922**  
Lundi à vendredi  
8:00 h - 17 h (HNP)

8 8811540801011 6

11899980100001

Serial number / Numéro de série:

MADE IN CHINA / FABRIQUÉ EN CHINE

# SAFETY

**Read all instructions carefully before assembling operating this product. Retain this Owner's manual and keep the original purchase receipt for future reference.**

1. Before assembling the Fitness Playground, find level ground no less than 6 feet from any structure or obstruction to the Fitness Playground. The Fitness Playground must have clearance on all sides.
2. To prevent serious injury, do not allow children to play on the Fitness Playground until it is completely installed.
3. Do not install the Fitness Playground over concrete, packed dirt, or any other hard surface. A fall onto a hard surface can result in serious injury.
4. Only adults should assemble or disassemble this Fitness Playground.
5. This product **MUST** be anchored.
6. Adult supervision of children is required at all times when on or around this Fitness Playground. Never leave children unattended.
7. Do not swing too high or at an angle. Do not hang on or climb from structural members of the Fitness Playground.
8. Do not exceed the intended weight limit or maximum number of users for the Fitness Playground.
9. This product is intended to be used by children between the ages of 3-8 years old.
10. Be sure to observe your children and ensure that they have the strength and skills to enjoy all the rides safely before use on their own.
11. Do not allow children to walk close to, behind, or in front of moving items.
12. Do not allow children to twist swing chains or ropes or loop them over the top bar. This may reduce the strength of the chain or rope.
13. Teach and instruct children not to swing empty seats.
14. Instruct children how to sit in the center of the seats and swing with their full weight on the seat.
15. Warn children not to use the equipment in any manner other than intended.
16. Warn children not to get off the equipment while in motion.
17. Warn children to not wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
18. Equipment may be slippery when wet. Do not allow children to use the equipment when wet.
19. Parents should regularly check openings and surfaces, such as slides, for items that may be hazardous.
20. Parents should check swing chains to ensure they are secure.
21. Do not place any part of the body near moving parts.
22. Never slide head first down the slide.
23. Verify that suspended climbing ropes, chain, or cable are secured at both ends.
24. Verify that suspended climbing ropes, chain, or cable cannot be looped back on itself.
25. Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
26. Children must be supervised at all times. No playground is safe without adult supervision.
27. Instruct children to remove their bike or other sports helmet before playing on the playground equipment.
28. Dress children with wellfitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, and sandals.
29. Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).

## Play Ground Rules

1. No running, pushing, shoving, or roughhousing.

5 GG9 A 6 @M=BGHF I 7 H=C BG

- Place the playground equipment on level ground, no less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury.

## TIGHTENING NUTS & BOLTS

- ' Do not over-tighten the nuts and bolts when you are assembling your playground equipment. This will allow for some possible adjustments and ease of installation.
- ' Once you have completed the assembly of the playground equipment, go back over all of the nuts, bolts and bolts and properly tighten them before using the playground equipment.
- ' Vã @^} Åd Åcã. æ^E

75 F9 / 'A5 =BH9 B5 B7 9

- Owners shall be responsible for maintaining the legibility of the warning labels.

**At the beginning of each play season:**

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

**Twice a month during play season:**

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

**Once a month during play season:**

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

**At the end of each play season or when the temperature drops below 32 °F**

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

### Disposal Instructions:


- Disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the playground equipment is discarded.



# **PROTECTIVE PLAYGROUND SURFACE**


- Select Protective Surfacing—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification **F1292**. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:
- **Loose-Fill Materials:** Maintain a minimum depth of 9 in. (229 mm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 96 in. (2438 mm) high; and 9 in. (229 mm) of sand or pea gravel for equipment up to 60 in. (1524 mm) high.
- **NOTE:** An initial fill level of 12 in. (305 mm) will compress to about a 9 in. (229 mm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9 in. (229 mm) depth. X2.1.2 Use a minimum of 6 in. (152 mm) of protective surfacing for play equipment less than 48 in. (1219 mm) in height. If maintained properly, this should be adequate. (At depths less than 6 in. (152 mm), the protective material is too easily displaced or compacted.)
- **NOTE:** Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing.
- **Ground level equipment** – such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- **Do not** install loose fill surfacing over hard surfaces such as concrete or asphalt.
- **Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles**—You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.
- Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment.
- Check the protective surfacing frequently for wear.

- **Protective Material Placement**—Proper placement and maintenance of protective surfacing is essential. Be sure to:
- Extend surfacing at least 72 in. (1829 mm) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 ft in all directions.

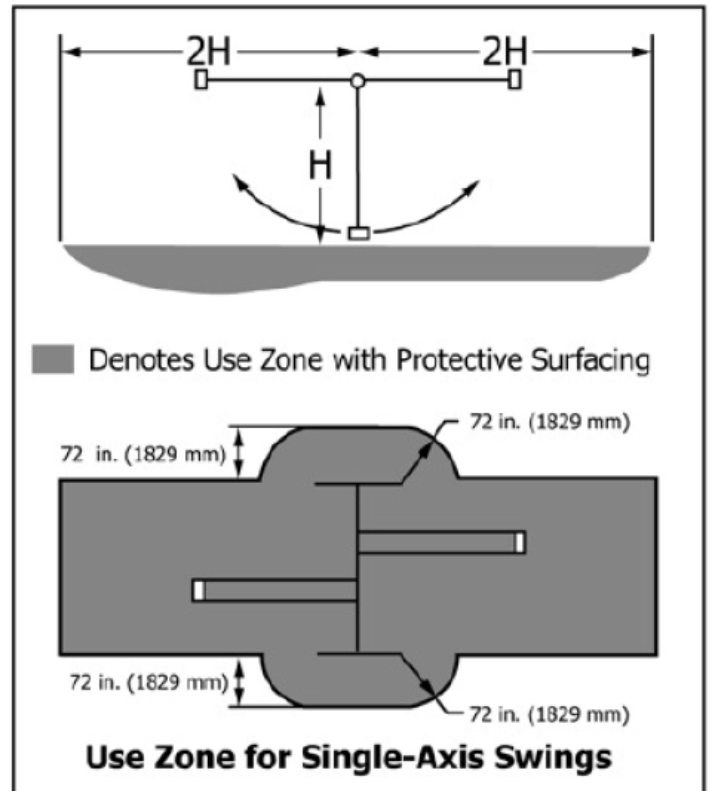


## TOOLS REQUIRED FOR ASSEMBLY


Please prepare the following tools prior to assemble this equipment.

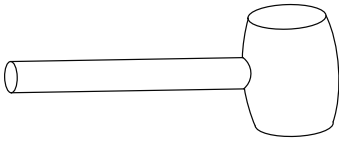


Hammer

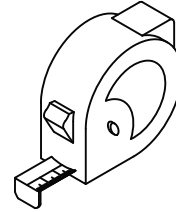


Tape Measure




Phillips Screwdriver

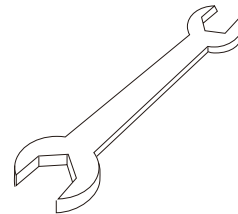

Wrench 13x10mm  
(Included)

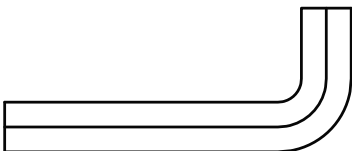


Allen Wrench M5  
(Included)

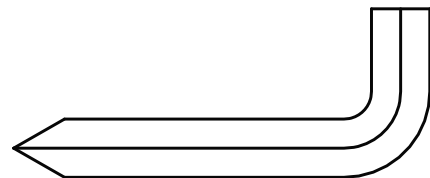


Allen Wrench with Phillips Screwdriver M5  
(Included)

# HARDWARE FOR ASSEMBLY


## Hardware used for main frame assembly




Binder Post & Bolt Set (Preassembled)  
M8x15 Bolt  
Ø10x52 Sleeve Nut  
6 SETS




Binder Post & Bolt Set (Preassembled)  
M6x12 Bolt  
Ø8x45 Sleeve Nut  
6 SETS



Binder Post & Bolt Set  
(Preassembled)  
M6x12 Bolt  
Ø8x40 Sleeve Nut  
36 SETS



M6x47 Bolt Set (Preassembled)  
4 SETS




M6x55 Bolt Set (Preassembled)  
4 SETS


Hardware used for glider assembly



Binder Post & Bolt Set (Preassembled)  
M6x12 Bolt  
Ø8x73 Sleeve Nut  
2 SETS



M6x40 Bolt Set (Preassembled)  
2 SETS




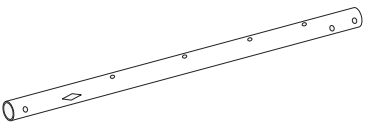
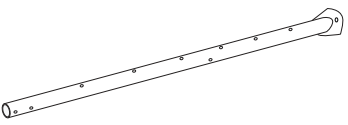
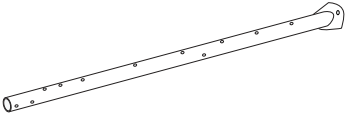
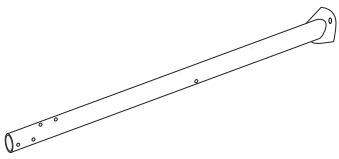
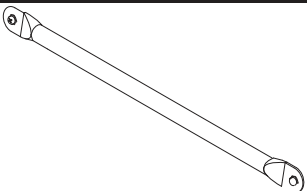
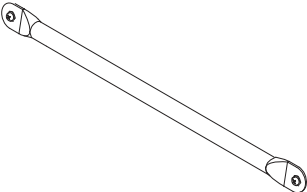
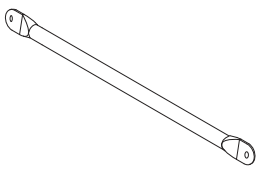

M6x38 Bolt Set (Preassembled)  
4 SETS



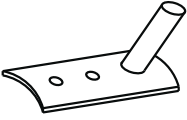
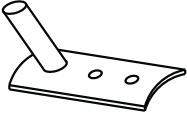
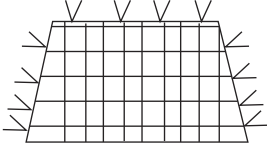


Binder Post & Bolt Set (Preassembled)  
M6x12 Bolt  
Ø8x40 Sleeve Nut  
2 SETS




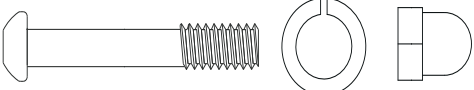
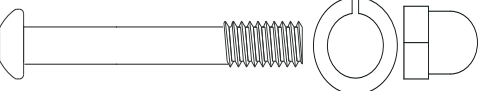



# PARTS NUMBERS AND ILLUSTRATIONS
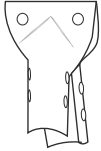
## Parts used for main frame assembly

A1		Top Bar	1 PC
A2		Top Bar	1 PC
A3		Climber Leg	2 PCS
A4		Climber Leg	2 PCS
A5		Leg (Two legs are labeled A and B.)	2 PCS
A6		Cross Bar	2 PCS
A7		Cross Bar	1 PC
A8		Climbing Bar	12 PCS
A9		Ground Anchor	6 PCS



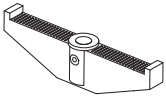



A10		Top Bar and Climber Legs Support	2 PCS
A11		Top Bar and Legs Support (Two sides are labeled A and B.)	1 PC
A12		Plastic Stick Holder	2 PCS
A13		Plastic Stick Holder	2 PCS
A14		Protective Net	1 PC

## Hardware used for main frame assembly


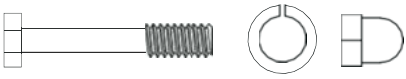
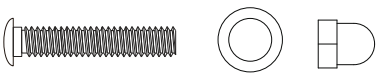
Aa1		Binder Post & Bolt Set (Preassembled) M8x15 Bolt Ø10x52 Sleeve Nut	6 SETS
Aa2		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x45 Sleeve Nut	6 SETS
Aa3		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x40 Sleeve Nut	36 SETS
Aa4		M6x47 Bolt Set (Preassembled)	4 SETS
Aa5		M6x55 Bolt Set (Preassembled)	4 SETS
Aa6		Cap for Top Bar A1 & A2 (Preassembled)	2 PCS
Aa7		Cap for Legs (Preassembled)	4 PCS
Aa8		Cap for Legs (Preassembled)	2 PCS


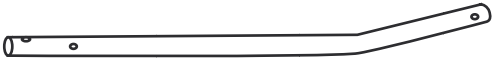


## Parts used for glider assembly

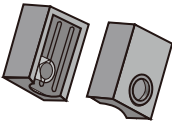
B1		Glider Vertical Pole	2 PCS
B2		Glider Horizontal Pole	2 PCS
B3		Foot Rest	2 PCS
B4		Glider Seat	2 PCS
B5		Glider Attachment	1 PC
B6		Glider Vertical Pole Cap	2 SETS

## Hardware used for glider assembly

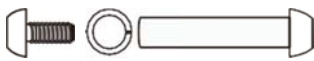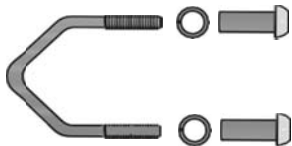

Ba1		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x73 Sleeve Nut	2 SETS
Ba2		M6x40 Bolt Set (Preassembled)	2 SETS
Ba3		M6x38 Bolt Set (Preassembled)	4 SETS

Ba4		Binder Post & Bolt Set (Preassembled) M6x12 Bolt Ø8x40 Sleeve Nut	2 SETS
Ba5		Bolt Set M8 Bolt Ø10x30 Sleeve Nut	1 SET

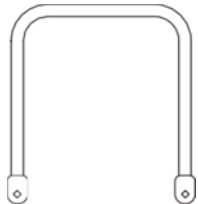

### Parts used for trapeze assembly

T1		Trapeze Tube	1 PC
----	---	--------------	------





### Hardware used for trapeze assembly

Ta1		Ø10x30 Sleeve Nut Set (Preassembled)	2 SETS
Ta2		Eye Bolt Set (Preassembled)	2 SETS



## Parts used for swing seats assembly


J1		Swing Ring	2 PCS
J2		Swing Seat	1 PC

## Hardware used for swing seats assembly

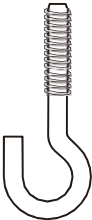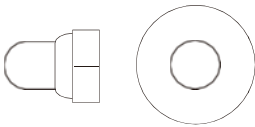Ja1		Ø10x30 Sleeve Nut Set (Preassembled)	2 SETS
Ja2		Eye Bolt Set (Preassembled)	2 SETS
Ja3		Screw Hook (Preassembled)	2 PCS
Ja4		Screw Hook Cap Set	2 SETS

Parts used for shade assembly

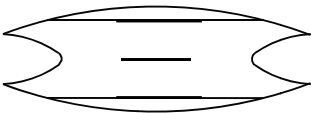H1		Sunshade	1 PC
H2		Plastic Stick	2 PCS

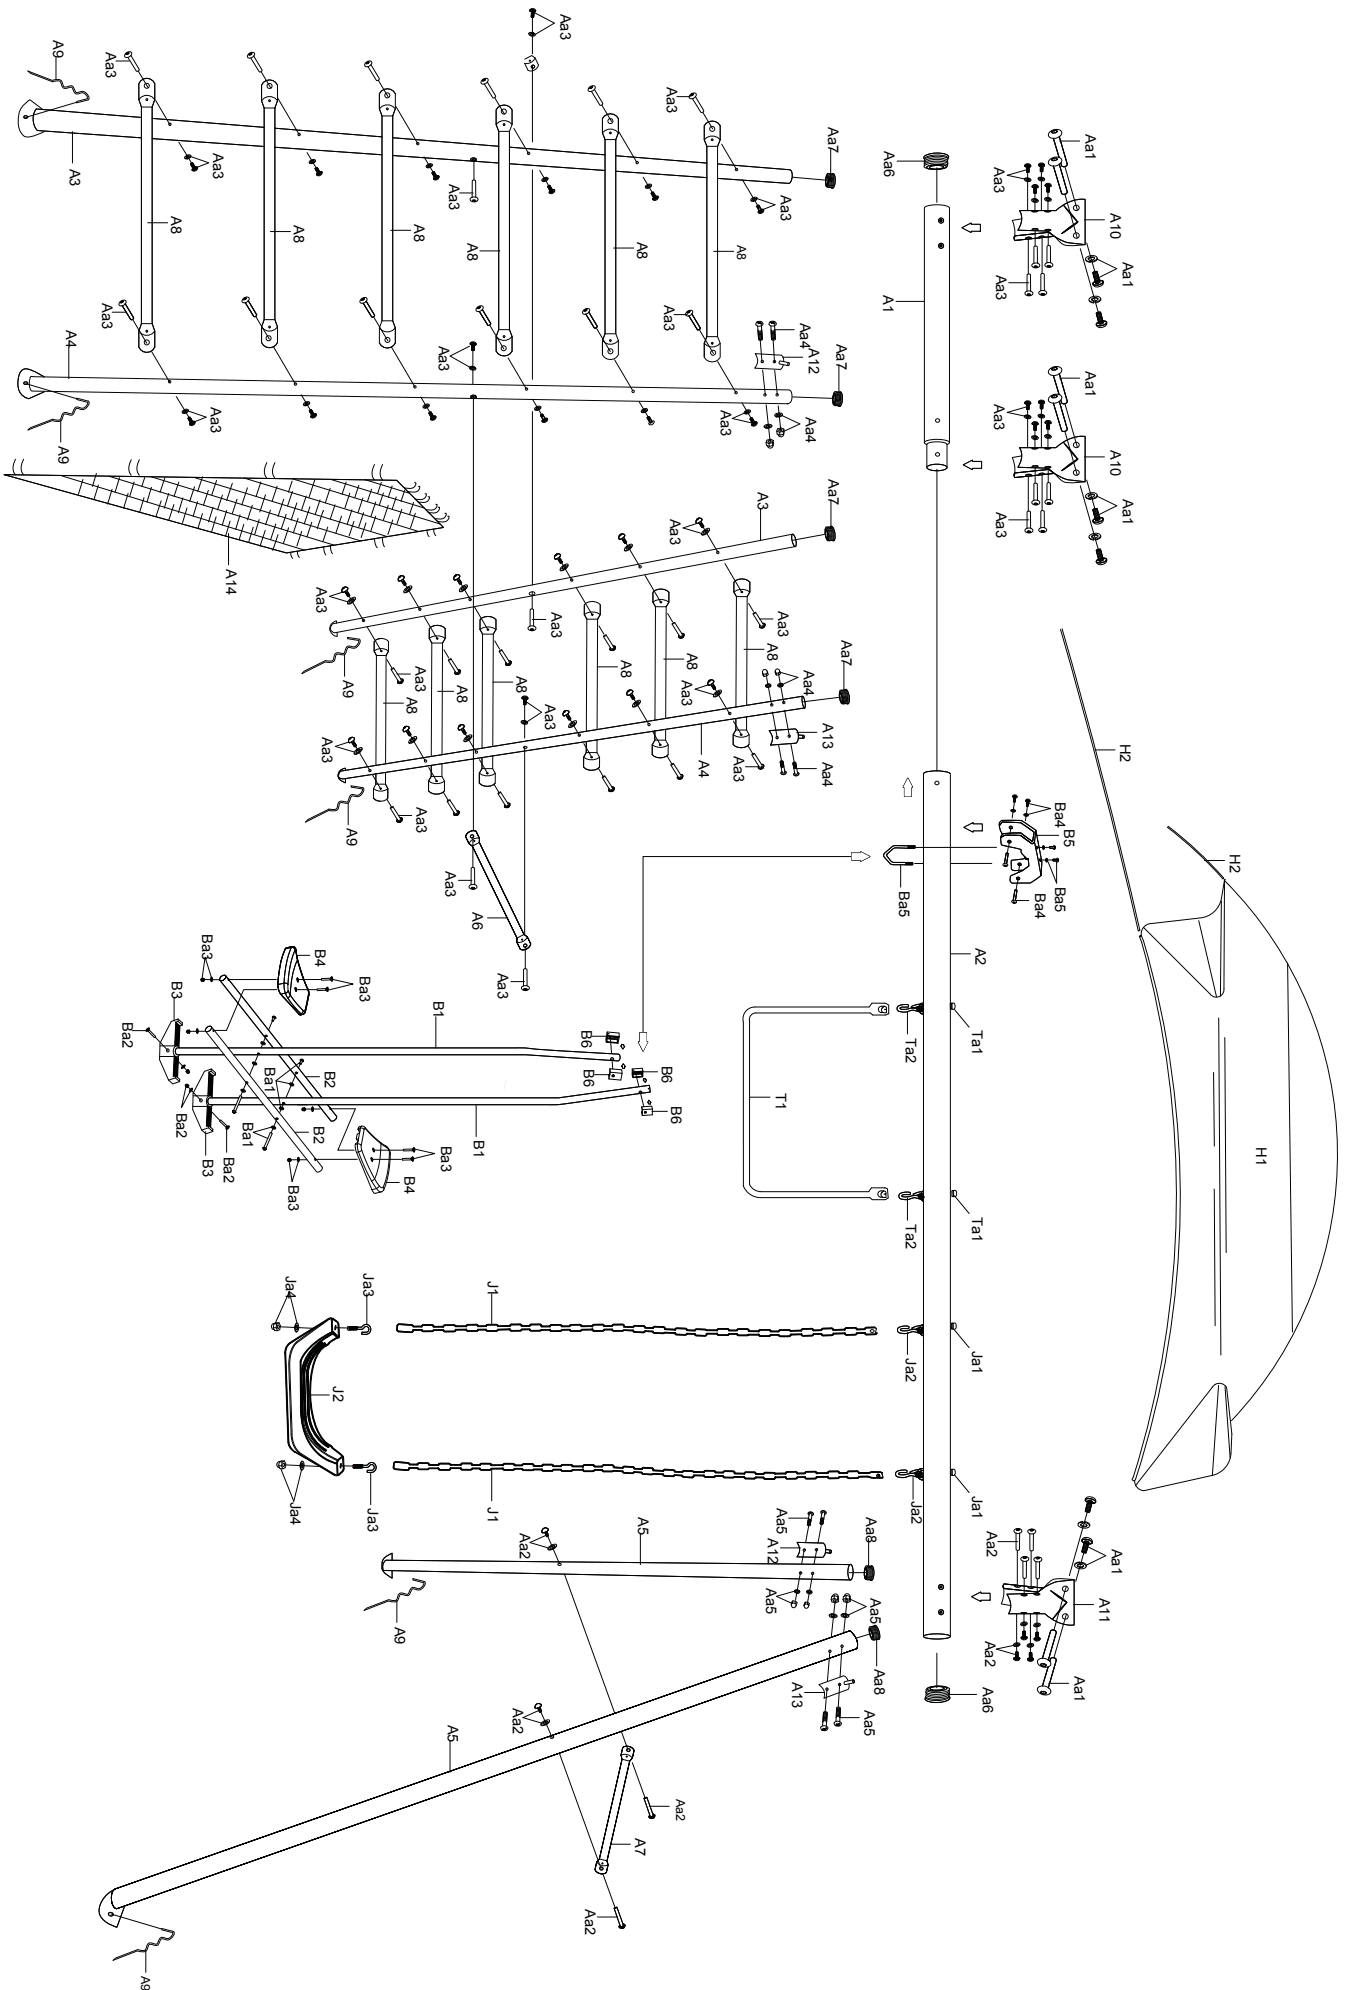


# ASSEMBLY INSTRUCTIONS


- Place the playground equipment on level ground, not less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury to the user.

## TIGHTENING NUTS & BOLTS

- Do not over-tighten the nuts and bolts when you are assembling your playground equipment. This will allow for some possible adjustments and ease of installation.
- Once you have completed the assembly of the playground equipment, go back over all of the nuts and bolts and properly tighten all of them before using the playground equipment.


## Main Frame Layout

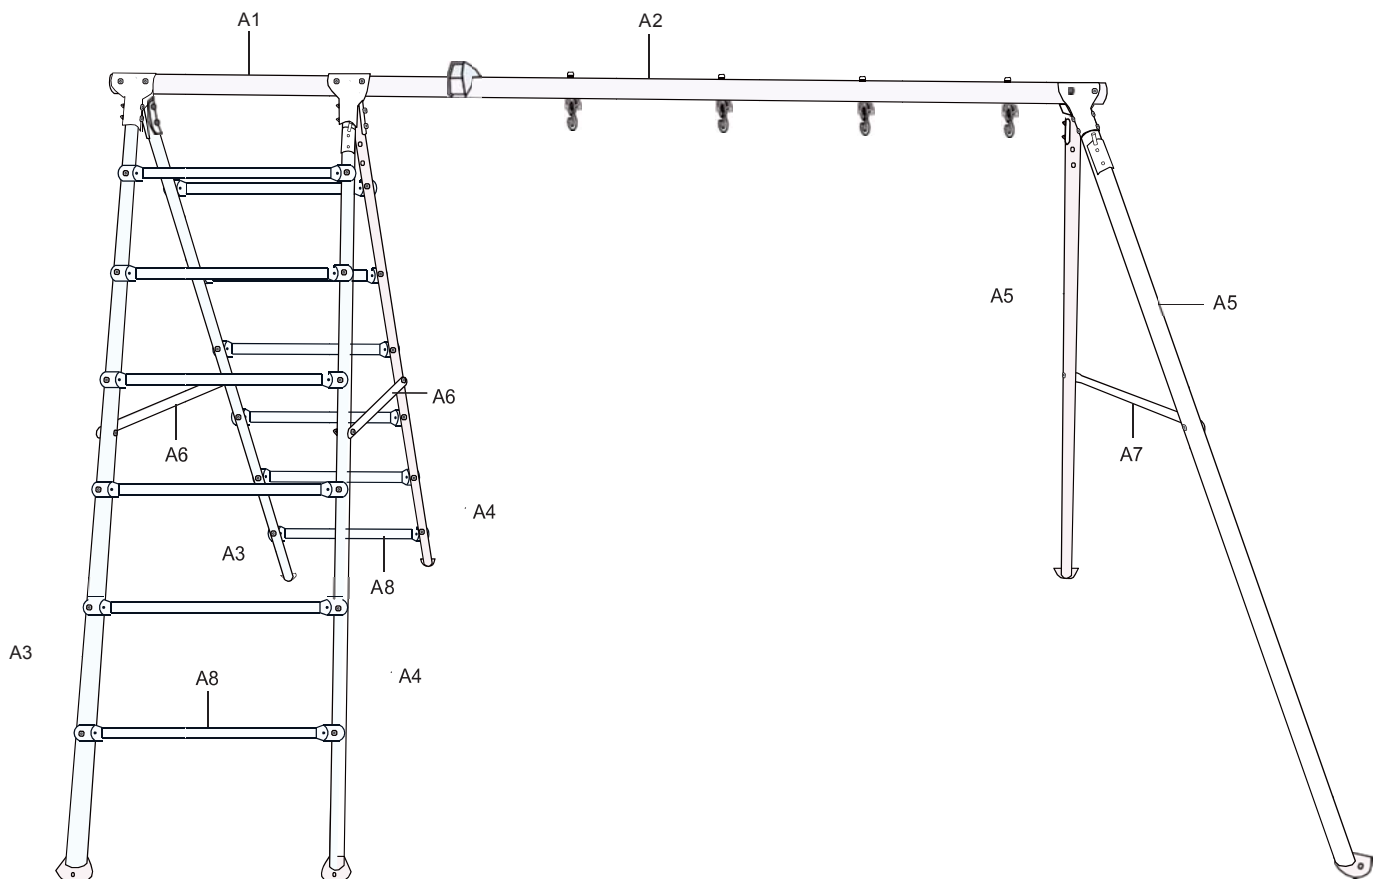

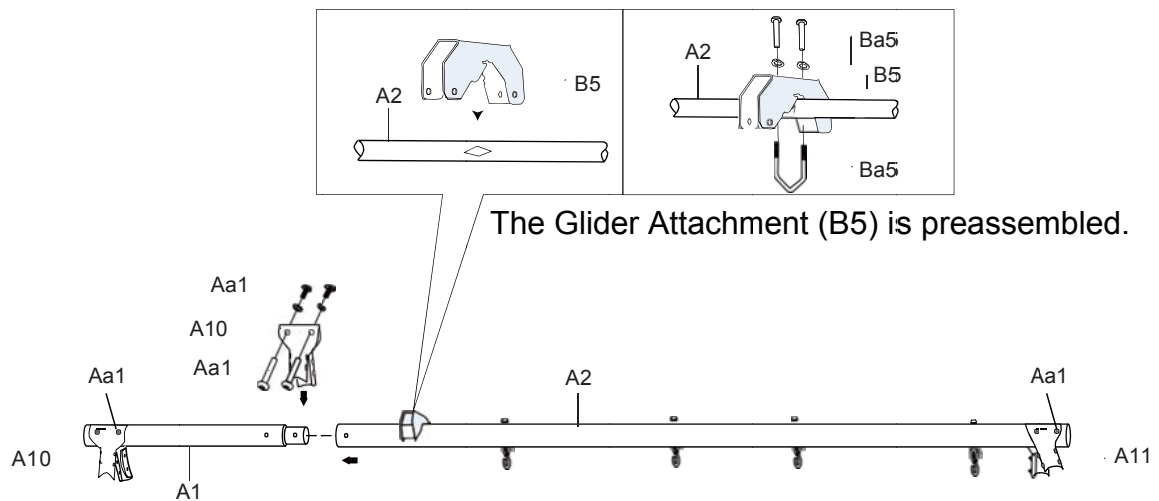

### Step 1

- Remove the two sets of Pre-installed Hardware Aa1 from the Ladder Top Bar A1 and Top Bar A2.
- Insert the Ladder Top Bar A1 into the socket of the Top Bar A2 and align the holes.
- Attach both Ladder Leg Supports A10 onto the Ladder Top bar A1 and Top Bar A2 with the two sets of Pre-installed Hardware Aa1 that were previously removed.

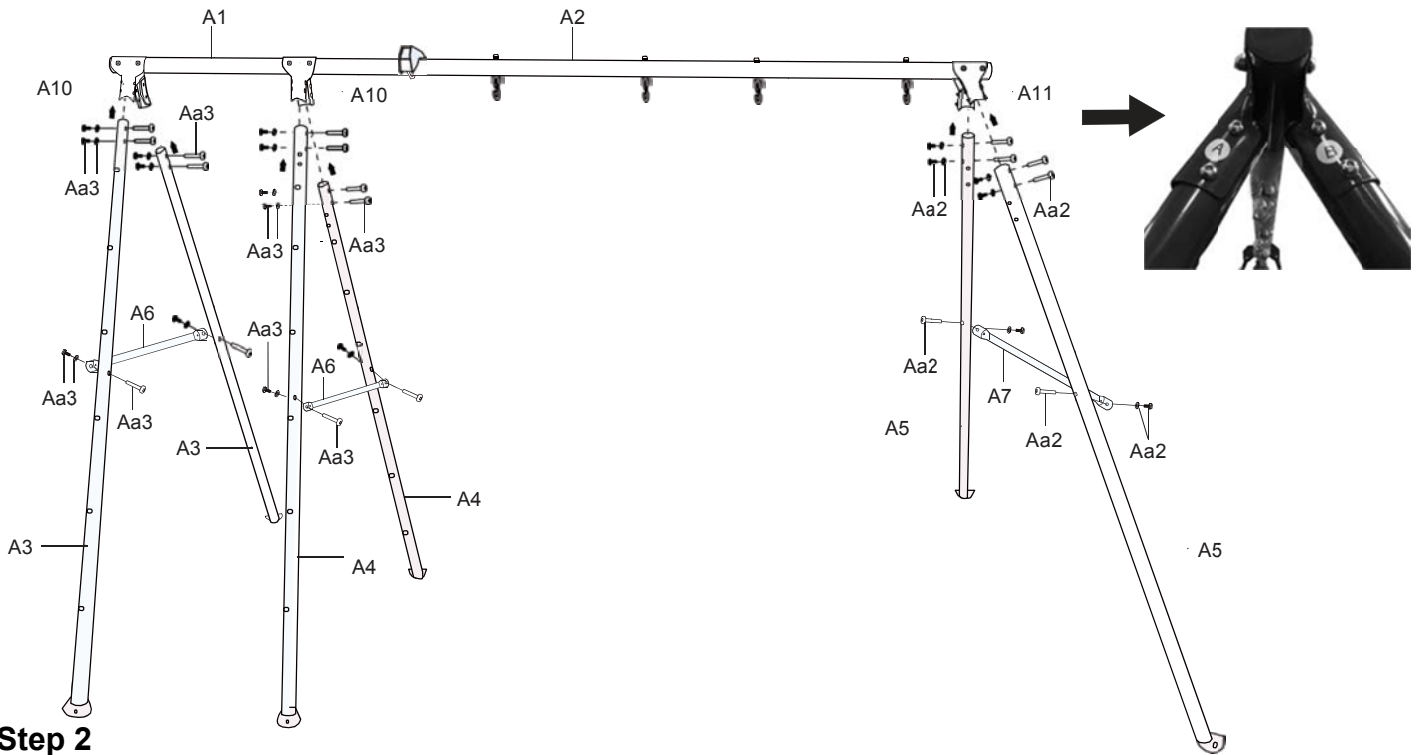

## Step 2

### Ladder Legs (A3) Assembly

- Remove four sets of Pre-installed Hardware Aa3 from both sides of the Ladder Leg Supports A10. Insert both Ladder Legs A3 into the Top Bar and Ladder Leg Supports A10.
- Align the holes and secure using the four sets of Pre-installed Hardware Aa3 that were previously removed.
- Remove two sets of Pre-installed Hardware Aa3 from the Ladder Legs A3. Attach the Cross Bar A6 onto both Ladder Legs A3 using the two sets Pre-installed Hardware Aa3.


### Legs (A5) Assembly

- Remove four sets of Pre-installed Hardware Aa2 from both Legs A5. Insert the Leg A5 (labeled A) into the socket of the Top Bar and Leg Support A11 (labeled A). Repeat the above procedure to install the other Leg A5 (labeled B) into the side of the Top Bar and Leg Support A11 (labeled B).
- Align the holes and secure the Legs A3 using four sets of Pre-installed Hardware Aa2 that were previously removed.
- Remove two sets of Pre-installed Hardware Aa2 from both Legs A5. Attach the Cross Bar A7 onto both Legs A5 with the two sets of Pre-installed Hardware Aa2 that were previously removed.

### Ladder Legs (A4) Assembly


- Remove four sets of Pre-installed Hardware Aa3 from both sides of the Ladder Leg Support A10. Insert both Ladder Legs A3 into the Top Bar and Ladder Leg Supports A10.
- Align the holes and secure using the Legs A3 using the four sets of Pre-installed Hardware Aa3 that were removed.
- Remove two sets of Pre-installed Hardware Aa3 from the Ladder Legs A3. Attach the Cross Bar A6 onto both Ladder Legs A3 using the two sets Pre-installed Hardware Aa3.



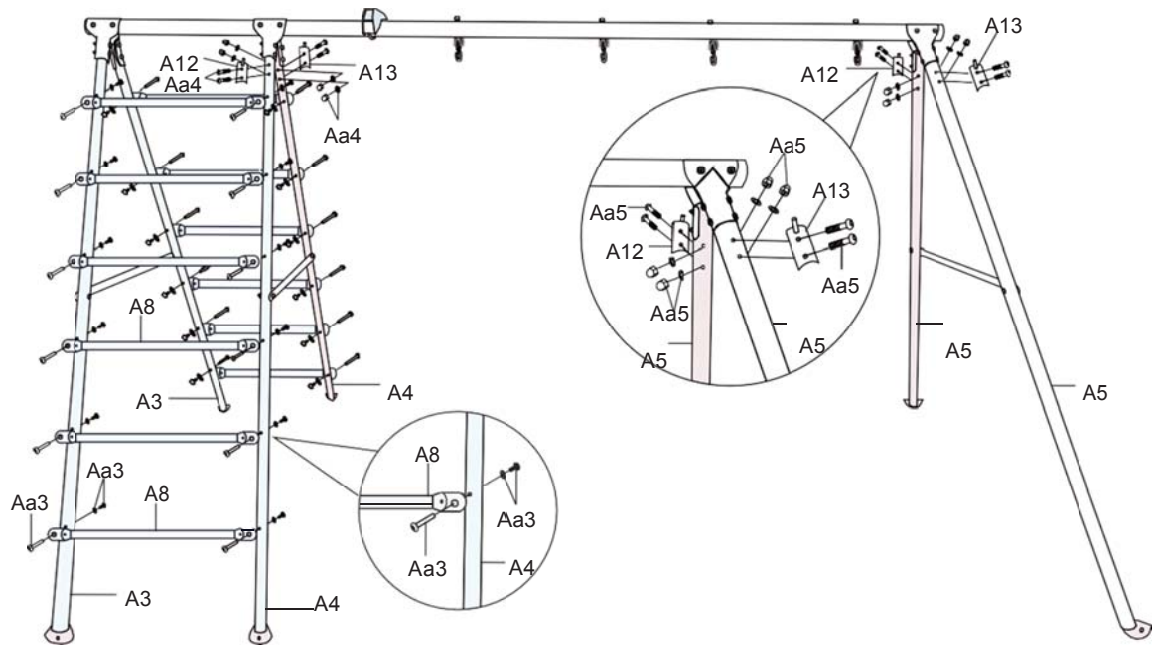


### Step 3

- Remove four sets of Pre-installed Hardware Aa5 from both Legs A5.
- Attach the Plastic Stick Holder A12 and A13 onto both Legs A5 with the four sets of Pre-installed Hardware Aa5 that were previously removed.
- Remove the four sets of Pre-installed Hardware Aa4 from both Ladder Legs A4.
- Attach the Plastic Stick Holder A12 and A13 onto both Ladder Legs A4 with the four sets of Pre-installed Hardware Aa4 that were previously removed.
- Remove the twenty-four sets of Pre-installed Hardware Aa3 from Ladder Legs A3 and A4.
- Attach twelve Climbing Bars A8 onto both Ladder Legs A3 and A4 using the twenty-four sets of Pre-installed Hardware Aa3 previously removed.

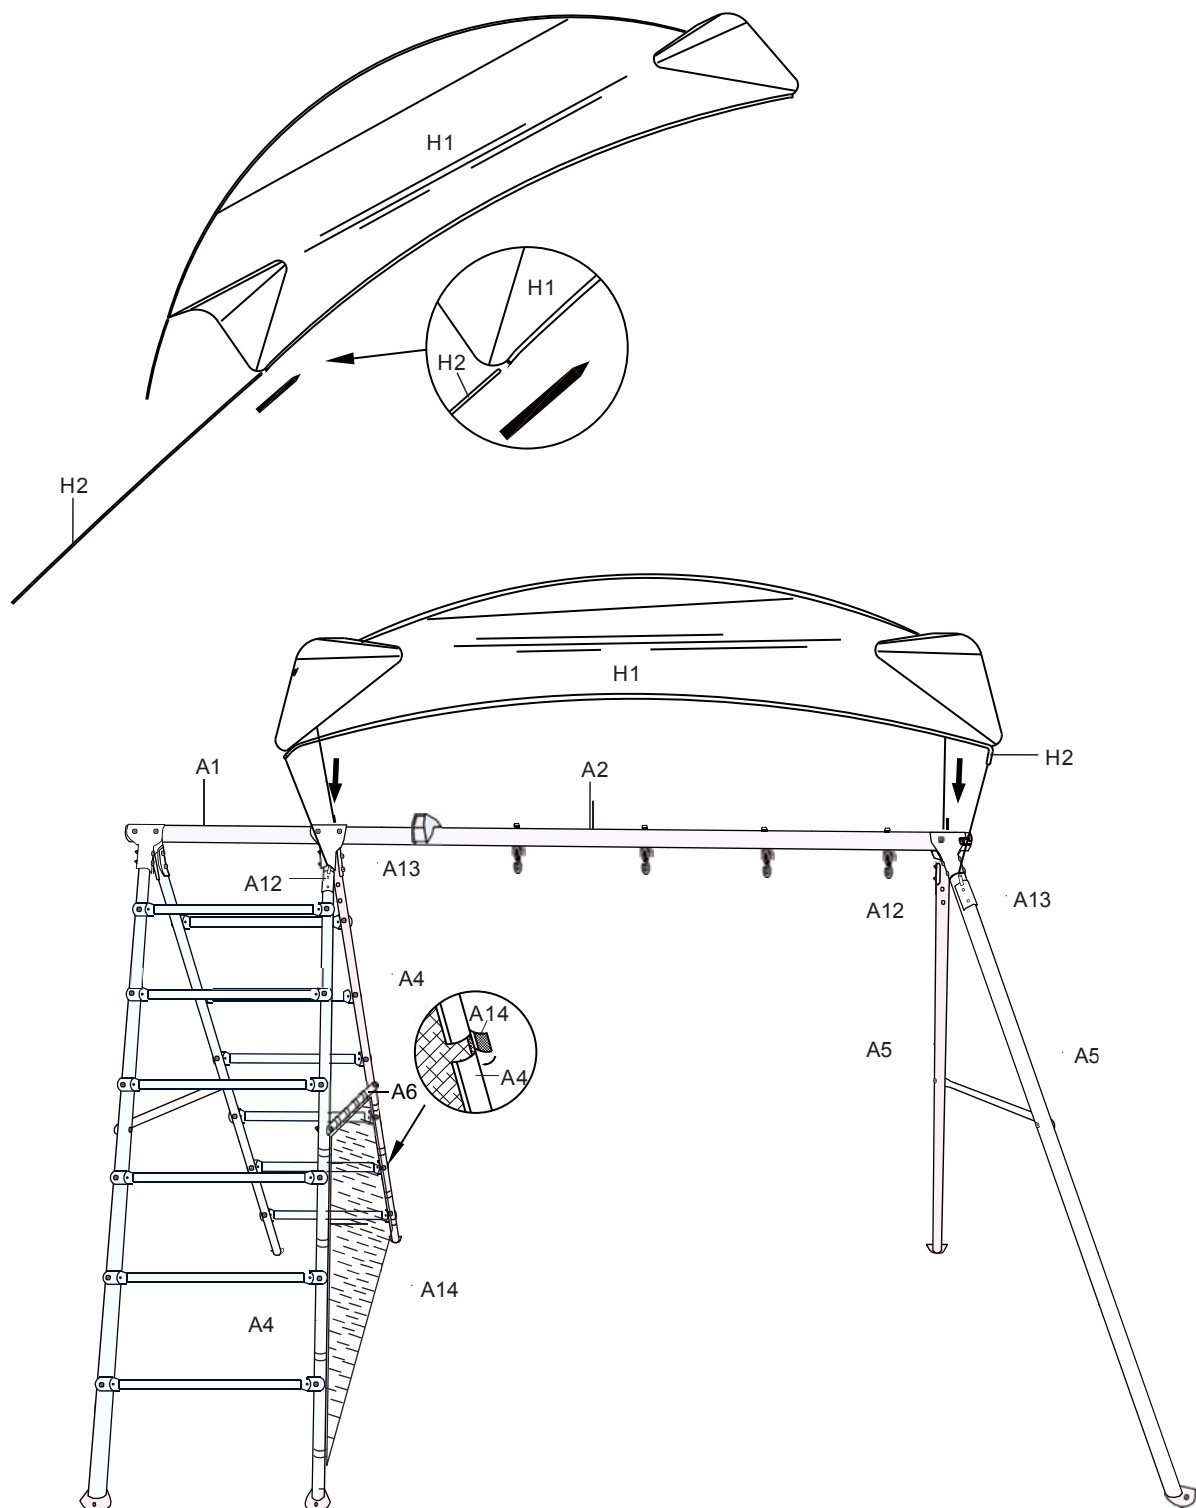

#### Step 4




- Insert The Plastic Sticks H2 into the holes on the Sunshade H1.
- Insert one end of the Plastic Stick H2 onto the tube of the Plastic Stick Holder A13 on Leg A5 and the other end of the Plastic Stick H2 onto the tube of the Plastic Stick Holder A12 on the Ladder Leg A4.
- Insert the other Plastic Stick H2 onto the tube of the Plastic Stick Holder A12 on the Leg A5 and the other end of the Plastic Stick H2 onto the tube of the Plastic Stick Holder A13 on the Ladder Leg A4.
- Attach the Protective Net A14 onto the Cross Bar A6 and both Ladder Legs A4 with the Velcro straps.

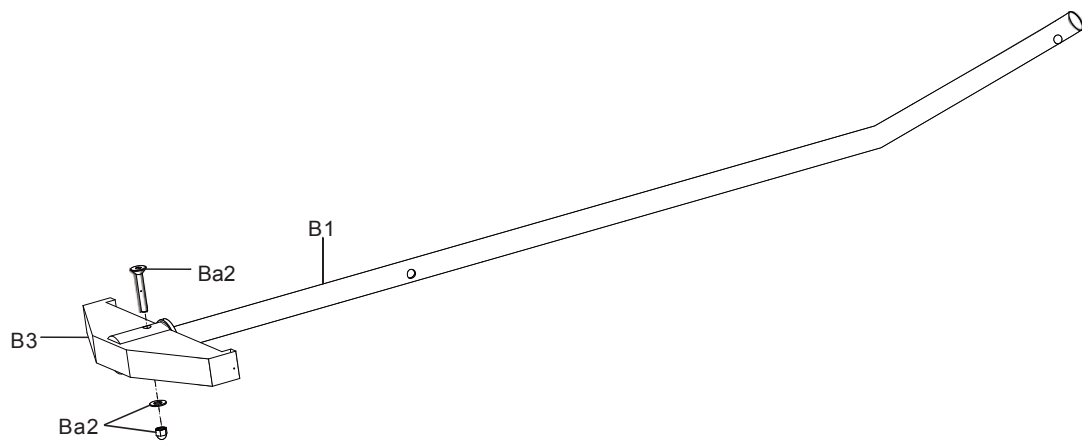

### Step 5


- Remove one set of the Pre-installed Hardware Ba2 from Glider Vertical Pole B1.
- Insert the Glider Vertical Pole B1 into the hole on Foot Rest B3.
- Align the hole and secure by using the set of Pre-installed Hardware Ba2 that was previously removed.
- Repeat this step for the other Glider Vertical Pole B1 and Foot Rest B3

.....

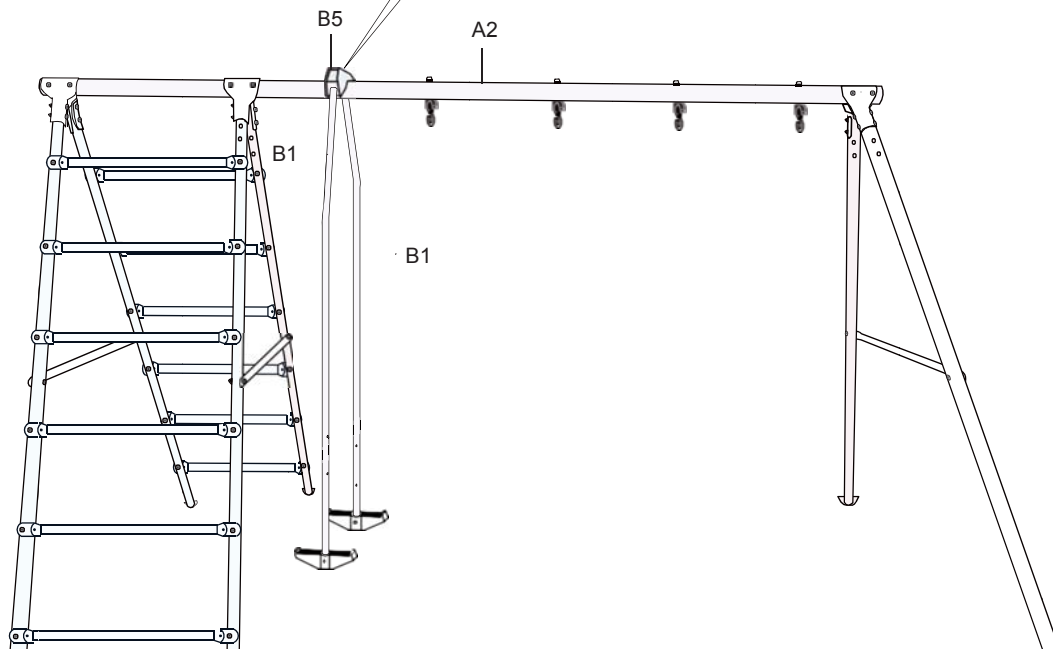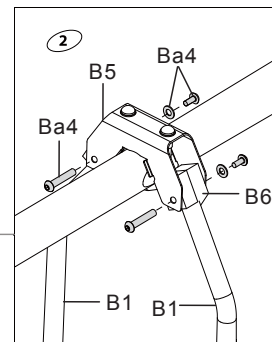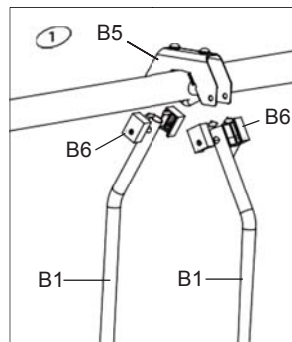


### Step 6

- Remove two sets of Pre-installed Hardware Ba4 from the Glider Attachment B5.
- Install one set of Glider Vertical Pole Caps B6 onto the top end of the Glider Vertical Pole B1.
- Install the Glider Vertical Pole B1 onto the Glider Attachment B5. Align the holes and secure using the set of Pre-Installed Hardware Ba4 that was previously removed.
- Repeat the steps above to install the Glider Pole B1.

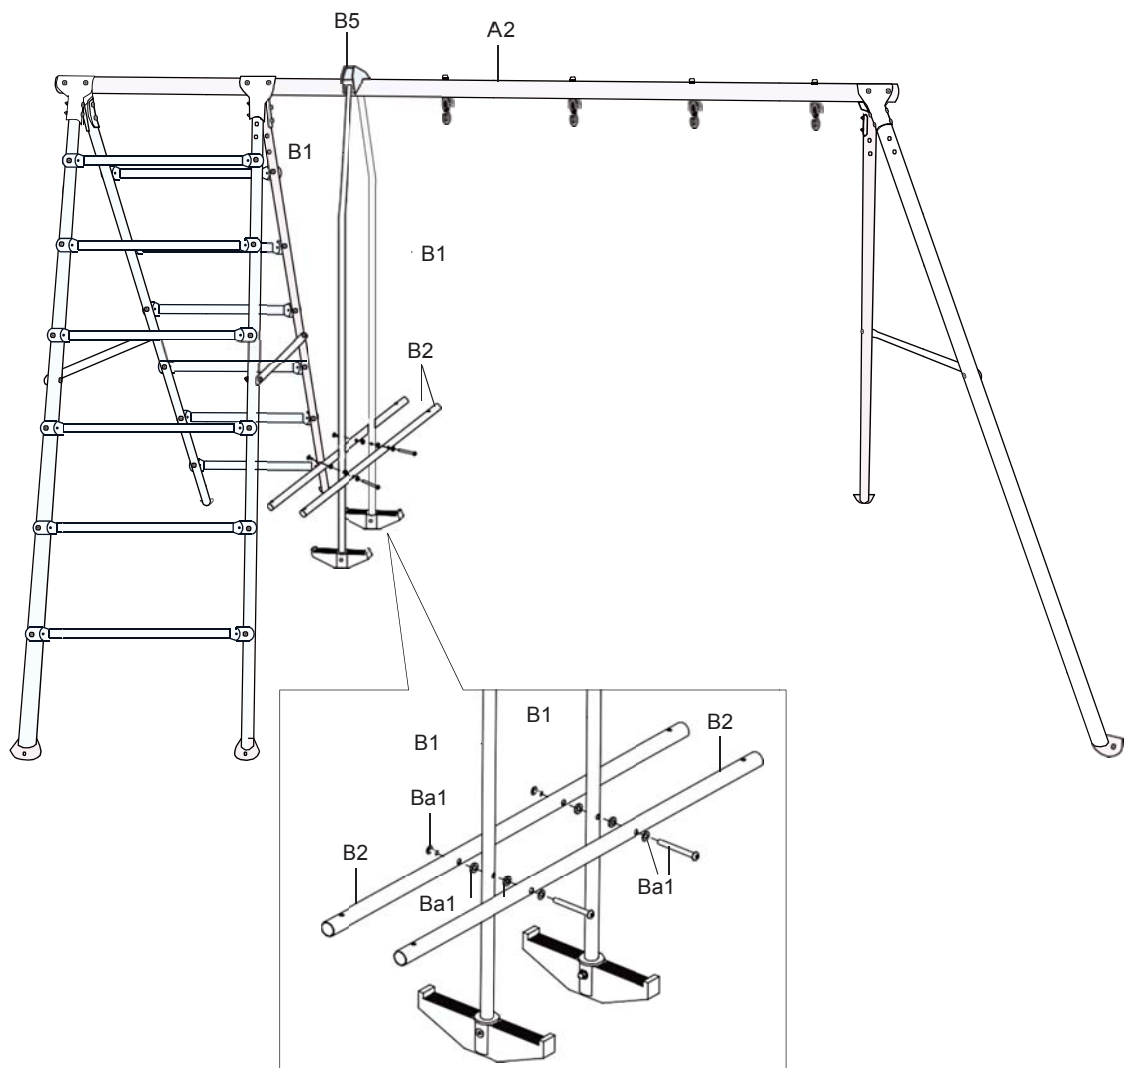

### Step 7


- Remove two sets of Pre-installed Hardware Ba1 from both Glider Vertical Poles B1.
- Attach both Glider Horizontal Poles B2 onto both Glider Vertical Poles B1 using the two sets of Pre-installed Hardware Ba1 that were removed.

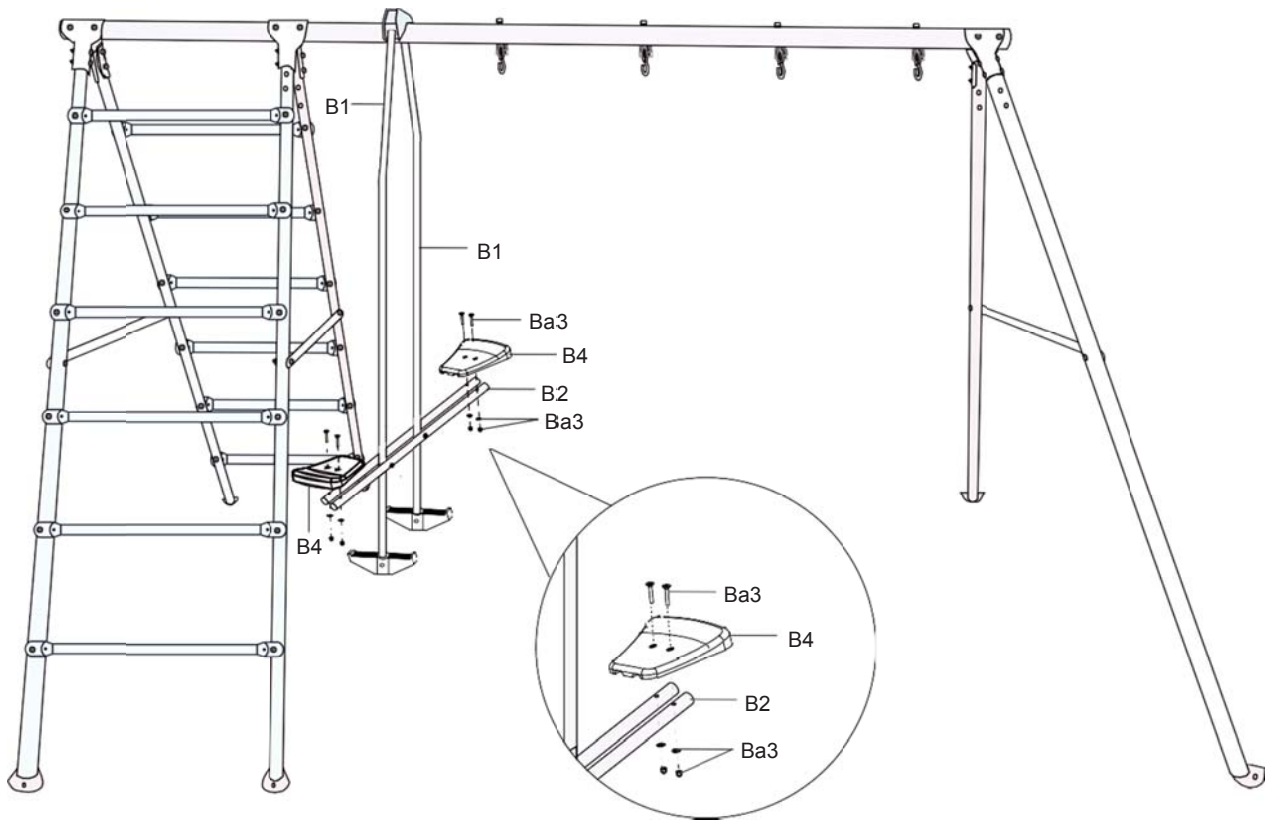

### Step 8


- Remove four sets of Pre-installed Hardware Ba3 from both Glider Horizontal Poles B2.
- Attach both Glider Seats B4 onto the Glider Horizontal Poles B2 using the four sets of Pre-installed Hardware Ba3 that were removed.

.....

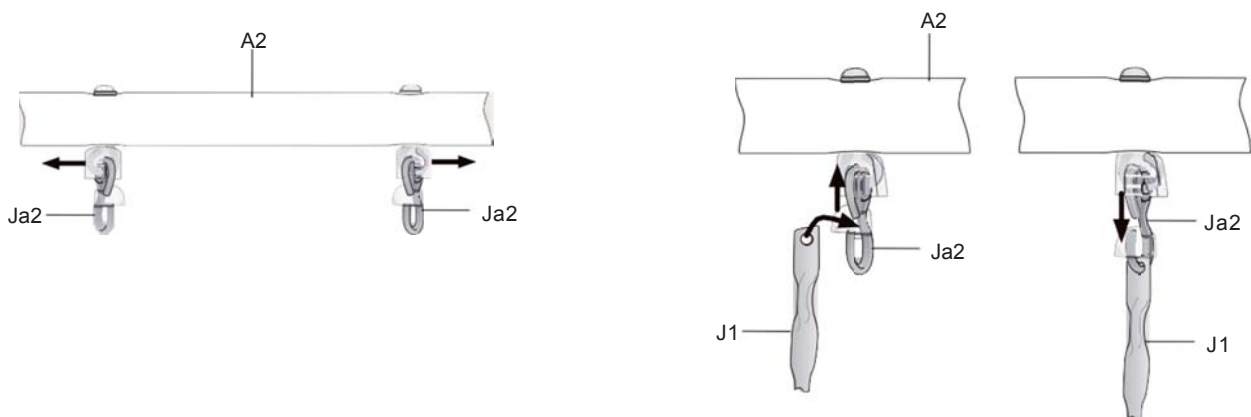

### Step 9

- Hang the Swing Chain J1 in place from the Eye Bolts Ja2 on the Top Bar A2.

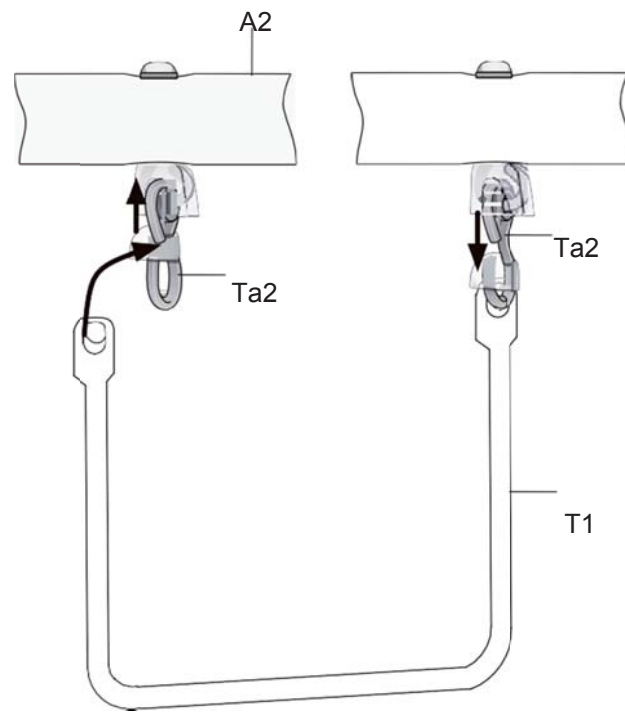

### Step 10

- Hang the Trapeze Tube T1 in place from the Eye Bolts Ta2 on the Top Bar A2.





# ANCHOR INSTALLATION

You may either anchor the feet in hard soil or if your soil is soft (sand, etc.), you may use the Anchor (A9) to secure the playground. If you wish to permanently secure your swing set, setting the legs in concrete secured by a brick or gravel bed is recommended. Ensure equipment is firmly anchored. When cementing equipment, bury the legs about three inches below the ground. This will ensure sufficient space remains under the swings. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface or below ground level to prevent tripping. Be sure the swing set is located on level ground.


## For Soil Ground Installation:

Turn the Anchor A9 into the ground until only the hooked end is above the ground next to the leg. Insert the hooked end into the bottom opening of the leg.

Ensure that the hooked end is secure in the leg opening.

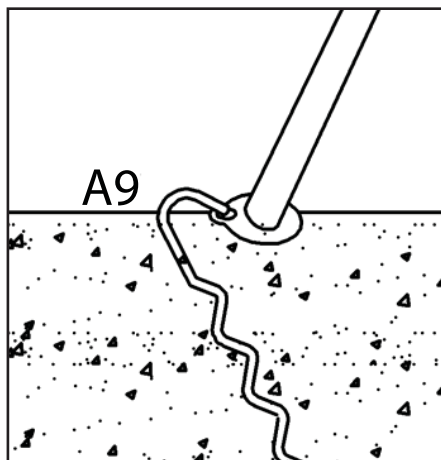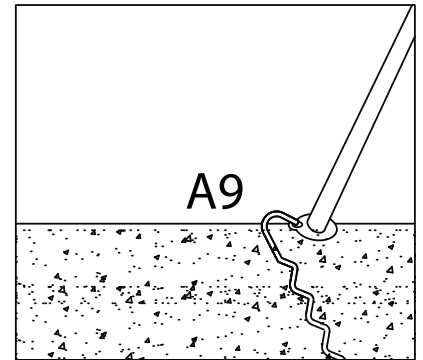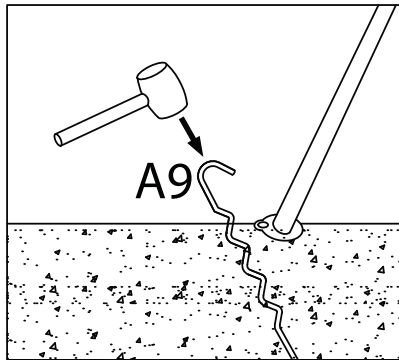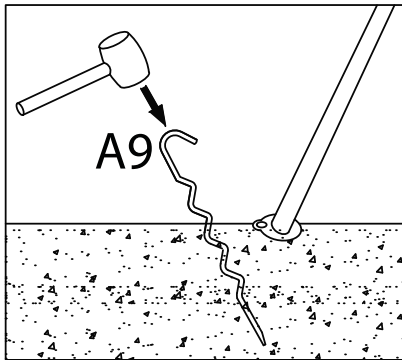

**Correct**

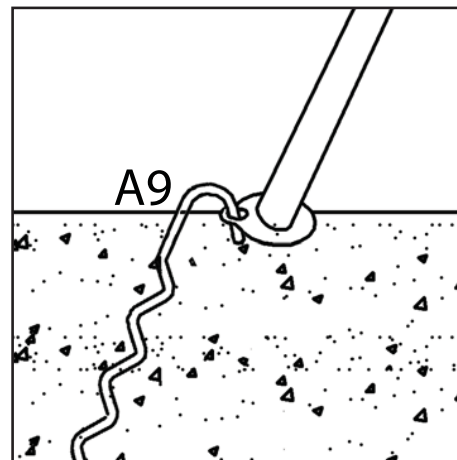


**Incorrect**


**When turning the Anchor A9 into the ground, please make sure the anchor is roughly Perpendicular to the playground feet.**

### For Concrete Ground Installation:

- If the swing set is set up on grounds with sandy soil, it must be anchored with concrete footing (concrete not included).
- Dig holes around swing leg tube as shown below in drawing. As you dig down and create a cylindrical hole, you should use a shovel to carve out the lower part of the hole, to create a larger diameter hole at the bottom.
- Place 2 inch high brick or 2 inches of gravel bed as shown in drawing below.
- Use about 45lb of concrete per leg.
- Cover concrete with dirt and protective surface material.
- Allow about 6-7 days for concrete to dry properly.

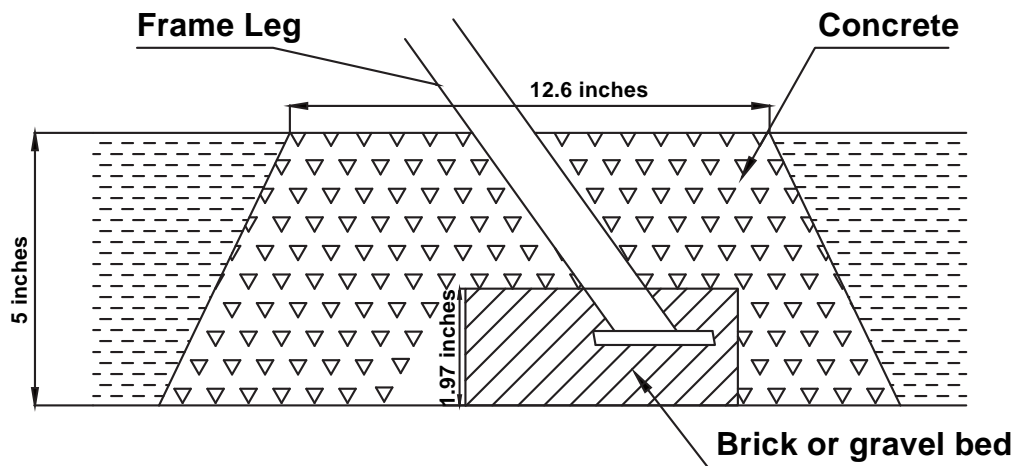

**Note:** The maximum fall height for this product is 6 feet. The minimum ground clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

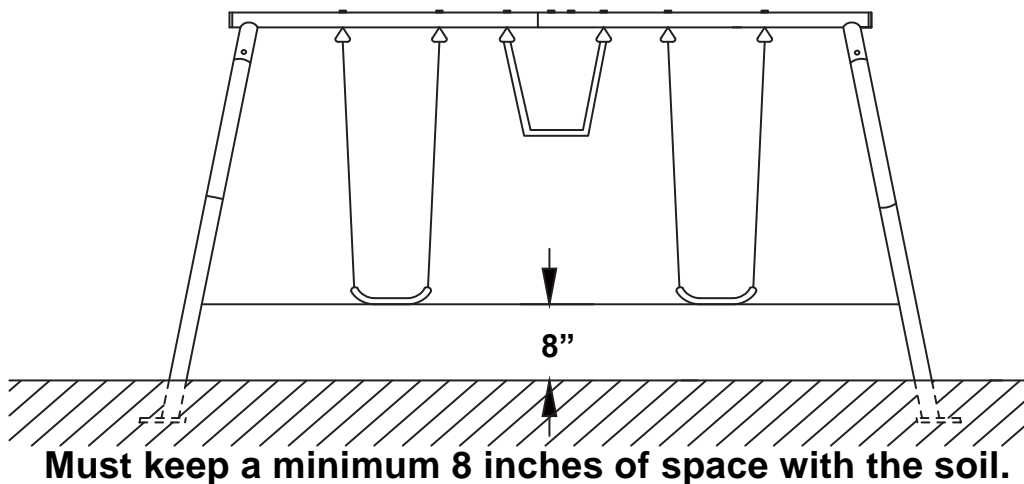

**Warning:** Please bury the legs of the swing set as per instruction. If the swing set is used without proper anchoring, it may be dangerous and may tilt over.

**This play ground received ASTM F2276 and CPSIA certification.**



# Paradigm Health & Wellness, Inc.

EMAIL THIS FORM WITH YOUR RECIEPT OF PURCHASE TO  
**Service@paradigmhw.com** \*

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

TELEPHONE: (Day) \_\_\_\_\_

(Night) \_\_\_\_\_

SERIAL#: \_\_\_\_\_

MODEL#: \_\_\_\_\_

PURCHASE DATE: \_\_\_\_\_

PLACE OF PURCHASE: \_\_\_\_\_

PART #	DESCRIPTION	QTY

***“YOUR ORDER WILL BE PROCESSED WITHIN 3 BUSINESS DAYS”***

***\* This form can also be faxed in Fax #: 626-810-2166***