

OWNER'S MANUAL



H-Class 410 Smart Technology Recumbent Bike

Model 6150

The specifications of this product may vary from this photo and are subject to change without notice.
IRONMAN, IRONMAN TRIATHLON and M-DOT are registered trademarks of World Triathlon Corporation.
This product is licensed by the World Triathlon Corporation.

TABLE OF CONTENTS

SERVICE	4
LABEL PLACEMENT	5
PRODUCT SAFETY	6
OVERVIEW DRAWING	7
PARTS LIST	8
HARDWARE AND TOOLS	11
ASSEMBLY	12
ADJUSTMENT	21
COMPUTER	23
TROUBLE SHOOT & MAINTENANCE.....	31
WARM UP	32
WARRANTY	33
FAX FORM	34

IMPORTANT: FOR NORTH AMERICA ONLY

**To request product service and order replacement parts, please call our customer service department at:
1-844-641-7922**

Monday through Friday, 8:00 AM-5:00 PM Pacific Standard Time,
or email us at: service@paradigmhw.com
Please visit our website at www.paradigmhw.com.

Please have the following information ready when requesting for service:

Your name
Phone number
Model number
Serial number
Part number
Proof of Purchase

Before returning this product to the store please contact customer service at the contact number.

Paradigm Health & Wellness, Inc.
1189 Jellick Ave
City of Industry, CA 91748 USA

LABEL PLACEMENT

⚠ CAUTION (Model 6150)

The Crank will be damaged if the Right or Left Bolts are not tightened as per below instructions!

- Tighten Right Pedal (G-R) Into the Right Crank Clockwise ↻
- Tighten Left Pedal (G-L) Into the Left Crank Counter Clockwise ↻

⚠ ATTENTION (N° 6150)

La manivelle pourrait être endommagée si les boulons droit ou gauche ne sont pas serrés selon les instructions ci-dessous.


- Serrez le pédale droit (G-R) dans la manivelle droite dans le sens horaire ↻
- Serrez le pédale gauche (G-L) dans la manivelle gauche dans le sens antihoraire ↻

⚠ WARNING

Maximum weight capacity is 300 lbs.

⚠ AVERTISSEMENT

Le poids maximum pour ce produit est 136 kgs.

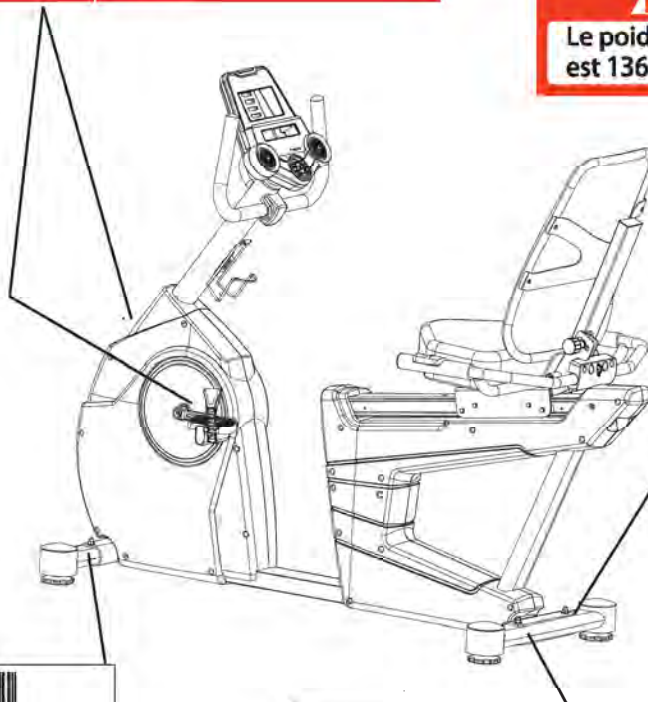

114231615000001

Serial number/Numéro de série:

MADE IN CHINA/FABRIQUE EN CHINE

IRONMAN

For customer assistance call:

1-844-641-7922

8 am - 5 pm PST

Mon - Fri

Pour le service à la clientèle composer le:

1-844-641-7922

Du lundi au vendredi

8:00 h - 17 h (HNP)


Basic precautions should always be followed, including the following safety instructions when using this equipment. Read all instructions before using this equipment.

1. Read all the instructions in this manual and do warm up exercises before using this equipment.
2. Before exercising and to avoid injuring your muscles, perform warm-up exercise for each muscle group is highly recommended. Please refer to Warm Up section of the Owner's Manual.
3. Please make sure all components are not damaged and in working order before use. This equipment should be placed on a flat surface while in use. Using a mat or other material on the ground is recommended.
4. Please wear proper clothes and shoes when using this equipment; do not wear clothes that might catch in any part of the equipment.
5. Do not attempt any maintenance or adjustments other than those described in this manual. Should any problems arise, discontinue use and consult with customer service at Paradigm.
6. Keep dry - do not operate in wet or moist condition.
7. Do not use the equipment outdoors.
8. This equipment is for household use only.
9. Only one person should be on the equipment at any time.
10. Keep children and pets away from the product while in use.
11. This machine is designed for adults only.
12. This product requires a minimum of 6 feet of space for safe operation.
13. If you feel any chest pains, nausea, dizziness, or shorness of breath, you should stop exercising immediately and consult your physician before continuing.
14. **The maximum weight capacity for this product is 300 lbs/136 kgs.**

WARNING: Before beginning any exercise program consult your physician. This is especially important for the people who are over 35 years old or who have pre-existing health problems. Read all instructions before using any fitness equipment.

CAUTION: Read all instructions carefully before operating this product. Retain this Owner's Manual for future reference.

OVERVIEW DRAWING

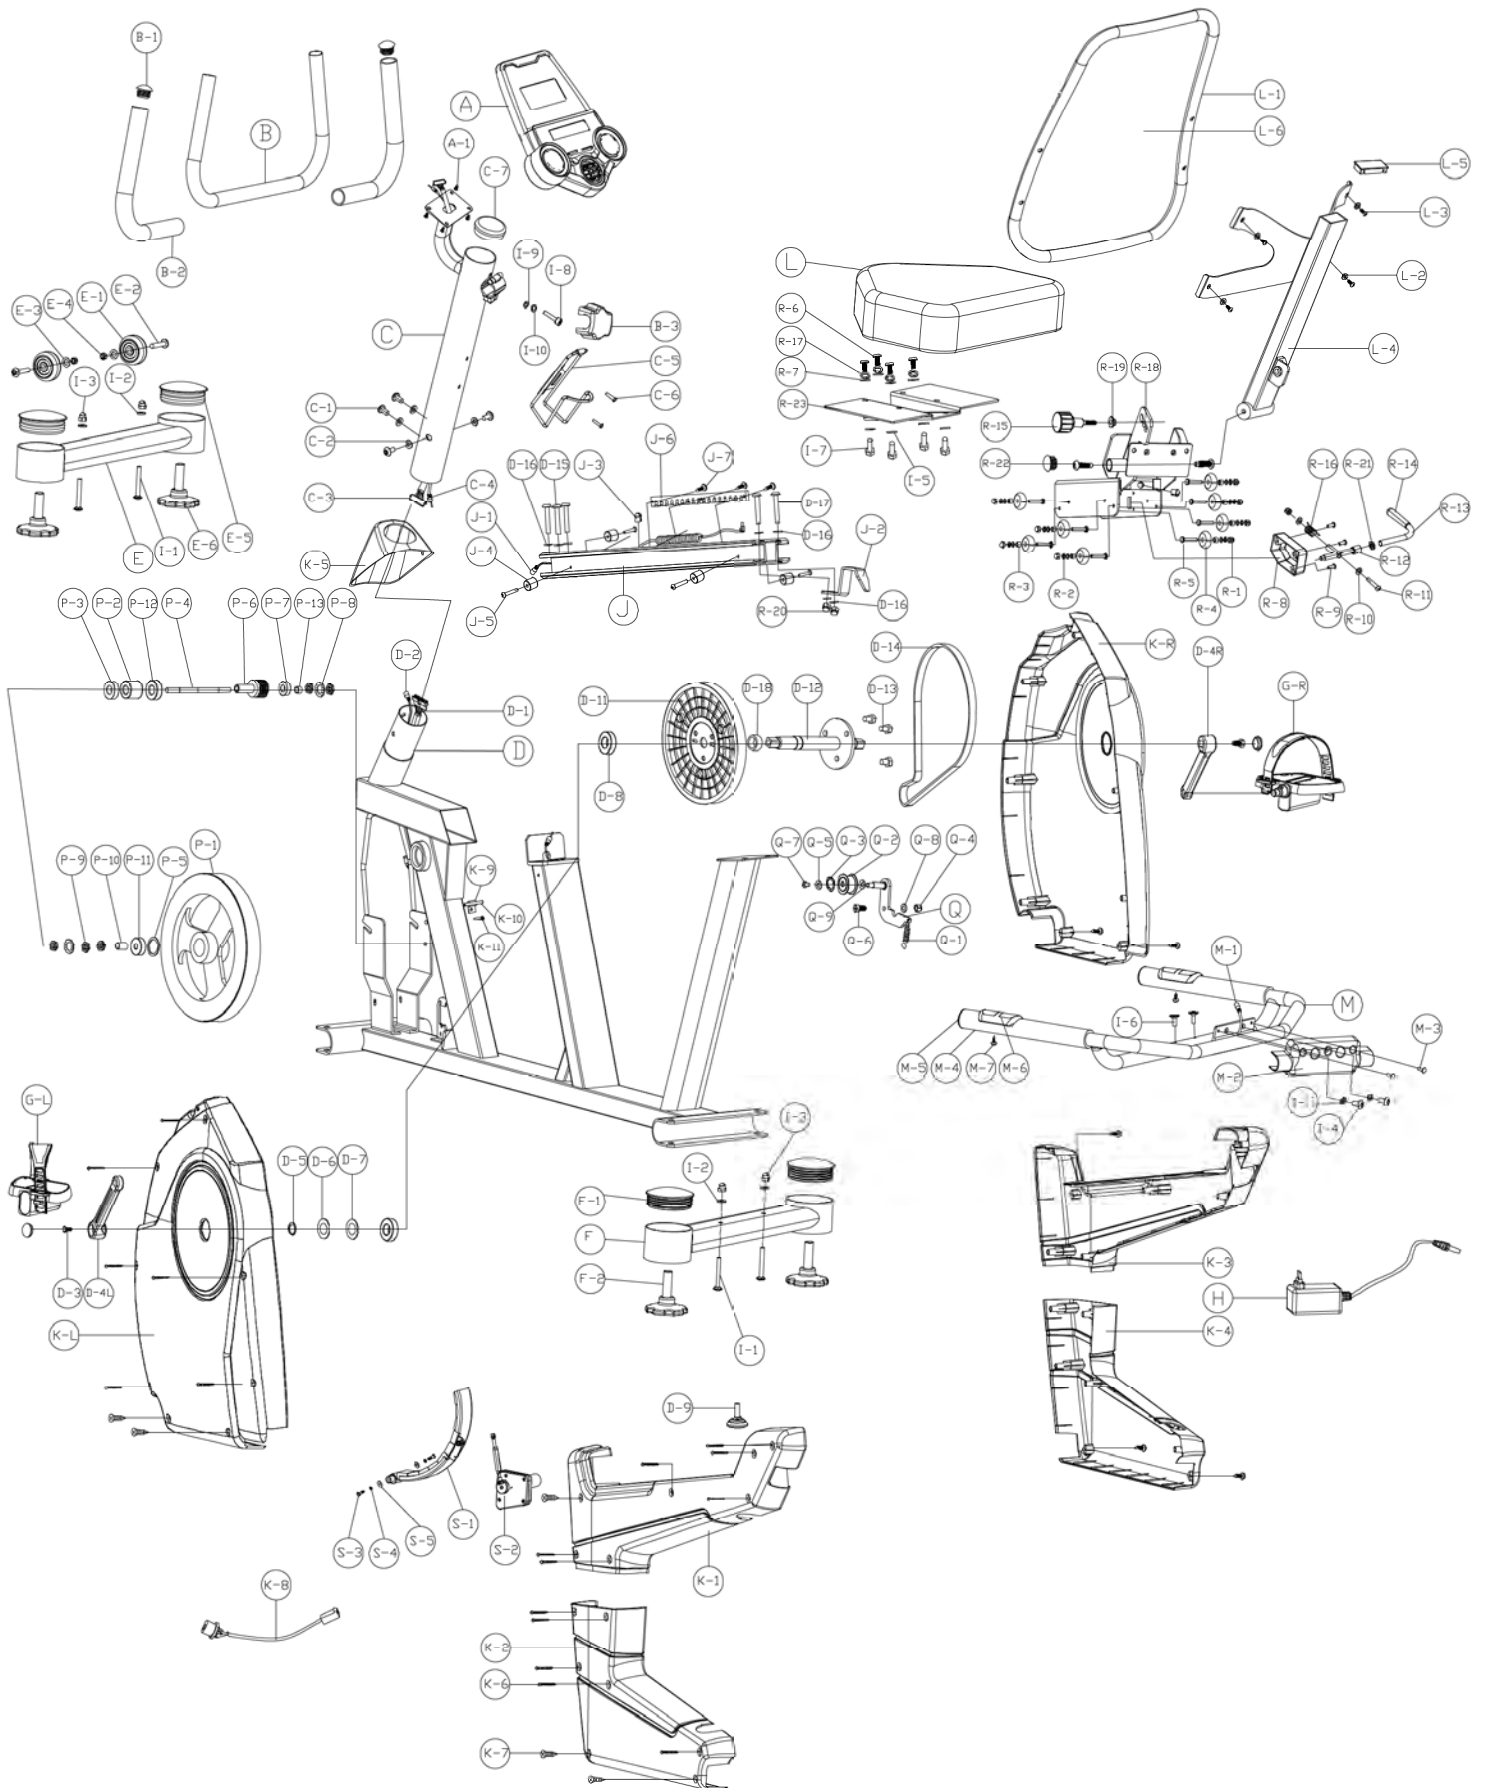

PART LIST


No.	Description	Qty	No.	Description	Qty
A	Computer	1	D-18	Bushing $\phi 22 \times \phi 17 \times 7.5 \text{mm}$	1
A-1	Screw	3	E	Front stabilizer	1
B	Handlebar	1	E-1	Transportation wheel $\phi 70 \times 24 \text{w}$	2
B-1	End cap	2	E-2	Screw M8xP1.25x40L	2
B-2	Foam grip	2	E-3	Flat washer $\phi 8 \times \phi 19 \times 1 \text{t}$	2
B-3	Cover for handlebar	1	E-4	Nylon nut M8	2
C	Handlebar post	1	E-5	Foot cap for front stabilizer	2
C-1	Bolt	4	E-6	Adjustable cap $\phi 80 \times 30 \text{L}$	2
C-2	Curve Washer	4	F	Rear stabilizer	1
C-3	Cable wire (upper)	1	F-1	Foot cap for rear stabilizer	2
C-4	Hand pulse wire (upper)	1	F-2	Adjustable cap $\phi 80 \times 30 \text{L}$	2
C-5	Water bottle holder	1	G-L/R	Pedal (R+L) 9/16"	1
C-6	Screw	2	H	Adaptor	1
C-7	Upper cover for handlebar post	1	I-1	Carriage bolt M8xP1.25x60L	4
D	Main frame	1	I-2	Flat washer $\phi 8 \times \phi 19 \times 2 \text{t}$	4
D-1	Cable wire (lower)	1	I-3	Nut M8	4
D-2	Hand pulse wire (middle)	1	I-4	Screw M8*P1.25*16L	2
D-3	Nylon screw	2	I-5	Flat washer $\phi 6 \times \phi 16 \times 2 \text{t}$	4
D-4L	Crank arm (L)	1	I-6	Screw M8*P1.25*35L	2
D-4R	Crank arm (R)	1	I-7	Hex. Screw M6*P1.0*20L	4
D-5	C-type ring	1	I-8	Screw M7xP1.0x30L	1
D-6	Flat washer	1	I-9	Flat washer $\phi 7 \times \phi 12 \times 1 \text{t}$	1
D-7	Wave washer	1	I-10	Spring washer $\phi 7 \times 2 \text{t}$	1
D-8	Bearing	2	I-11	Flat washer $\phi 8 \times \phi 16 \times 2 \text{t}$	2
D-9	Adjustable cap	1	J	Rail	1
D-11	Pulley	1	J-1	Hand pulse wire (middle)	1
D-12	Axle set	1	J-2	Rear handle	1
D-13	Hex. screw	3	J-3	Wire end cap	2
D-14	Belt	1	J-4	Stopper $\phi 20 \times 19$	4
D-15	Screw	3	J-5	Screw M5x25L	4
D-16	Flat washer	7	J-6	Rail controller	1
D-17	Screw	2	J-7	Screw 3/16" (#10)x3/4"	3

PART LIST

No.	Description	Qty	No.	Description	Qty
J	Rail	1	M-1	Hand pulse wire (lower)	1
J-1	Hand pulse wire (middle)	1	M-2	Handlebar Cover	1
J-2	Rear handle	1	M-3	Screw M5x10L	2
J-3	Wire end cap	2	M-4	Foam grip for seat handlebar φ23x240x5m/m	2
J-4	Stopper φ20*19	4	M-5	End cap	2
J-5	Screw M5x25L	4	M-6	Hand pulse set	2
J-6	Rail controller	1	M-7	Screw M4x20L	2
J-7	Screw 3/16" (#10)x3/4"	3	P-1	Flywheel φ250x32W	1
K-L	Left front cover	1	P-2	One way bearing	1
K-R	Right front cover	1	P-3	Bearing 6003RS	1
K-1	Left rear cover (upper)	1	P-4	Axle for flywheel	1
K-2	Left rear cover (lower)	1	P-5	Flat washer φ30xφ34x1t	1
K-3	Right rear cover (upper)	1	P-6	Small pulley	1
K-4	Right rear cover (lower)	1	P-7	Bearing 6900RS	1
K-5	Cover for handlebar post	1	P-8	Star washer φ10xφ17x1t	2
K-6	Screw M4x50L	16	P-9	Nut 3/8"-26x4.5t	5
K-7	Screw 3/16 " (#10) x3/4 "	12	P-10	Plastic bushing φ10xφ14x6mmL	1
K-8	DC wire	1	P-11	Bearing 6300RS	1
K-9	Sensor holder	1	P-12	Bearing 6203RS	1
K-10	Sensor box	1	P-13	Plastic bushing φ10xφ14x3mmL	1
K-11	Screw M4x10L	1	Q	Idler	1
L	Seat	1	Q-1	Spring for idler 35T	1
L-1	Frame for backrest	1	Q-2	Idler wheel	1
L-2	Flat washer φ6xφ13x1t	4	Q-3	Wave washer φ10.5xφ15x0.3t	2
L-3	Screw M5x16L	4	Q-4	Nylon nut M8	1
L-4	Backrest slider	1	Q-5	Flat washer φ10xφ14x1t	1
L-5	End cap 30x60	1	Q-6	Hex. Screw M8xP1.25x20L	1
L-6	Mesh for backrest	1	Q-7	Hex. Screw M6xP1.0x12L	1
L-7	Screw M5x12L	3	Q-8	Flat washer φ8.5xφ25x1t	1
L-8	Fixed plate of knob	1	Q-9	Flat washer φ6xφ13x1t	1
M	Seat handlebar	1	R-1	Nylon nut M6	9

PART LIST


No.	Description	Qty	No.	Description	Qty
R-2	Spring washer $\phi 6$	8	R-16	Spring	1
R-3	Bushing $\phi 6.2 \times \phi 9.2 \times 7L$	8	R-17	Spring washer $\phi 8 \times \phi 14 \times 2T$	4
R-4	Wheel for seat	8	R-18	Seat slider	1
R-5	Hex. Screw M6xP1.0x32L	8	R-19	Cone bushing $\phi 10 \times 8L$	1
R-6	Screw M8xP1.25x16L	4	R-20	Nylon nut M8	2
R-7	Flat washer $\phi 8 \times \phi 16 \times 2t$	4	R-21	Nut $\phi 14 \times 8W \times M10$	1
R-8	Cover for Handle	1	R-22	Screw M10*36L	2
R-9	Screw M5x8L	3	R-23	Seat Plate	1
R-10	Flat washer $\phi 6 \times \phi 13 \times 1t$	10	S-1	Magnetic set	1
R-11	Hex. Screw M6x50L	1	S-2	Gear box set	1
R-12	Handle Connection	1	S-3	Flat washer $\phi 6 \times \phi 13 \times 1t$	2
R-13	Handle	1	S-4	Spring washer $\phi 6$	2
R-14	Grip for handle	1	S-5	Hex. Screw M6xP1.0*16L	2
R-15	Knob for backrest	1			




I-1 Screw 4PCS



I-5 Flat Washer
Φ6*Φ16 *2T 4PCS

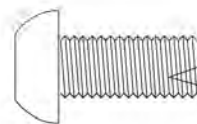


I-4 Screw 2PCS




I-8 Screw 1PCS




I-2 Curved Washer
Φ8*Φ9*2T
4PCS

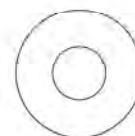

I-9 Flat Washer
Φ7*Φ12*1T
1PCS

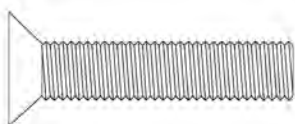


I-6 Screw M8*P1.25*35
2PCS




I-7 Hex.screw M6*P1.0*20L
4PCS



I-3 Acorn Nut for M8 Bolt
4PCS

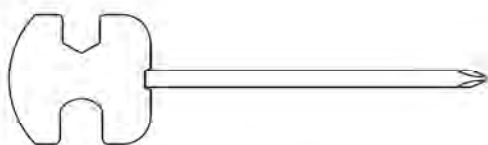

Screwdriver
1PCS

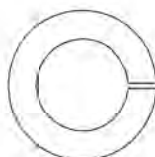


I-10 SpringWasher
Φ7*2T
1PCS



I-11 Flat Washer
Φ8*Φ16 *2T 2PCS




Allen Key
1PCS



N-Shape Wrench
1PCS

1. Remove Front Protection Bar

Loosen the Bolt and Washer with the Box Spanner provided, and remove the protection bar from the front bracket of the Main Frame. This protection bar is used only to protect the bracket during shipping and will not be installed.

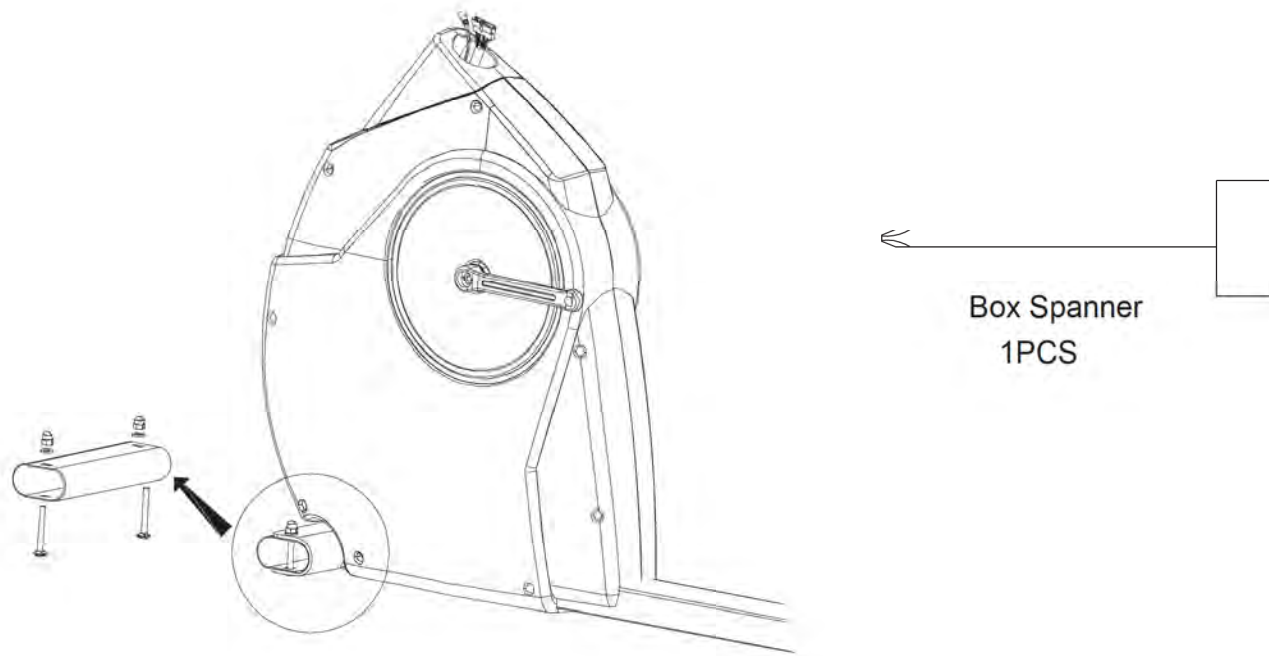


2. Front and Rear Stabilizer Installation

2.1 Front Stabilizer Installation.

Lift up the main frame (D) towards the front, and then align the Front Stabilizer (E) onto the front curve of the Main Frame (D). Attach two Carriage Bolts (I-1) and on the other ends of bolts with two Flat Washers (I-2) and two Acorn Nuts (I-3). Hold the Front Stabilizer (E) to the Main Frame (D) and use the Box Spanner and Screwdriver to tighten the two Screws (I-1), two Flat Washers (I-2) and two Acorn Nuts (I-3) until firm and secure.

2.2 Rear Stabilizer Installation.

Lift up the Main Frame (D) towards the end, and then align the Rear Stabilizer (F) onto the rear curve of the Main Frame (D). Attach Two Carriage Bolts (I-1) and on the other ends of bolts with two Flat Washers (I-2) and two Acorn Nuts (I-3). Hold the Rear Stabilizer (F) to the Main Frame (D) and use the Box Spanner and Screwdriver to tighten the two Screws (I-1), two Flat Washers (I-2) and two Acorn Nuts (I-3) until firm and secure.

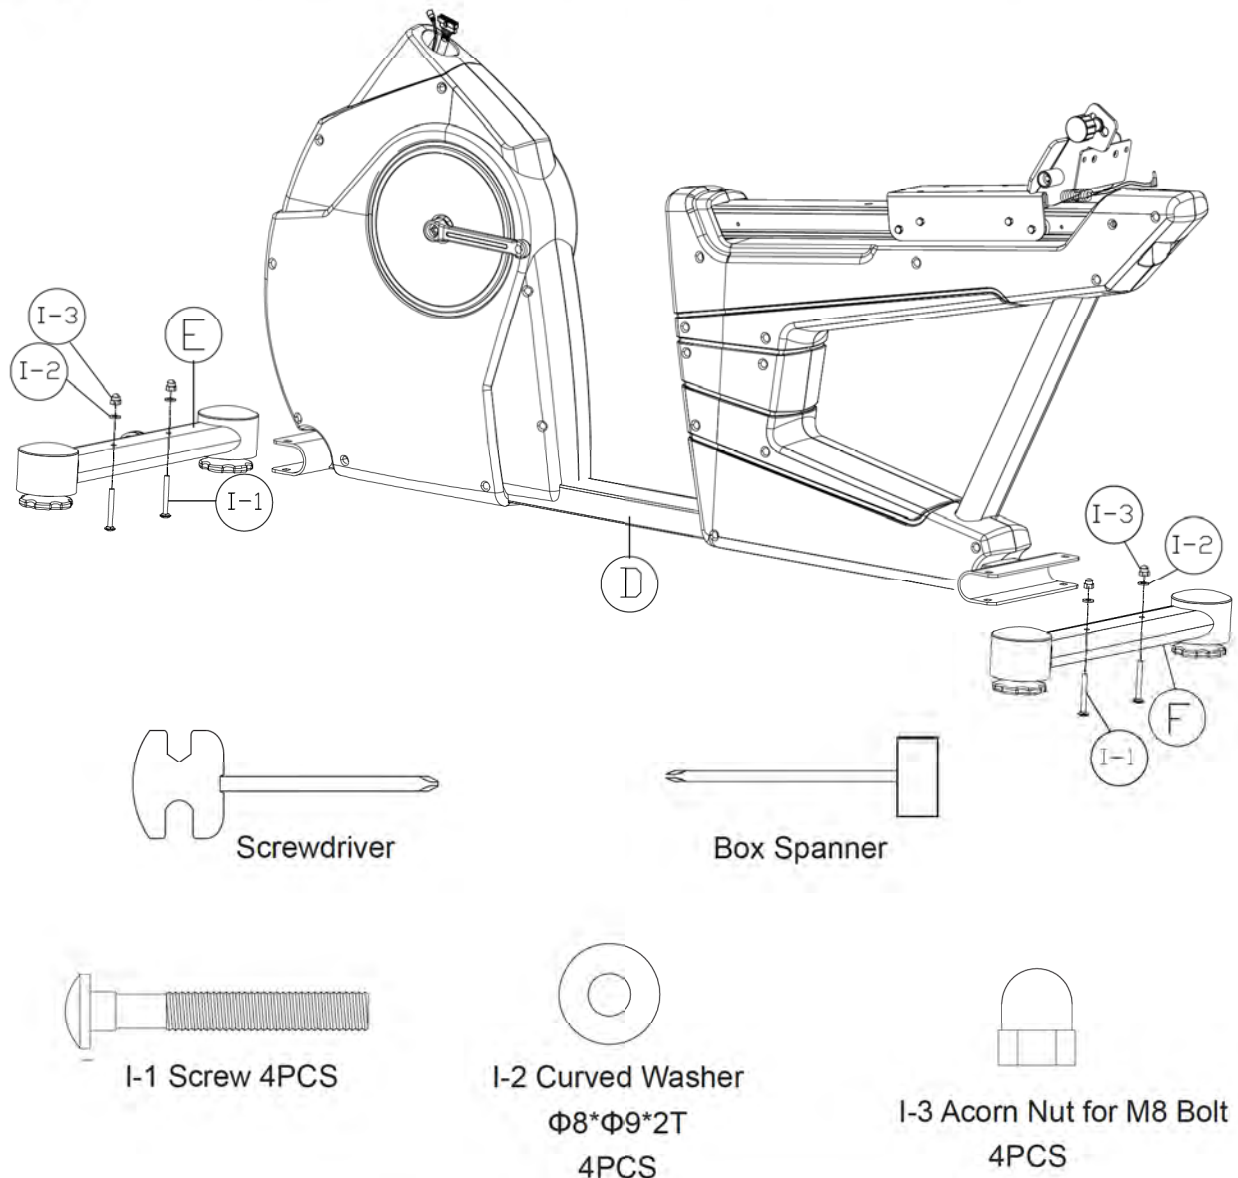

ASSEMBLY



3. Foot Pedals Installation

The Cranks and Foot Pedals are marked “R” for Right and “L” for Left.

Insert the pedal shaft of Left Foot Pedal (G-L) into threaded hole in the Left Crank (D-4L). Turn the pedal shaft by hand in the COUNTER-clockwise direction until snug.

Note: DO NOT turn the left pedal shaft in the clockwise direction, doing so will strip the threads.

Tighten the pedal shaft of Left Foot Pedal (G-L) with the Screw driver provided.
Insert pedal shaft of Right Foot Pedal (G-R) into threaded hole in Right Crank (D-4R). Turn the pedal shaft by hand in the clockwise direction until snug. Tighten pedal shaft of Right Foot Pedal (G-R) with the Screw driver provided.



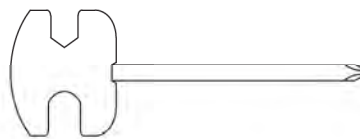
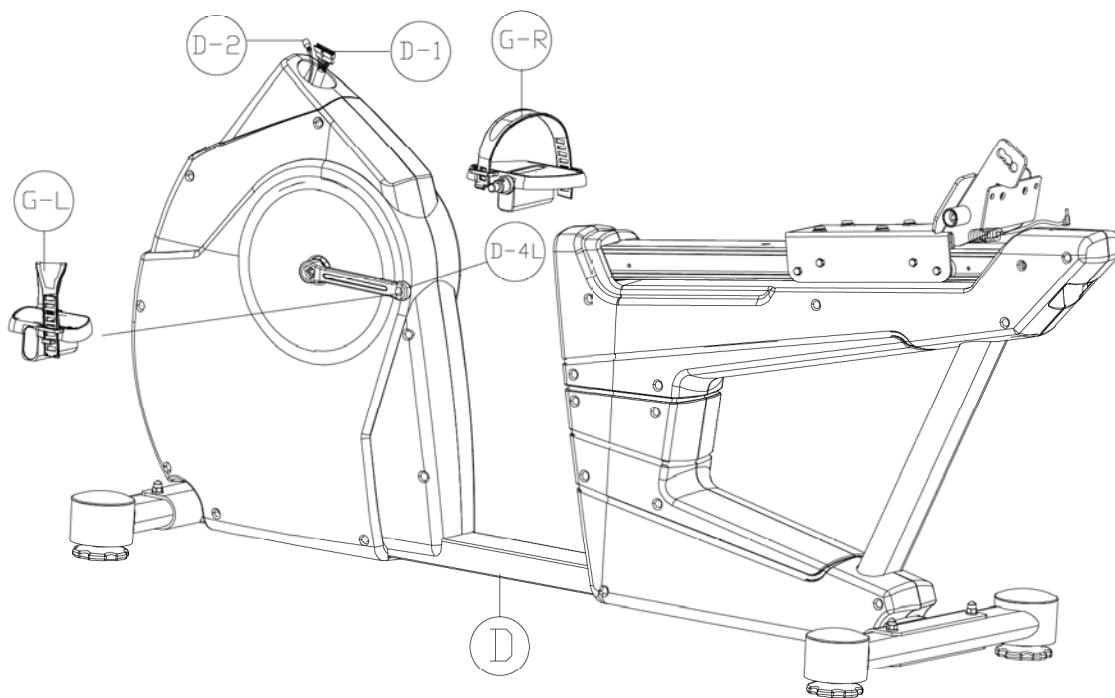


Screwdriver
1PCS



ASSEMBLY

4A. Seat Installation


Assemble the Seat Slider Handle (R-13) with Handle Connection (R-12) by Screwdriver.

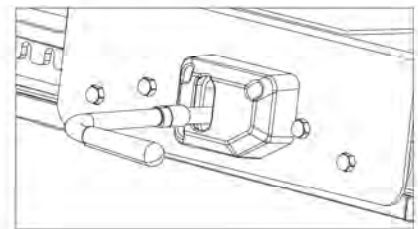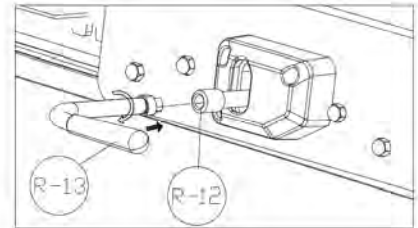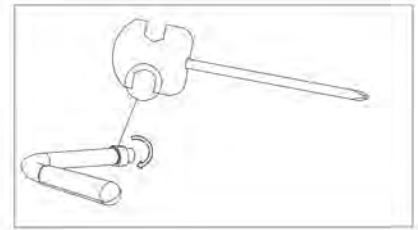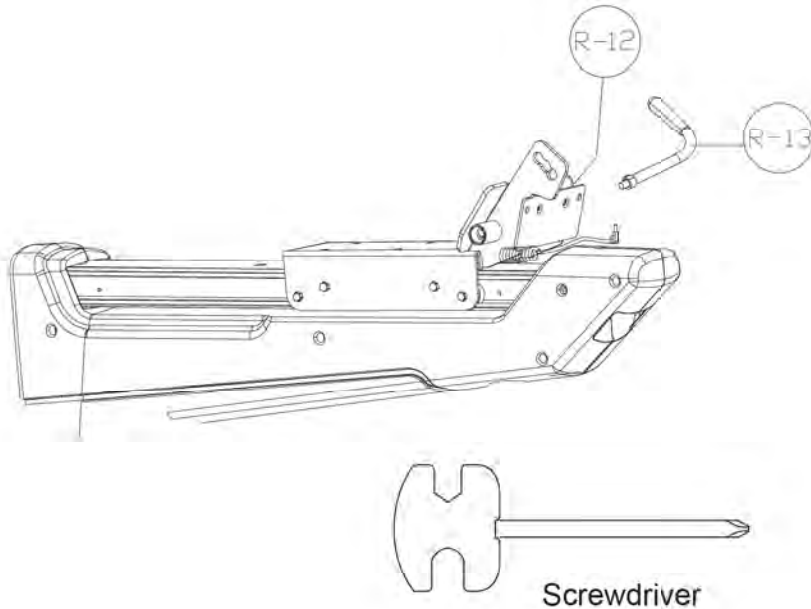


4B. Remove the pre-installed four Screws (R-6), four Flat Washers (R-7) and four Spring Washers (R-17) from the Seat Plate (R-23) and use them to attach the Seat Plate to the Seat Slider (R-18)

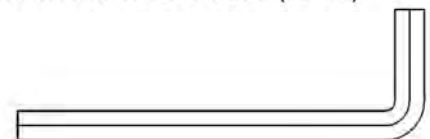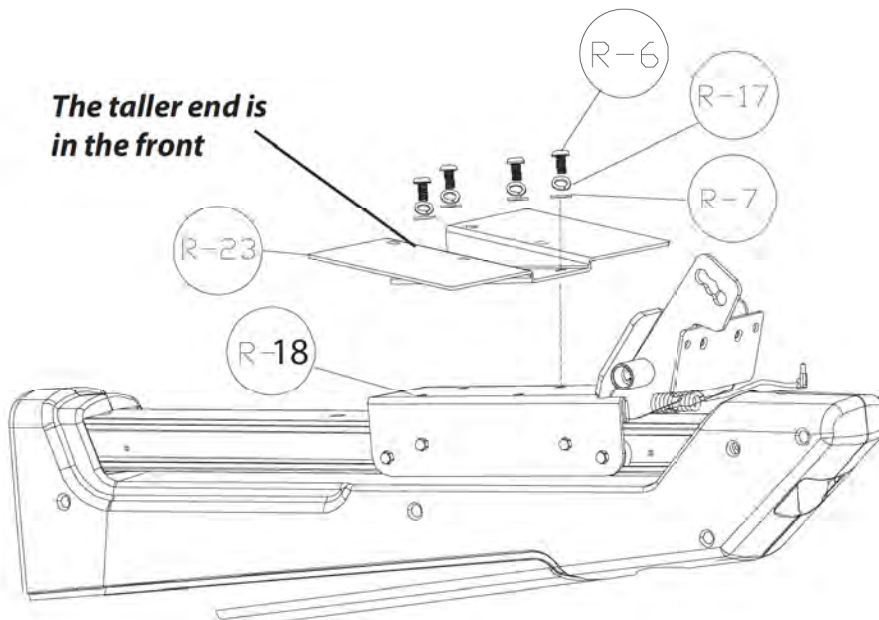

Allen Key



R-6 Screw M8x16
4 PCS

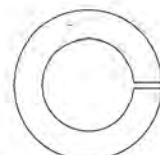


R-17 Spring Washer
4 PCS



R-7 Flat Washer
4 PCS



ASSEMBLY

4C. Attach the Seat (L) to Seat Plate (R-23) with four Hex. Screws (I-7) and four Flat Washers (I-5)

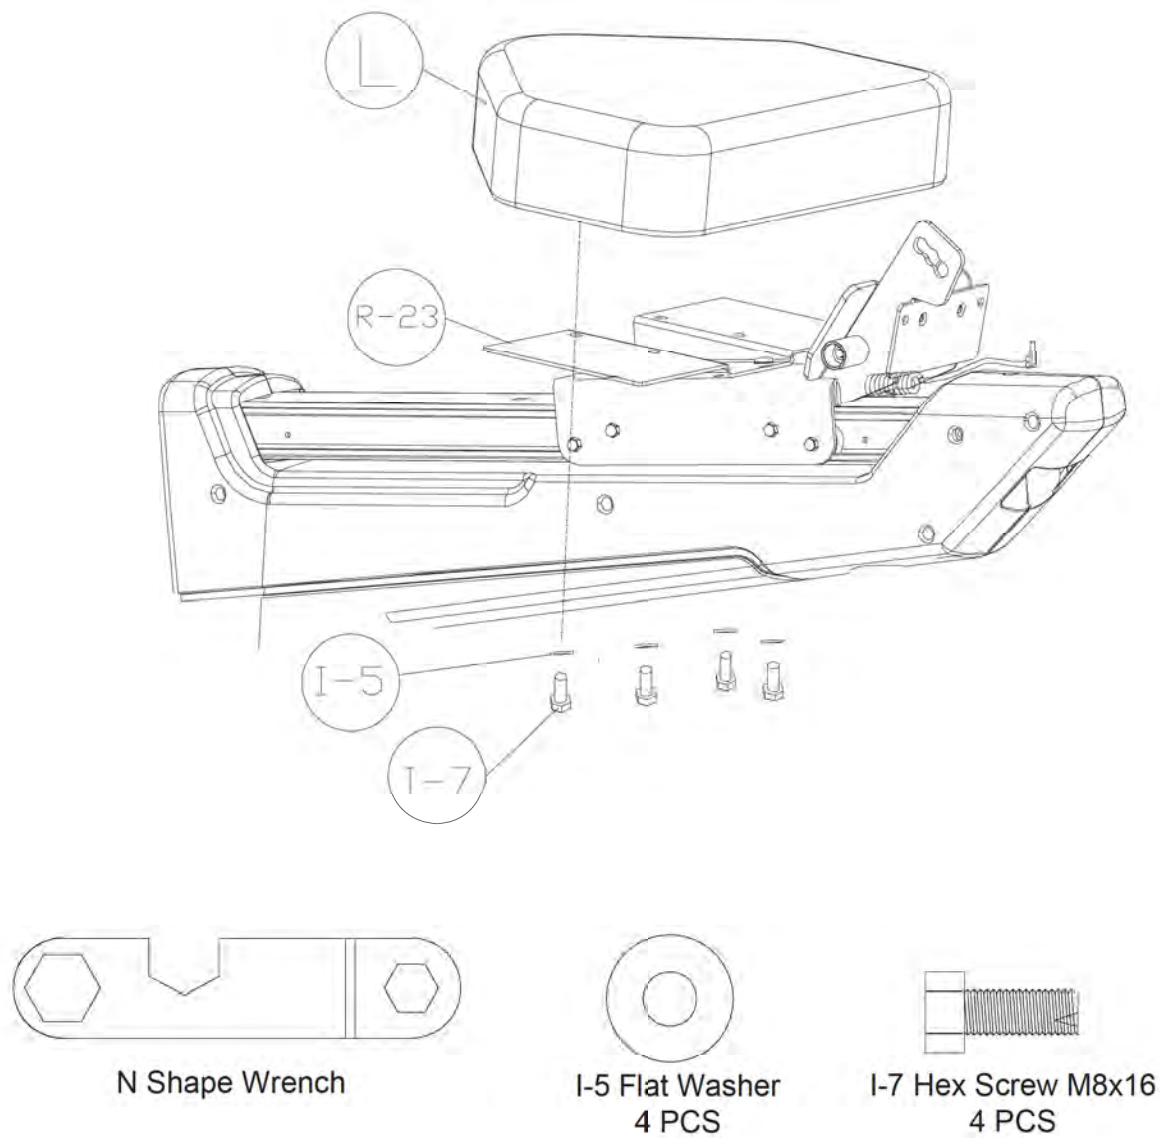

ASSEMBLY


4D. Attach the Handlebar Cover (M-2) onto the Seat Handlebar (M)
Attach the Seat Handlebar (M) with two Screws (I-4), two Flat Washers (I-11), and two Screws (I-6).

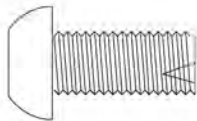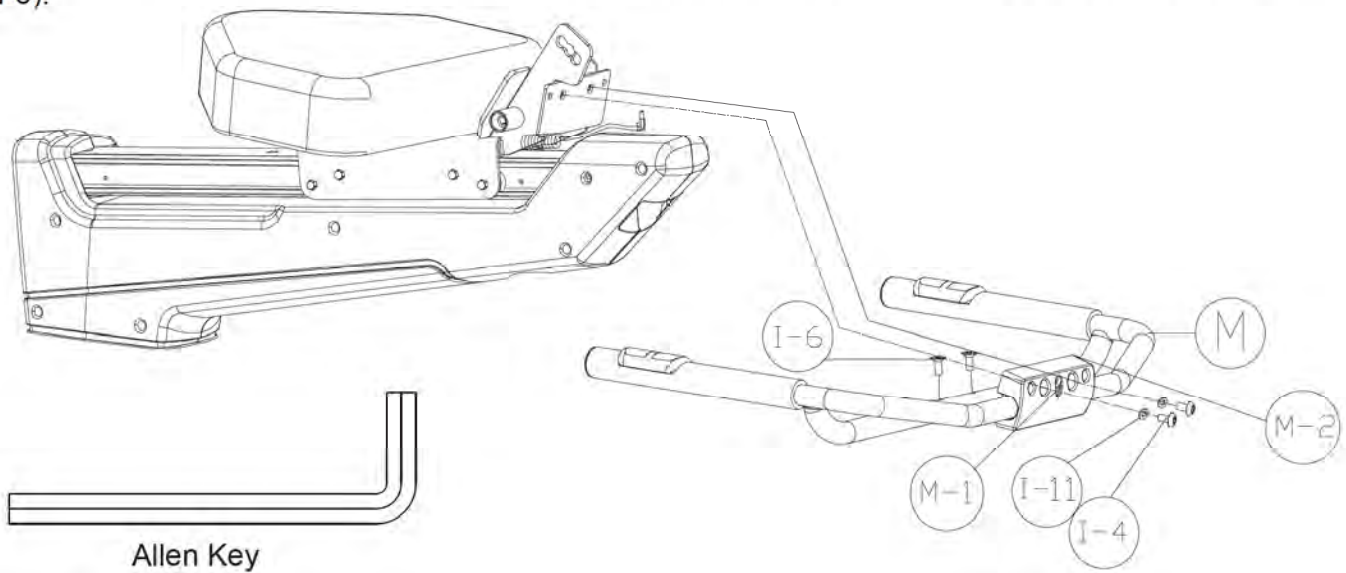

I-4 Screw 2PCS




I -11 Flat Washer
2 PCS



I-6 Screw M8*P1
2PCS

4E. Connect the Hand Pulse Wire Middle (J-1) to Hand Pulse Wire Lower (M-1).

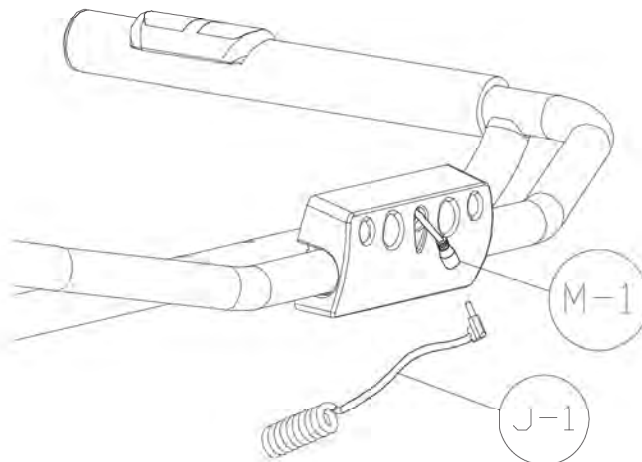


ASSEMBLY

5. Backrest Installation

Align and hold the Backrest (L-1) onto the Seat Slider (R-18), use Allen Key to tighten two Screws (R-22) until firm and secure.

Assemble the Back Rest Knob (R-15) and a Cone Bushing (R-19) into the back rest post.

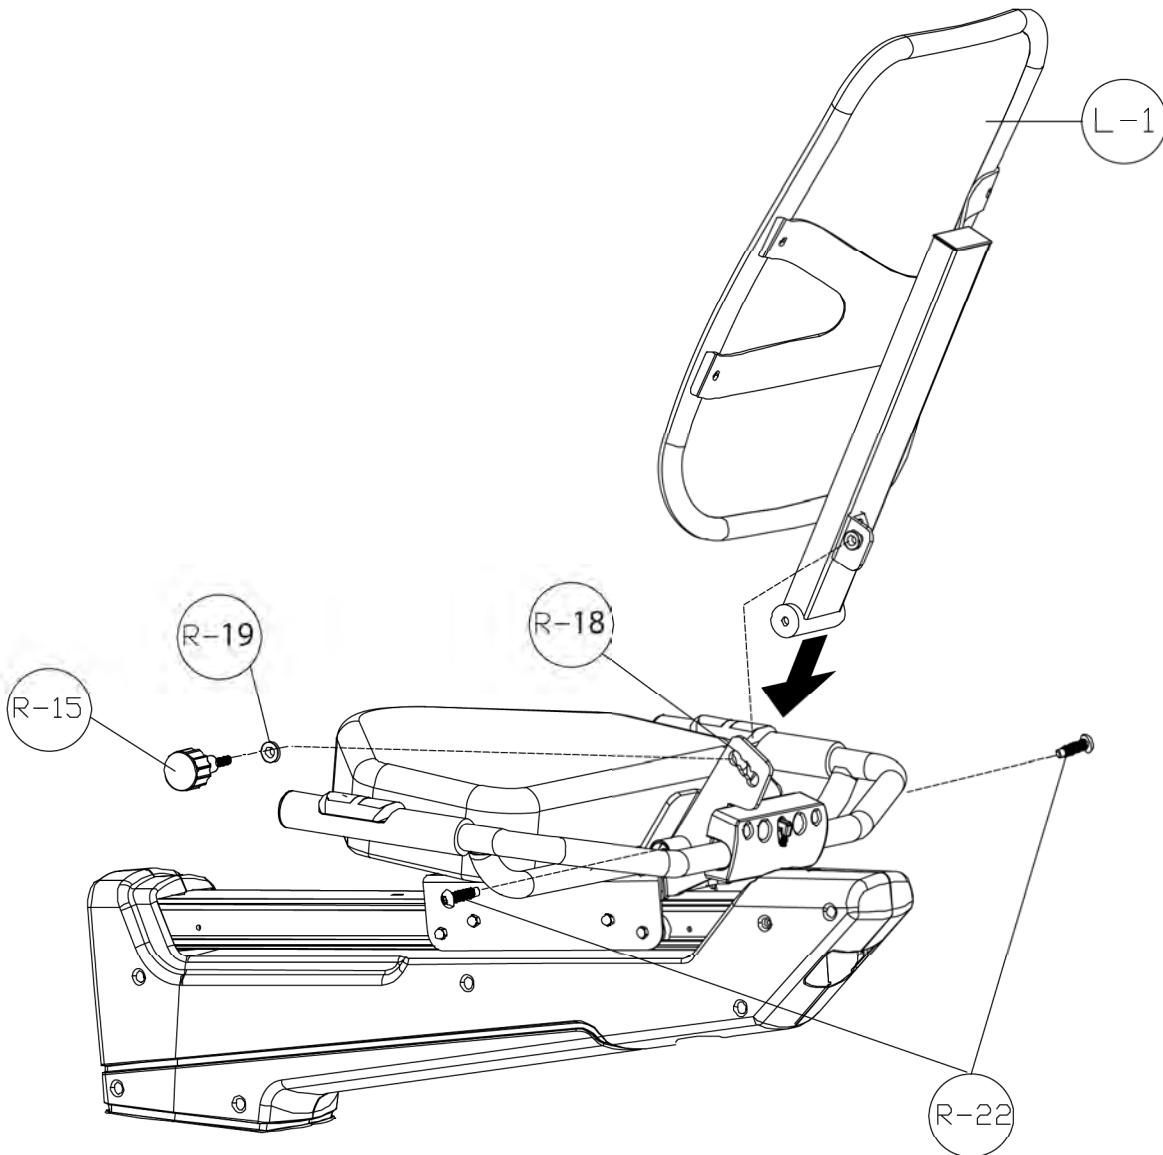

Allen Key
1PCS


6. Handlebar Post Installation

Remove the four pre-installed Bolts (C-1) and four Curve Washers (C-2).

Remove the Handlebar Post Cover (K-5) from Main Frame, and slide it to the upper end of Handle Post (C). Connect the Hand Pulse Wire (Upper) (C-4) from the Handlebar Post (C) with the Hand Pulse Wire (Middle) (D-2) from the Main Frame (D). Connect the Cable Wire (Upper) (C-3) from the Handlebar Post (C) with the Cable Wire (Lower) (D-1) from the Main Frame (D).

CAUTION: To prevent damage, ensure that the wires are not excessively folded or pinched during installation. Wires must stay connected for the computer to function properly.

Insert the Handlebar Post (C) into Main Frame (D). Using the previously removed 4 Bolts (C-1) and 4 Curve Washers (C-2), tighten the Handlebar Post (C) to the Main Frame (D) .

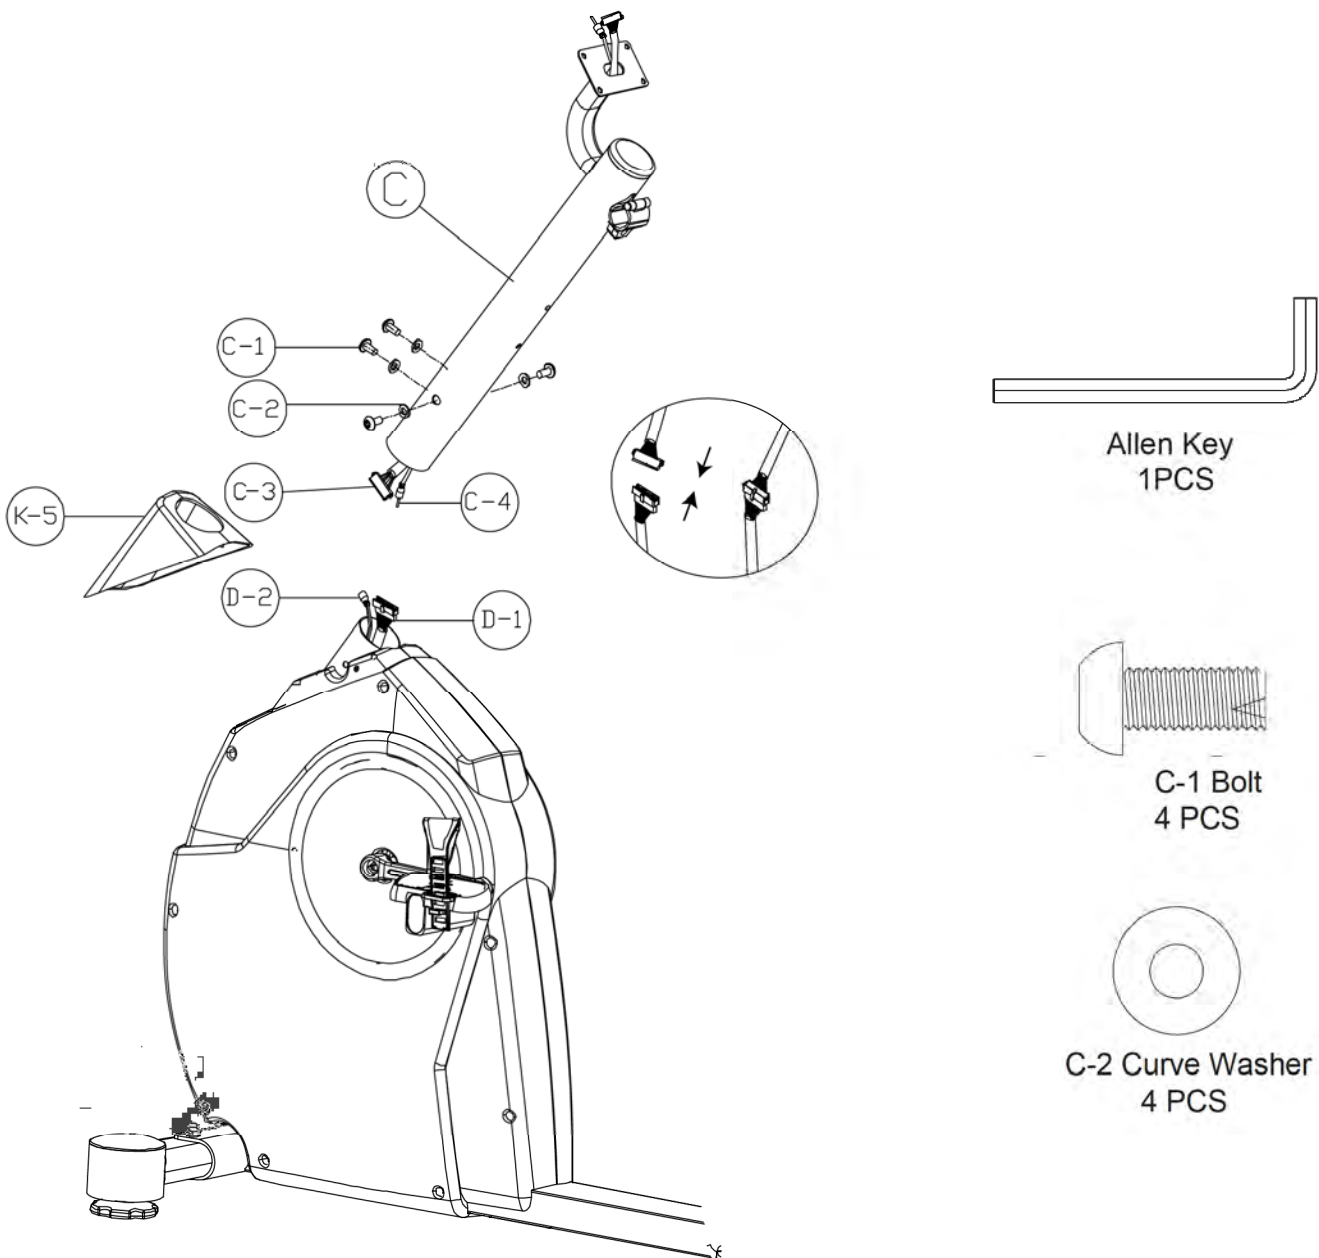


ASSEMBLY


7. Handlebar Installation

Attach the Front Handlebar (B) onto the Handle Post (C), tighten it with Screw (I-8), Flat Washer (I-9), and Spring Washer (I-10) using the Allen Key


Set the Cover for Handlebar (B-3) on the Front Handlebar (B)

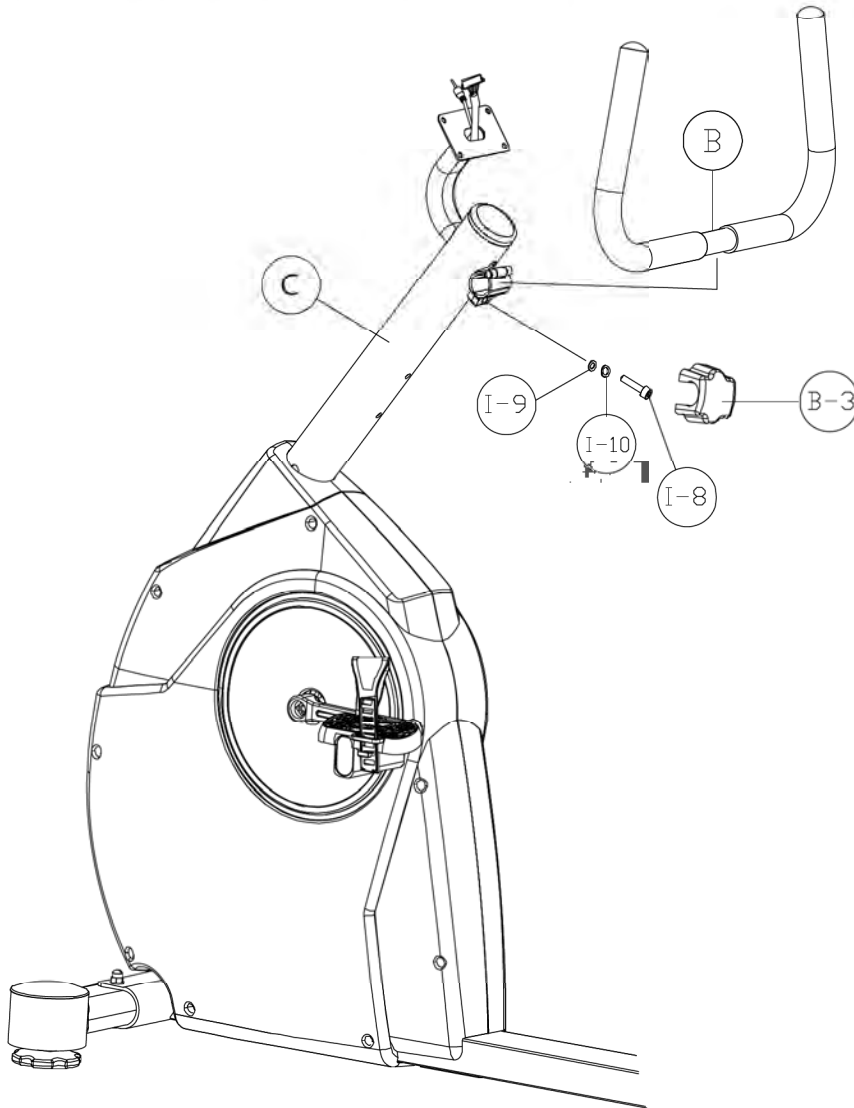


Allen Key



I-8 Screw 1PCS

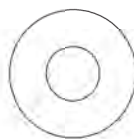

I-9 Flat Washer
 $\Phi 7 * \Phi 12 * 1T$
1PCS

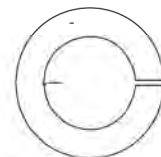

I-10 Spring Washer
 $\Phi 7 * 2T$
1PCS


8. Computer Installation

Remove the four Screws (A-1) from the back of the Computer (A)

Connect the Cable Wire (C3) to the 12 pin socket in the back of the Computer.


Connect the Hand Pulse Wire (C4) to the Computer.

Use the Allen Key to install the Computer onto the computer plate on the handlebar and tighten with four Screws (A-1).

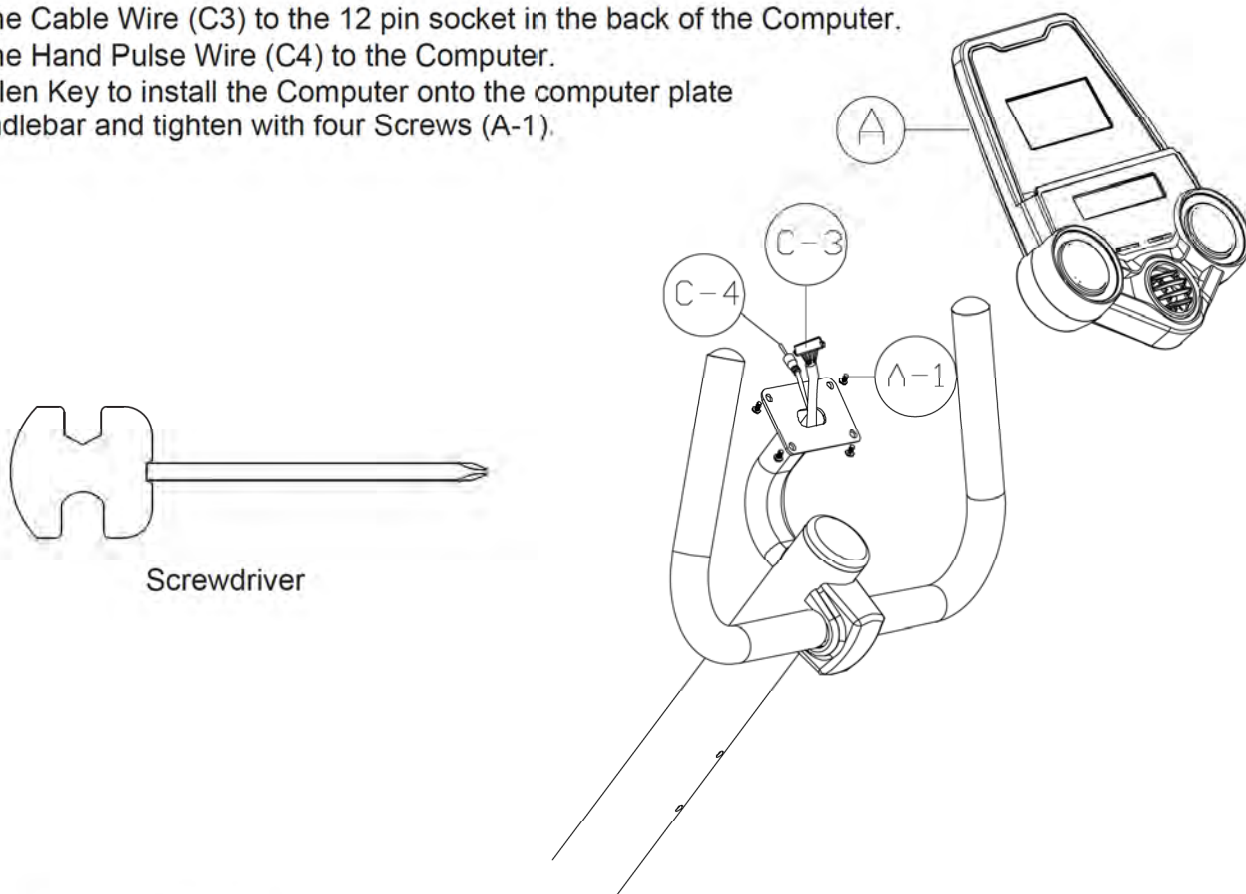


9. Bottle Holder Installation

Attach the Bottle Holder (C-5) onto the handlebar and tighten with two Screws (C-6) by Screwdriver.

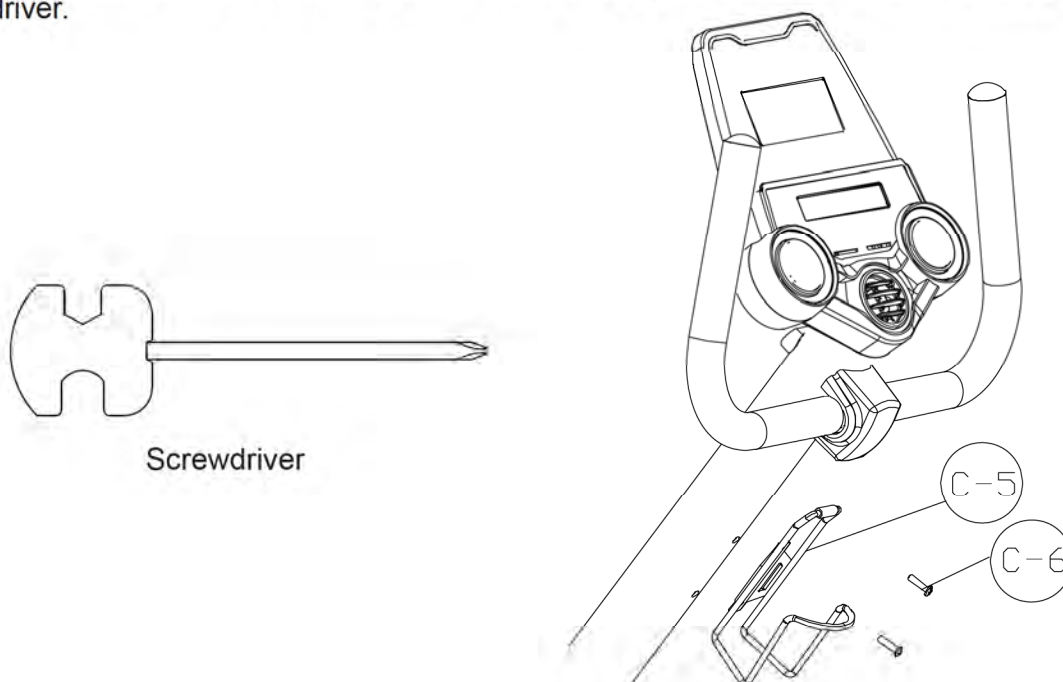


ADJUSTMENT

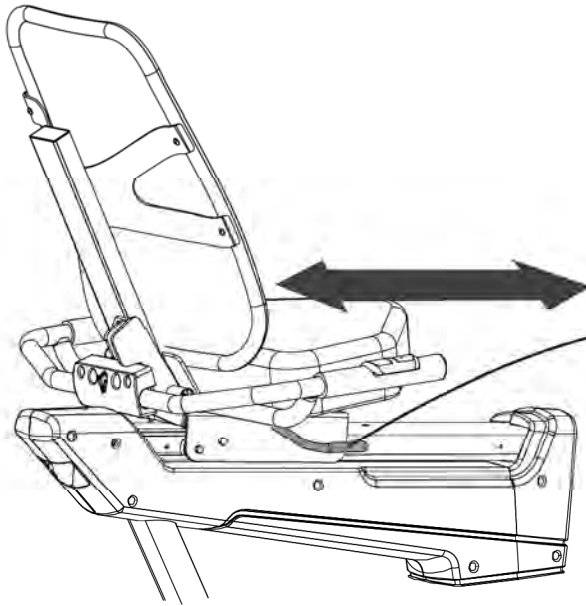


Seat Adjustment

Pull lever up to unlock, slide the seat to desired position, release the lever to lock

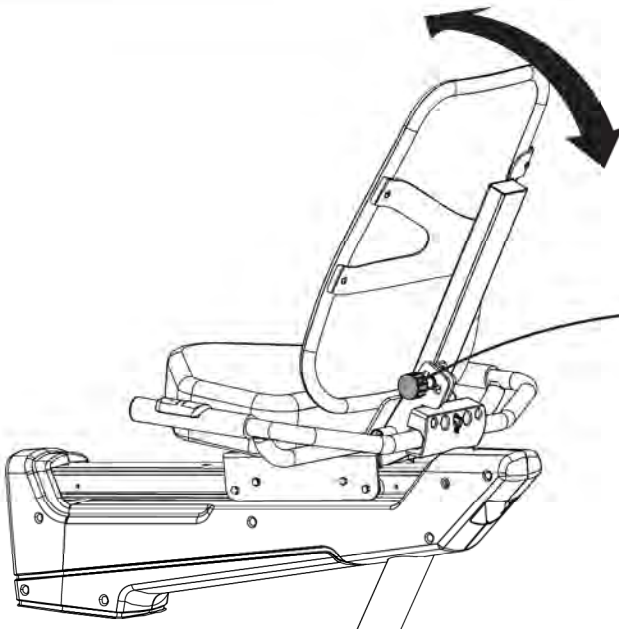

Backrest Adjustment

Turn knob counter-clockwise to unlock, adjust the backrest to the desired angle, turn knob clockwise to lock

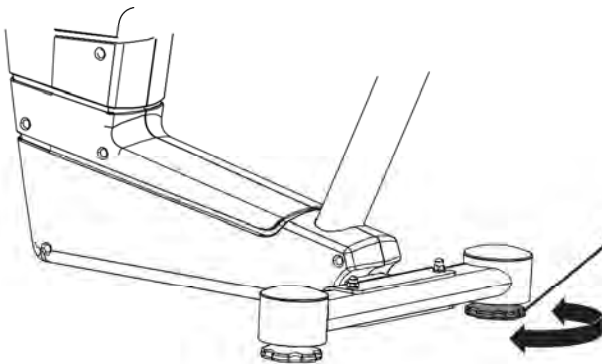

Level the Bike

Adjustment Cap can be turned to raise or lower the stabilizer



BUTTON FUNCTION:

ON/OFF FAN	Turn the fan on or off
QUICK START STOP	To start or stop workout
UP/DOWN	To select training mode or adjust function value
RESET	In stop mode, press the button to return to main menu. Press and hold for 2 seconds to reboot the computer and reset all values to 0.
ENTER	Confirm setting or selection
RECOVERY	To test heart rate recovery level

COMPUTER


DISPLAY FUNCTION

Function	DisplayRange	SettingRange	Unit
TIME	00:00~99:59	±1;00:00~99:00	Minutes
DISTANCE	0.0~99.99	±1;00:00~99:00	ML
CALORIES	0~9999	±10;00:00~9990	CAL
PULSE	30~230	±1; 30~230	BPM
SPEED	0.0~99.9	N/A	ML
RPM	0~999	N/A	RPM
WATT	0~999	±5; 10~350	W

OPERATING PROCEDURE

1.POWER ON/OFF –

After connecting the power, console will power on with a long beep sound, LCD display all segments and then enter into User Profile set up mode. Console will enter sleep mode after 5 minutes of inactivity.

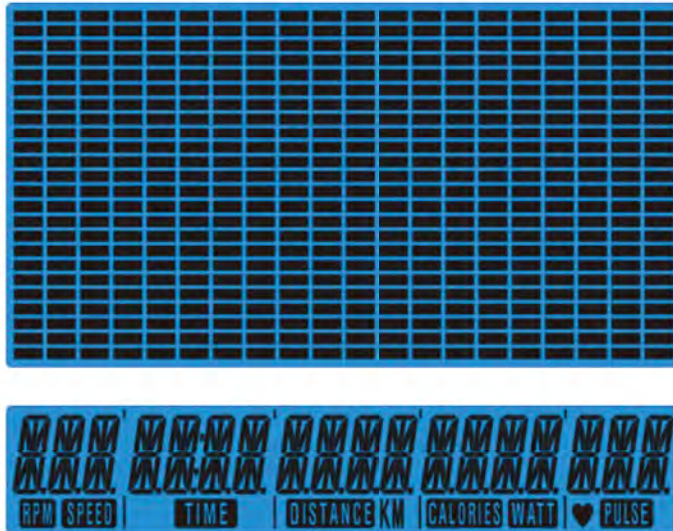

Quick Start - Press QUICK START to start exercise in MANUAL mode immediately without inputting any settings.

2.USER PROFILE



Press UP/DOWN to select User #



Press UP/DOWN to turn profile editing on or off
If you choose EDIT ON, you can edit your profile values.



Use UP/DOWN and ENTER to input profile value of sex, age, height and weight.



The console needs your profiles to better calculate the workout values



3.WORKOUT SELECTION


In main menu, press UP/DOWN to scroll through MANUAL, PROGRAM (12 programs), USER PROGRAM, HRC and WATT. Press ENTER to confirm selection.

3.1. Manual mode

Before exercising in Manual mode, user can set up Time, Distance, Calories, and Pulse target and press ENTER to confirm. After set up of all the targets, press the START to start workout.

Resistance level can be adjusted during exercise by pressing UP or DOWN.

Press STOP to pause the workout reading, and you can press START to continue the workout. Press RESET to return to main page.

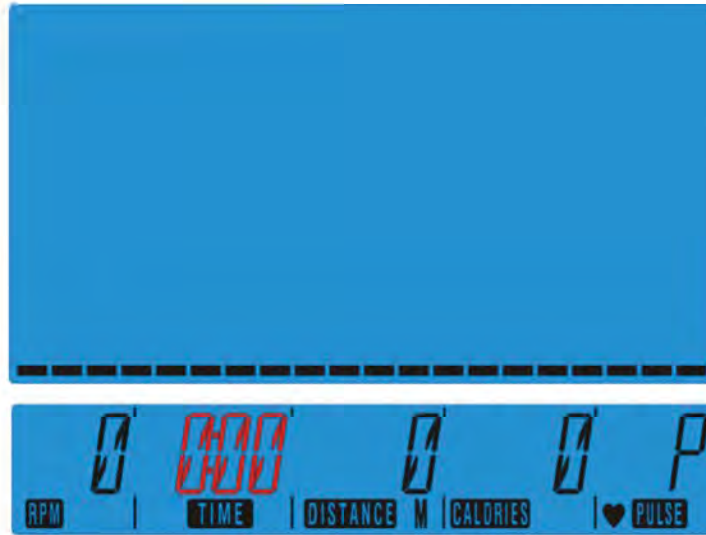


3.2. Program Mode

Press UP or DOWN to select between 12 different workout programs and then press ENTER to set up Target Time . Press START to start workout.

Resistance levels can be adjusted during exercise by pressing UP or DOWN.

Press STOP to pause the workout reading, and you can press START to continue the workout. Press RESET to return to main page.

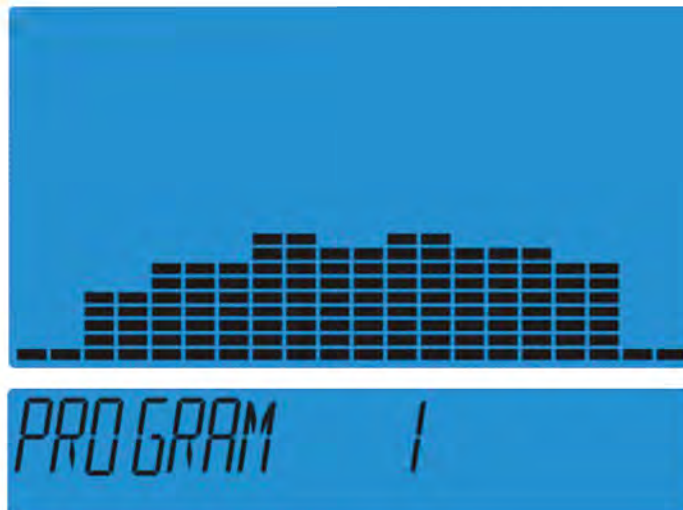

3.3 User Program

User Program allows you to create your own workouts based on resistance level and time intervals.

Press UP and DOWN to create the profile, press ENTER to input additional resistance level, then press and hold ENTER for 2 seconds to exit profile setting. Press START to start work out.

Standard work out time is 20 minutes.

Press STOP to pause the workout reading, and you can press START to continue the workout. Press RESET to return to main page.



3.4. Heart Rate Control (HRC)

Input or select your user profile U1-U4. HRC will automatically adjust the machine's resistance levels to keep you at your selected target heart rate.


There are 4 target heart rate zones: 55%, 75%, 90% and TAG (allows you to set your own target heart rate); press UP and DOWN to select one program and press ENTER to set up exercise time. Press START to start workout.



If console did not receive the pulse signal, the bottom LCD will show "Pulse Input" for reminder.

Press STOP to pause the workout reading, and you can press START to continue the workout. Press RESET to return to main page


TARGET HEART RATE ZONE

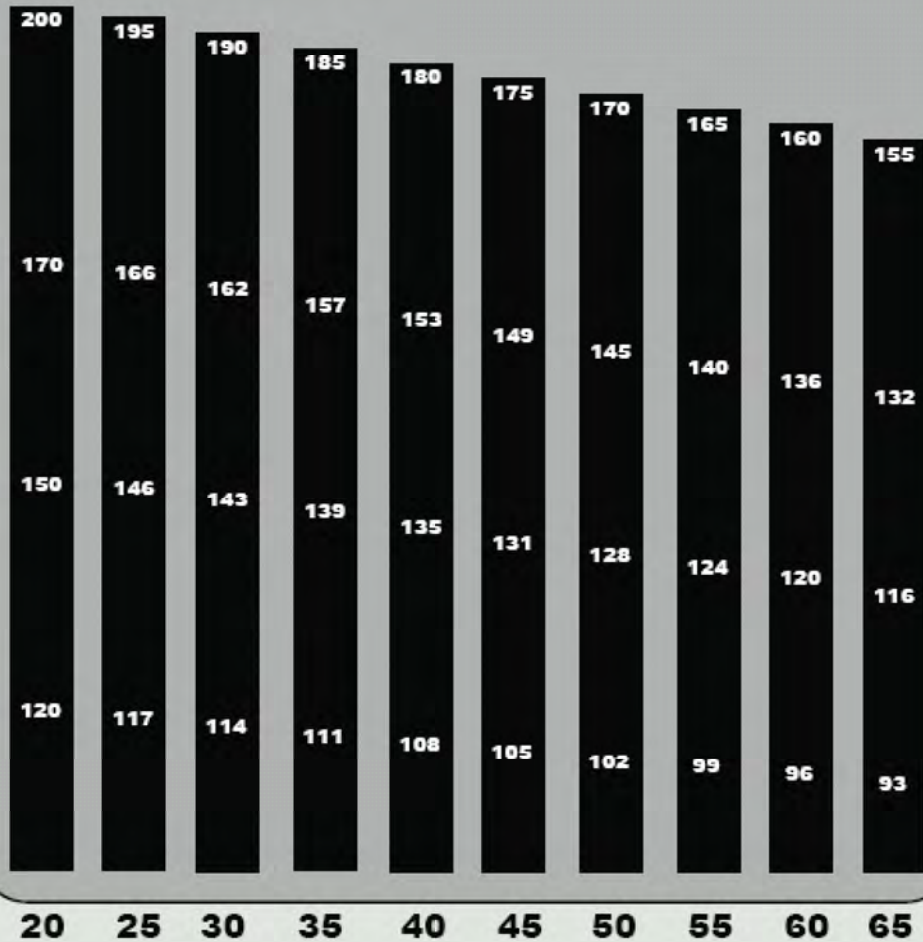100%Serious
athletic
training range**90%**Cardiovascular
conditioning
range**75%**Fat burning
range**55%****AGE**

3.5 WATT

Press UP and DOWN to setting WATT and Time target. Press START to start work out.

Press STOP to pause the workout reading, and you can press START to continue the workout. Press RESET to return to main page

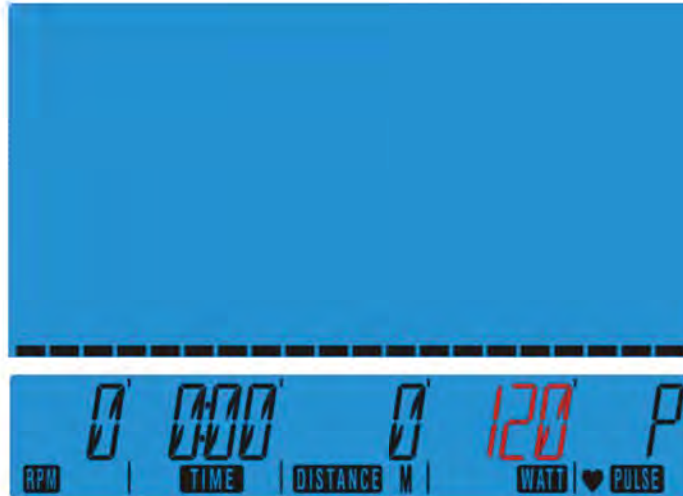

4. Recovery: A fitness test which measures how quickly your heart rate returns to normal after exercising

After exercise press RECOVERY and hold both hands on handpulse. TIME starts counting down from 00:60 to 00:00.

Screen will display your heart rate recovery status with the F1,F2....to F6. F1 represents the fastest recovery time, F6 represents the slowest.

Press the RECOVERY button again to return to main display




Start Recovery Function



Test Result

5. Bluetooth Mode

Enable Bluetooth on your smart device, search for and connect to the console (name is on the back of the console). When your smart device is connected to the console, the Bluetooth symbol will appear on the LCD.

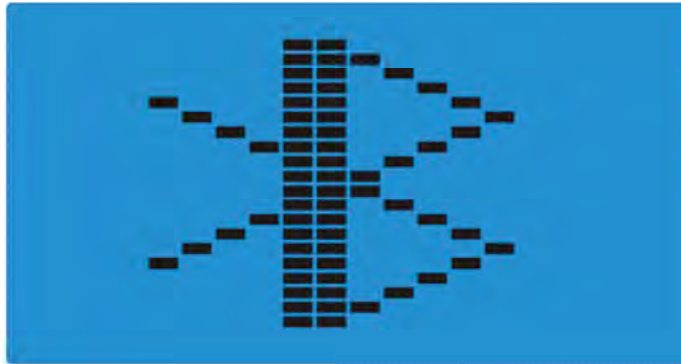

Please note:

1. Holding down the RESET button for 2 seconds will reset the console and your Bluetooth connection.
2. If the console is unresponsive, please unplug / plug in the adaptor

TROUBLESHOOTING

Computer not working correctly

Check to make sure the computer cable is connected securely.

Check that the AC Adaptor is securely connected to the Power Supply Cable and to the electrical wall outlet.

The bike trainer wobbles or shakes when in use

Turn the adjustable leveler on the front stabilizer or Rear Stabilizer as needed to level the bike trainer.

Squeaking noise when in use

The bolts may be loose on the bike trainer. Inspect all bolts and tighten as needed. Ensure the bike is level

No readings or inconsistent/erratic heart rate readings

Always hold on to the handlebar grip sensors with both hands instead of just one.

Try to maintain moderate pressure while holding onto the hand pulse sensors.

Make sure that the wire connections for the hand pulse sensors are secured.

Make sure to wipe the sweat off your hands.

MAINTENANCE

Cleaning

The bike trainer can be cleaned with a soft cloth and mild detergent. Do not use abrasives or solvents on plastic parts. Please wipe your perspiration off the bike trainer after each use. Be careful not to get excessive moisture on the computer display panel as this might cause an electrical hazard or electronics to fail. Please keep the bike trainer, especially the computer console, out of direct sunlight to prevent screen damage or premature wear. Please inspect all assembly bolts and pedals on the machine for proper tightness every week.

Storage

Store the bike trainer in a clean and dry environment away from children.

WARM UP

Quadriceps Stretch

With one hand against a wall for balance, reach behind you and pull your right foot up. Bring your heel as close to your buttocks as possible. Hold for 15 counts and repeat with left foot up.




Inner Thigh Stretch

Sit with the soles of your feet together with your knees pointing outward. Pull your feet as close to your groin as possible. Gently push your knees towards the floor and hold for 15 counts.



Toe Touching

Slowly bend forward from your waist, letting your back and shoulders relax as you stretch toward your toes. Reach down as far as you can and hold for 15 counts.

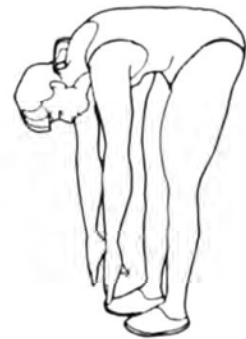

Hamstring Stretch

Sit with your right leg extended. Rest the sole of your left foot against your right inner thigh. Stretch toward your toe as far as possible. Relax and hold for 15 counts. Repeat with left leg extended.



WARRANTY

MANUFACTURER'S LIMITED WARRANTY

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with Paradigm's Owner's Manual. Paradigm's obligation under this warranty applies to the following:

COMPONENT	LENGTH OF WARRANTY
Frame	Life time
Normal Wearable Parts	1 year (upholstery, brake pads, foam grips, pedals etc...)
Labor/Electronics and Other Parts	3 years

Exclusions from Warranty Coverage:

Paradigm does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by Paradigm's installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
5. Any act of Nature (such as fire, flooding, snow, ice, hurricane, earthquake, lightning or other natural disaster), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to, among other things, flake, chalk, or accumulate dirt or stains; or
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

Paradigm, using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable.

Proof of original purchase is required.

Ordering Replacement Parts

Replacement parts can be ordered by calling or emailing our customer service dept:

1-844-641-7922

Monday through Friday 8:00 AM - 5:00 PM (PST).

service@paradigmhw.com

When ordering replacement parts please have the following information ready:

1. Owner's Manual
2. Model Number
3. Description of Parts
4. Part Number
5. Date of Purchase

Paradigm Health & Wellness, Inc.

PARTS REQUEST FAX FORM

Please fax this form to (1-626-810-2166)

OR YOU CAN EMAIL CUSTOMER SERVICE REQUESTS TO
service@paradigmhwh.com

NAME: _____

ADDRESS: _____

CITY _____ STATE _____ ZIP _____

TELEPHONE: (Day) _____

(Night) _____

(Email Address) _____

SERIAL#: _____

MODEL#: _____

PURCHASE DATE: _____

PURCHASE FROM: _____

PART #	DESCRIPTION/REASON	QTY

"YOUR ORDER WILL BE PROCESSED WITHIN 3 BUSINESS DAYS"

OFFICIAL USE ONLY

SHIP DATE: _____

TRK #: _____

BACK ORDER: _____