


# Folding Upright Bike with Pulse



**IMPORTANT:** Read all instructions carefully before using this product. Retain this owner's manual for future reference. The specifications of this product may vary from this photo, subject to change without notice.

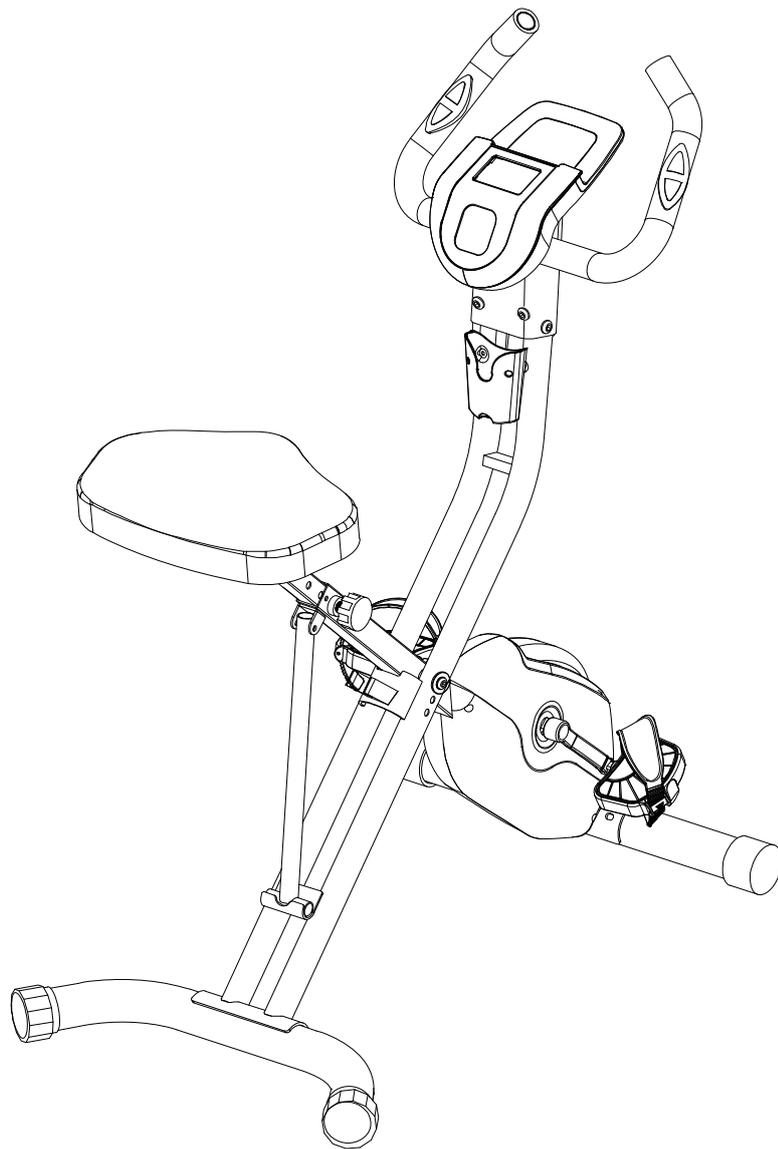

**PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.**

**STOP. Contact customer service if you have any questions regarding assembly or proper operation of the machine.**

**Email us at:**

**[Service@paradigmhw.com](mailto:Service@paradigmhw.com)**

**Or call us at:**

**1-844-641-7921**

**Hours:**

**8:00 am to 5:00 pm (PST)**

**Monday thru Friday**

# TABLE OF CONTENTS

SERVICE .....	2
LABEL PLACEMENT .....	3
IMPORTANT SAFETY GUIDELINES .....	4
OVERVIEW DRAWING .....	5
PARTS LIST .....	6
HARDWARE & TOOL PACK .....	8
ASSEMBLY .....	9
CONSOLE FUNCTIONS .....	14
STORAGE .....	17
OPERATIONS & ADJUSTMENTS .....	18
TRANSPORT .....	20
MAINTENANCE & TROUBLESHOOTING .....	21
WARRANTY .....	22
PARTS REQUEST FORM .....	23

# SERVICE

## IMPORTANT: FOR NORTH AMERICA ONLY

For damaged or defective product, questions, replacement parts or any other service support, please contact our customer service department by the below methods:

**For The Best Service, please Email:**  
**[service@paradigmhw.com](mailto:service@paradigmhw.com)**

**Response Time: 1-2 Business Days**

**Emailing us with the information above will be the best method to receive a response during peak business hours**

**Website:**  
**[www.paradigmhw.com](http://www.paradigmhw.com)**

**Toll-Free:**

**1-844-641-7921**

**(8:00 AM - 5:00 PM Pacific Standard Time, Monday thru Friday)**

**Response time may vary via calling**

**Please have the following information ready when requesting for service:**

- Your name
- Phone number
- Model number
- Serial number
- Part number
- Proof of Purchase

**For damaged or defective product please contact our customer service before returning to the store.**

**Paradigm Health & Wellness, Inc.  
1189 Jellick Ave.**

**City of Industry, CA 91748, USA**



# IMPORTANT SAFETY GUIDELINES


Basic precautions should always be followed, including the following safety guidelines when using this equipment. Read all of the guidelines before using this equipment.

1. Before exercising and to avoid injuring your muscles, it is highly recommended that you perform warm-up exercises for each muscle group.
2. Make sure all the components are not damaged and are in working order before using. This equipment should be placed on a stable, flat surface. Using a mat or similar, covering material on the ground is recommended.
3. Wear proper fitness apparel when using this equipment. Do not wear loose clothing or accessories that may get caught by any part of the equipment.
4. Make sure all the components are not damaged and are in working order before using.
5. Remember to tighten the pedaling straps. Keep dry. Do not operate the equipment in wet or moist condition.
6. Do not use the equipment outdoors. This equipment is for household use only.
7. Only perform maintenance or adjustments that are instructed in this manual. Should any problems arise, discontinue usage of the equipment and consult with our customer service.
8. Only one person should be on the equipment at a time. Keep children and pets away from the equipment at all times. This equipment is designed for adults only.
9. Be careful to always hold onto the handlebars when you're mounting and dismounting. Be careful to have the pedals at their lowest point when stepping off.
10. Hold onto the handlebars and use both the pedals in tandem to ensure a smooth, effective workout.
11. This product requires a minimum of 6 square feet around for safe operation.
12. If you feel any chest pains, nausea, dizziness, or shortness of breath, you should stop exercising immediately, and consult your physician before continuing.
13. This equipment is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the equipment by a personal responsible for their safety.
14. **DO NOT** pedal in reverse.
15. **WARNING: CANCER AND REPRODUCTIVE HARM--WWW.P65WARNINGS.CA.GOV.**
16. **The maximum weight capacity for this product is 400 lbs/181 kgs.**

**⚠ WARNING:** Before beginning any exercise program consult your physician. This is especially important for the people who are over 35 years old or who have pre-existing health problems.

**⚠ CAUTION:** Read all instructions carefully before operating this product. Retain this Owner's Manual for future reference.

# OVERVIEW DRAWING

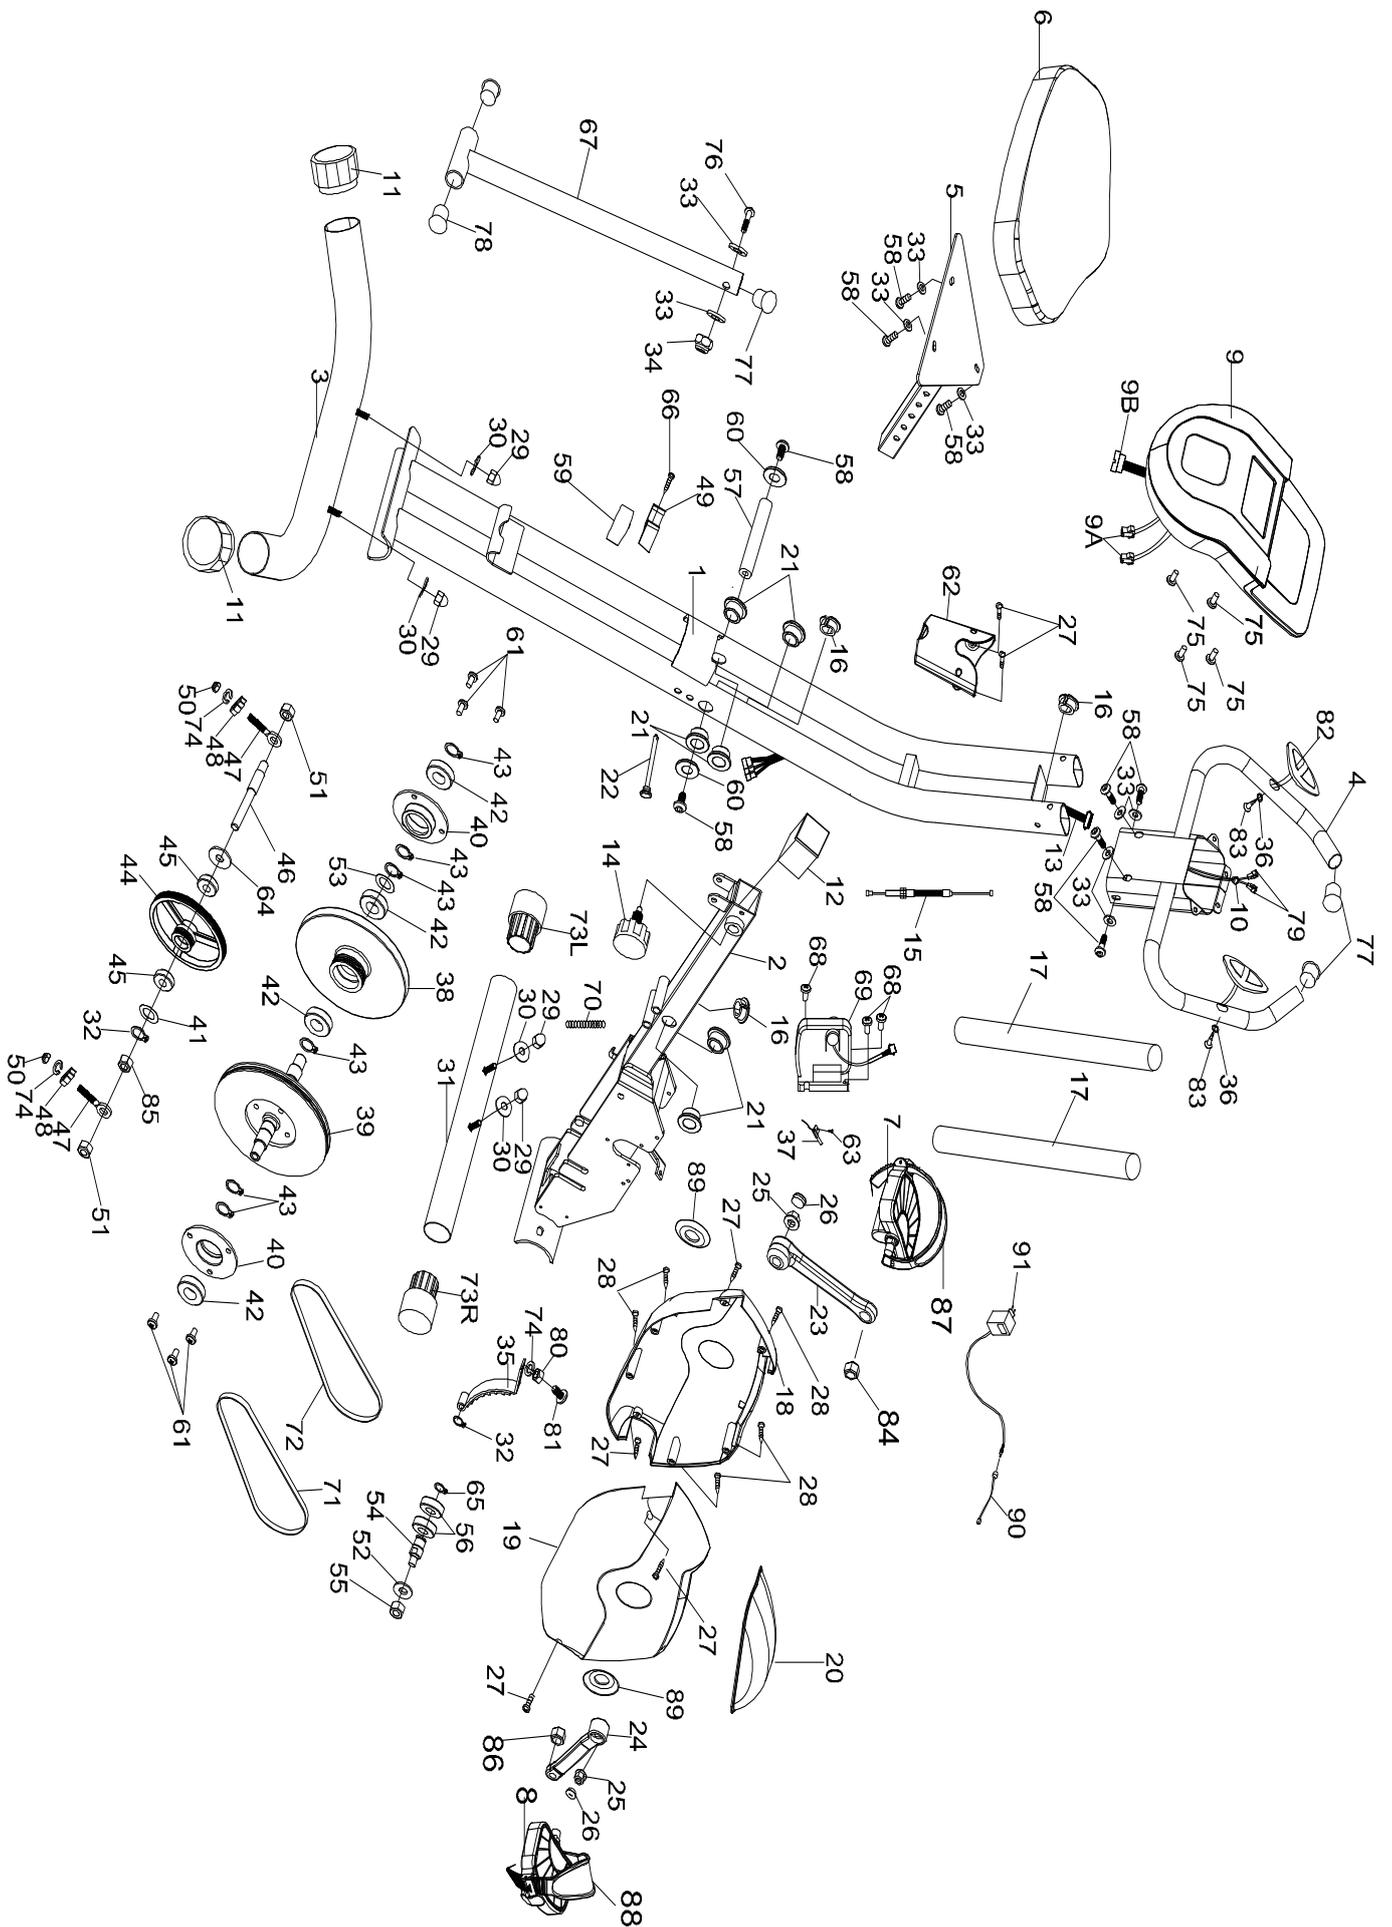

# PARTS LIST

No.	Description	Qty
1	Front Frame	1
2	Rear Frame	1
3	Rear Stabilizer	1
4	Handlebar	1
5	Seat Post	1
6	Seat Cushion	1
7	Left Pedal	1
8	Right Pedal	1
9	Computer	1
9A	Hand Pulse Sensor wire	2
9B	Computer Wire	1
10	Wire Plug	1
11	Rear Stabilizer End Cap	2
12	Seat Post Bushing	1
13	Sensor Wire	1
14	Seat Height Adjustment Knob	1
15	Tension Cable	1
16	Oval Wire Plug	3
17	Handlebar Foam Grip	2
18	Left Cover	1
19	Right Cover	1
20	Top Cover	1
21	Plastic Bushing	6
22	Safety Pin	1
23	Left Crank	1
24	Right Crank	1
25	Flange Nut	2
26	Crank Cover	2
27	Round Phillips Head Drilling Screw M4x20	6
28	Round Phillips Head Tapping Screw M4x20	5
29	Hexagon Nut Cap M8	4
30	Curve Washer Ø8.2xØ22.2	4

No.	Description	Qty
31	Front Stabilizer Ø50x1.5tx550L	1
32	C-ring Ø10	2
33	Flat Washer Ø8.2xØ16.8	9
34	Nylon Nut M8	1
35	Magnet Bracket	1
36	Washer Ø6.2	2
37	Speed Sensor Wire	1
38	Flywheel	1
39	Belt Wheel with Crank Axle	1
40	Bearing Bracket A	2
41	Wave Washer	1
42	Bearing	4
43	C-ring Ø17	6
44	Belt Wheel	1
45	Bearing 6000Z	2
46	Axle Ø12.8x94L	1
47	Eyebolt M6	2
48	Tension Bracket	2
49	Support Tube Holder	1
50	Nylon Nut M6	2
51	Nut M10	2
52	Washer Ø10.2xØ25	1
53	Wave Washer Ø17	1
54	Idle Wheel Axle	1
55	Nylon Nut M10	1
56	Bearing 6902Z	2
57	Axle Ø15.8x94.5L	1
58	Hexagon Socket Bolt M8x15	9
59	Rubber Cushion	1
60	Washer Ø8.2x Ø25x2.0t	2
61	Flat Phillips Head Screw M6x10	6
62	Holder	1


# PARTS LIST

No.	Description	Qty
63	Round Phillips Head Screw M4x10	1
64	Plastic Washer	1
65	C-ring Ø15	1
66	Screw M4x10L	3
67	Rear Frame Support Tube	1
68	Screw M5x15	3
69	Tension Motor	1
70	Spring	1
71	Belt 240J4	1
72	Belt 230J3	1
73R	Front Stabilizer Right End Cap	1
73L	Front Stabilizer Left End Cap	1
74	Spring Washer Ø6.2	3
75	Screw M5x10	4
76	Hexagon Socket Bolt M8x43L	1

No.	Description	Qty
77	Handlebar End Cap Ø25.4	3
78	Front Frame Support Tube End Cap Ø22.2	2
79	Hand Pulse Sensor Wire	2
80	Nut M6	1
81	Screw M6x15	1
82	Hand Pulse Sensor	2
83	Countersunk Phillips Head Cap Screw M4x20	2
84	Left Nylon Nut 9/16 UNC12	1
85	Nut Bushing M10	1
86	Right Nylon Nut 9/16 UNC12	1
87	Left Pedal Strap	1
88	Right Pedal Strap	1
89	Crank Cover	2
90	Adaptor Wire	1
91	AC Adaptor	1

## 4103 - Hardware Pack

STEP 1

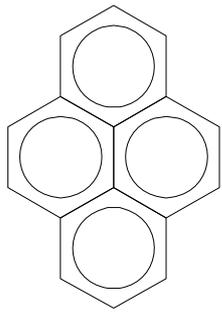


#29 4PCS



#30 4PCS

STEP 3

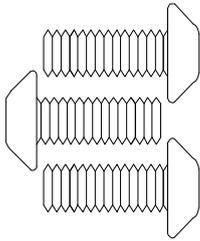


#58 3PCS



#33 3PCS

STEP 4

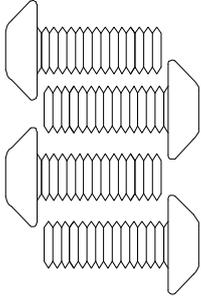


#58 4PCS



#33 4PCS

STEP 3

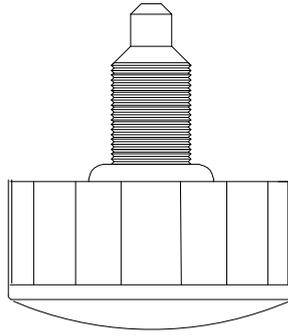


#14 1PC

19mm Wrench 1PC

5mm Allen Wrench with  
Phillips Screwdriver 1PC

13-15mm Wrench 1PC


STEP 1

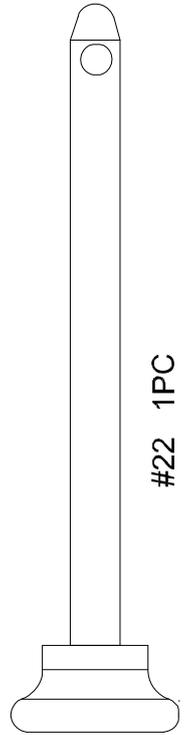

#22 1PC

# ASSEMBLY

Figure A

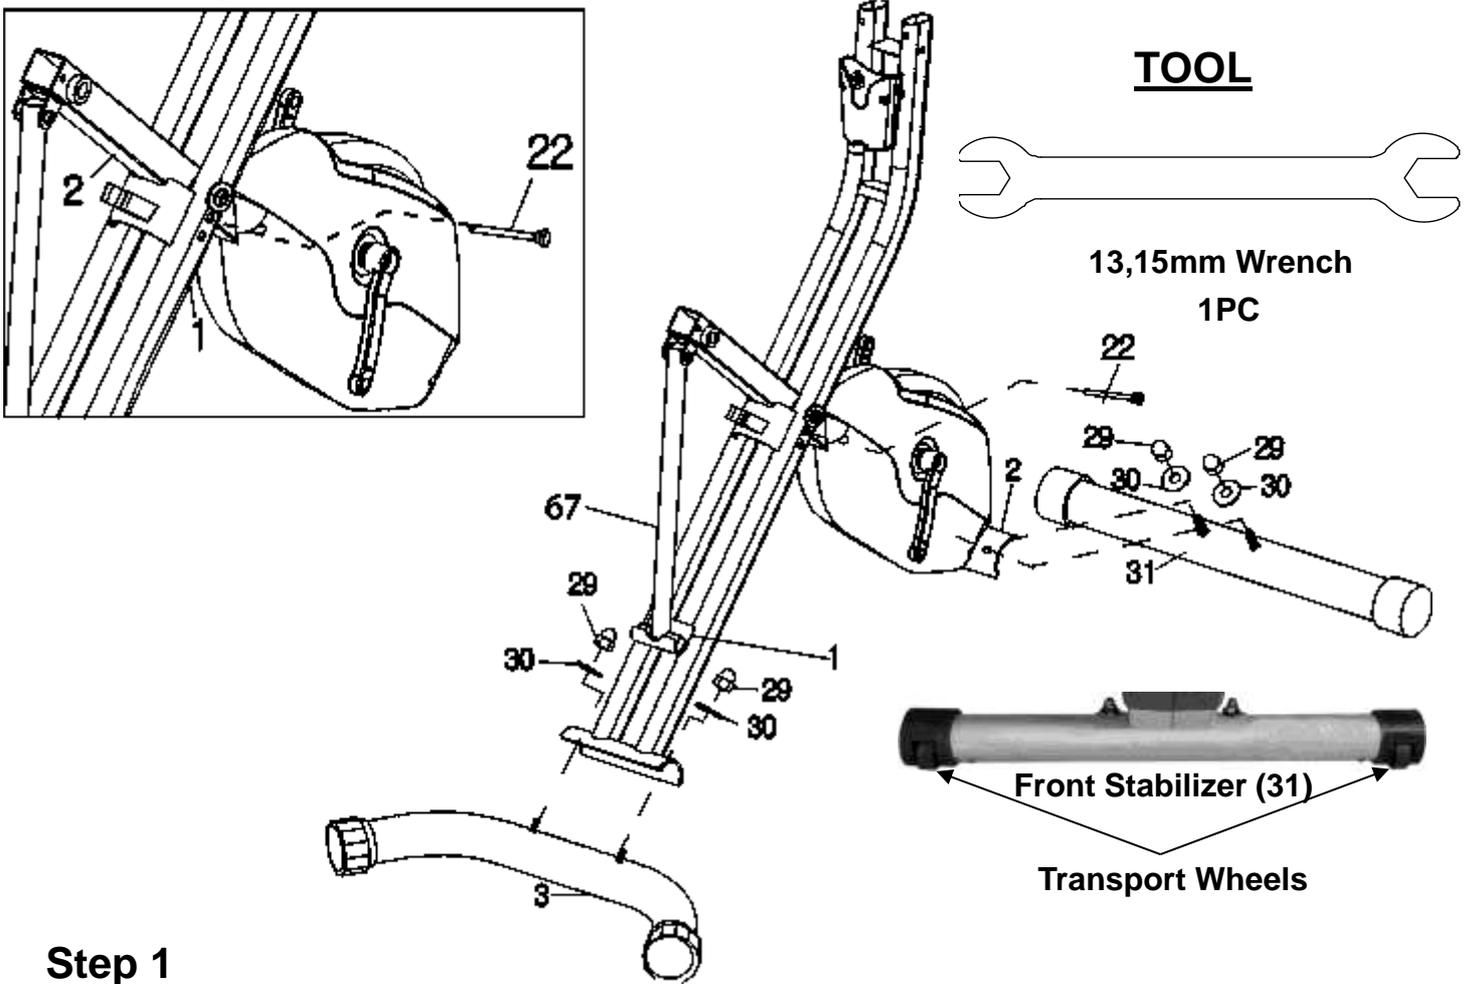

## Step 1

**1A. Frame Set Up:** Extend the **Front Frame (1)** and the **Rear Frame (2)**. Rest the **Rear Frame Support Tube (67)** into the hooked plate on the **Front Frame (1)**. Align the upper pin holes of both frames. Then insert the **Safety Pin (22)** into the **Front Frame (1)** and the **Rear Frame (2)** to lock the frames in place. See **Figure A**.


**1B. Front Stabilizer Installation:** Attach the **Front Stabilizer (31)** onto the front curve of the **Rear Frame (2)**. Secure with two **Hexagon Nut Caps (29)** and two **Curve Washers (30)**, and then tighten using the **13-15mm Wrench** provided.

**1C. Rear Stabilizer Installation:** Attach the **Rear Stabilizer (3)** onto the rear curve of the **Front Frame (1)**. Secure with two **Hexagon Nut Caps (29)** and two **Curve Washers (30)**, and then tighten using the **13-15mm Wrench** provided.


## HARDWARE PACK



(22) Safety Pin  
1 PC

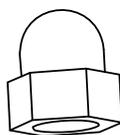


(29) Hexagon Nut Cap  
4PCS

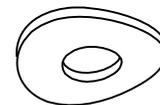

(30) Curve Washer  
4 PCS

# ASSEMBLY

## TOOLS

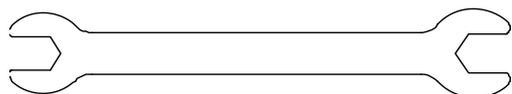

13-15mm Wrench  
1PC



19mm Wrench  
1PC

## PRE-INSTALLED HARDWARE



(84) Left  
Nylon Nut  
1PC



(86) Right  
Nylon Nut  
1PC

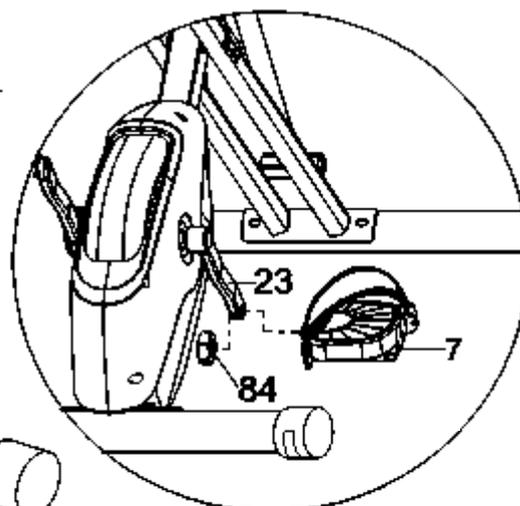
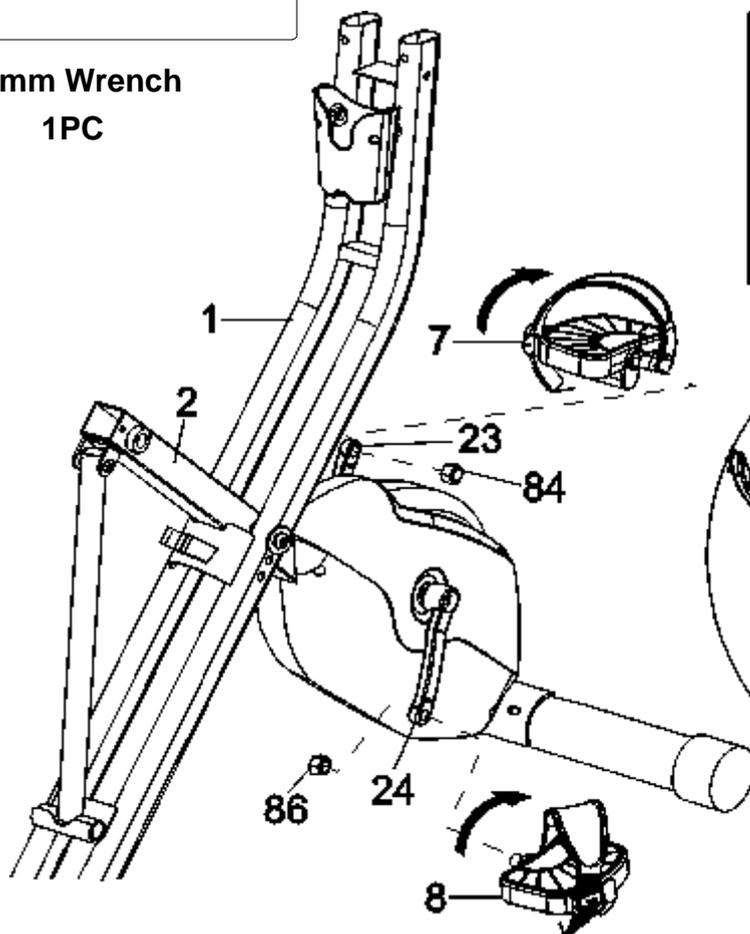
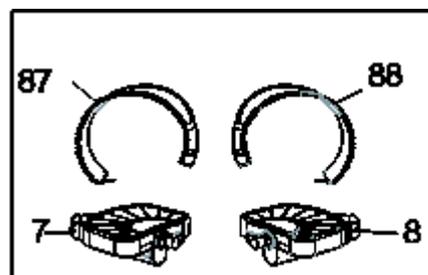


Figure B


## Step 2

**Tip:** The Cranks, Pedals, Pedal Shafts, and the Pedal Straps are marked “R” for Right and “L” for Left. **Note:** Turn the **Left Pedal (7)** only in a COUNTER-CLOCKWISE direction. Turn the **Right Pedal (8)** only in a CLOCKWISE direction. Installing the **Pedals (7/8)** incorrectly will strip the threads of the left pedal shaft.

**2A Installing the Left Pedal:** Remove the **Left Nylon Nut (84)** from the **Left Pedal (7)**. Insert the **Left Pedal (7)** into the threaded hole in the **Left Crank (23)** in a COUNTER-CLOCKWISE direction with your hand. Reinstall the **Left Nylon Nut (84)** onto the protruding shaft of the **Left Pedal (7)** in a CLOCKWISE direction. Use the **13,15mm and 19mm Wrenches** to simultaneously tighten the **Left Nylon Nut (84)** and **Left Pedal (7)** in the same directions instructed. See **Figure B**.

**2B Installing the Right Pedal:** Remove the **Right Nylon Nut (86)** from the **Right Pedal (8)**. Insert the **Right Pedal (8)** into the threaded hole in the **Right Crank (24)** via the CLOCKWISE direction with your hand. Reinstall the **Right Nylon Nut (86)** onto the protruding shaft of the **Right Pedal (8)** in a COUNTER-CLOCKWISE direction. Use the **13,15mm and 19mm Wrenches** to simultaneously tighten the **Right Nylon Nut (86)** and **Right Pedal (8)** in the same directions instructed.

# ASSEMBLY

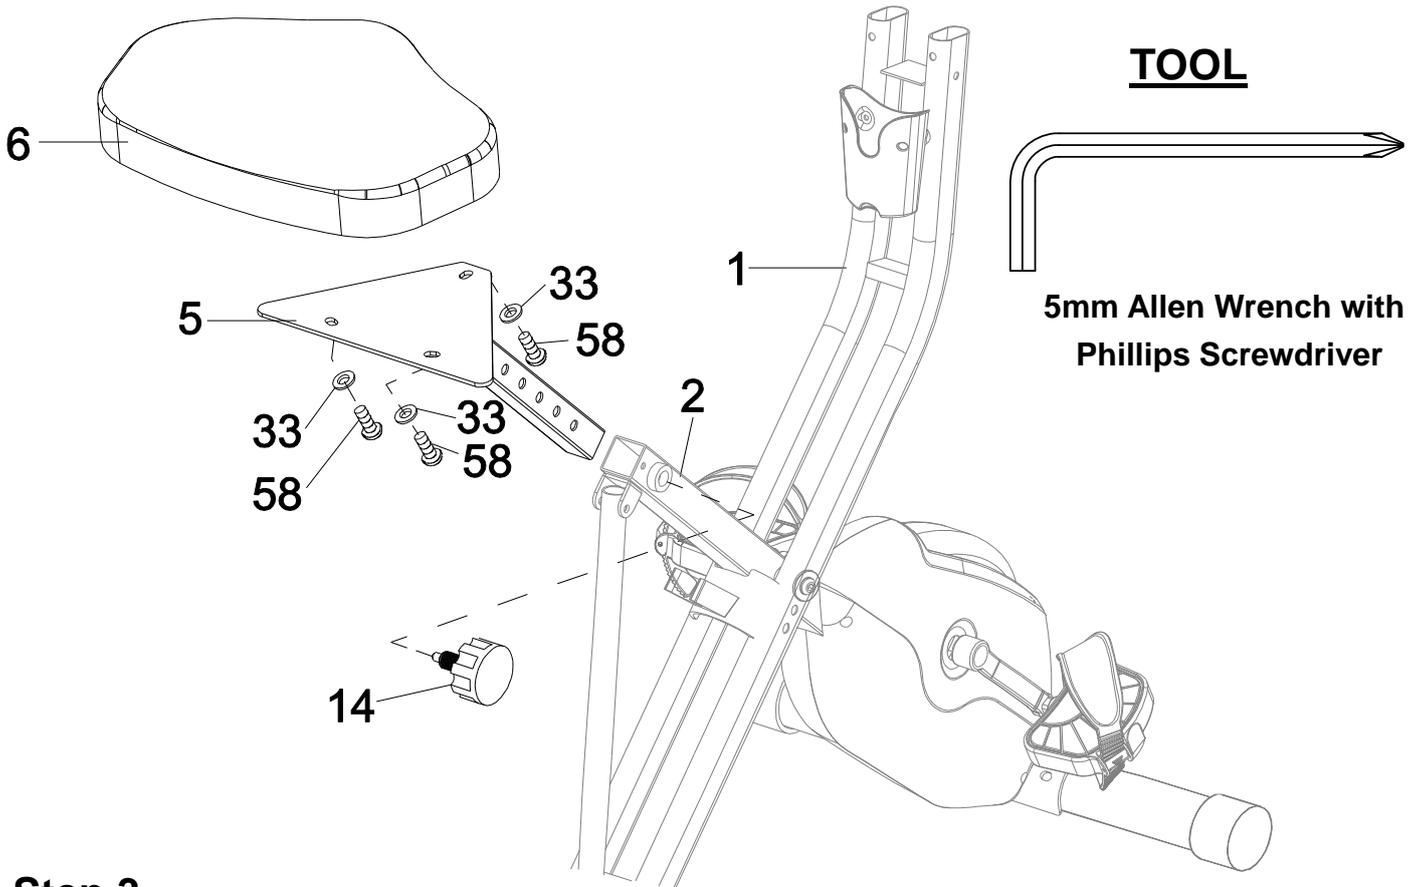


## Step 3

**Tip:** The **Seat Cushion (6)** has 2 sets of adjustment holes. It is recommended that users between 5'1" – 5'6" use the holes towards the rear. It is recommended that users between 5'7" to 6'3" use the holes towards the front.


**3A Installing the Seat Cushion to the Seat Post:** Align the bolt holes on the underside of the **Seat Cushion (6)** with the holes on top of the **Seat Post (5)**. Then attach the **Seat Cushion (6)** to the **Seat Post (5)** with three **Flat Washers (33)** and three **Hexagon Socket Bolts (58)**. Tighten the **Bolts (58)** with the **5mm Allen Wrench with Phillips Screwdriver** provided.

**3B Installing the Seat Post to the Rear Frame:** Insert the **Seat Post (5)** into the **Rear Frame (2)** and stop at your desired seat height. Install the **Seat Height Adjustment Knob (14)** into the threaded hole on the right side of the **Rear Frame (2)** by turning it CLOCKWISE, making sure that the safety pin of the **Seat Height Adjustment Knob (14)** catches one of the height adjustment holes of the **Seat Post (5)**.


## HARDWARE:

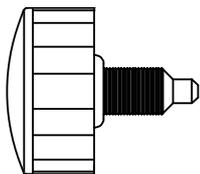

**(14) Seat Height Adjustment Knob**  
1 PC

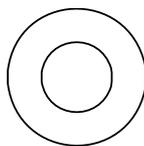




**(33) Flat Washer**  
3PCS

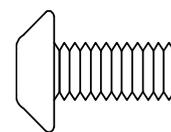

**(58) Hexagon Socket Bolt**  
3PCS

# ASSEMBLY

## TOOL

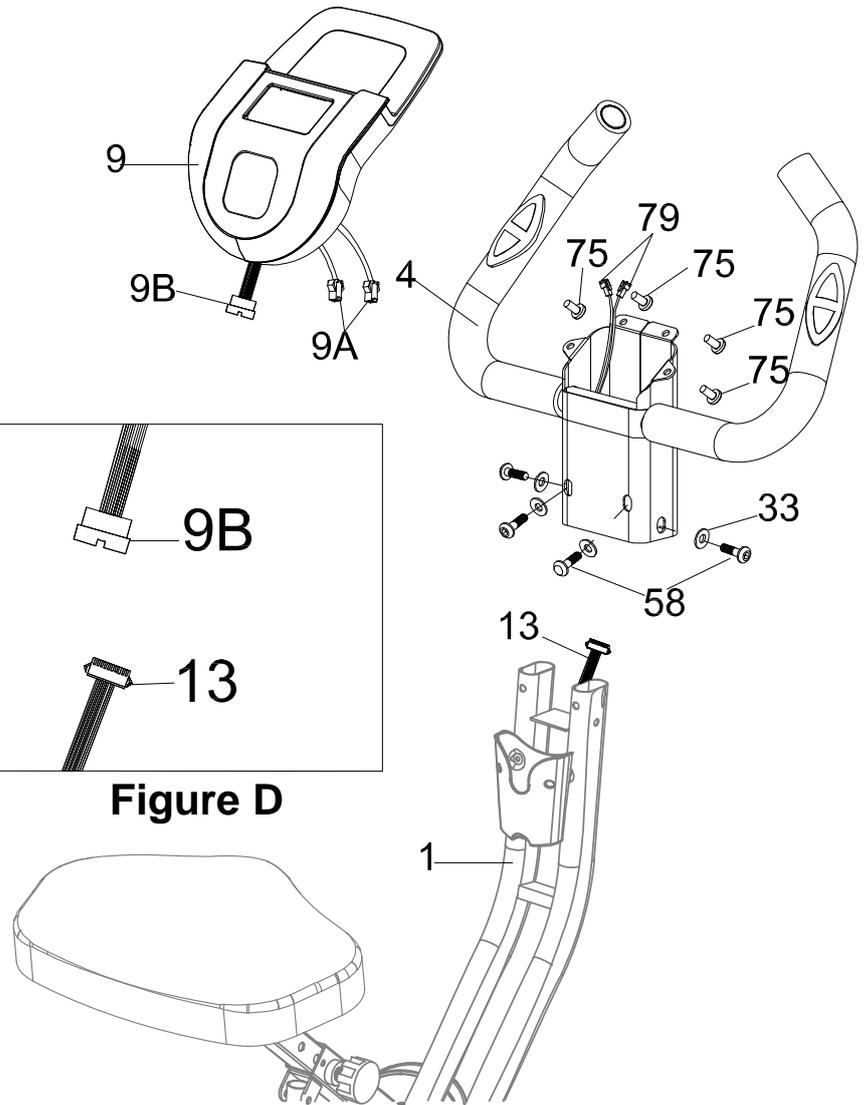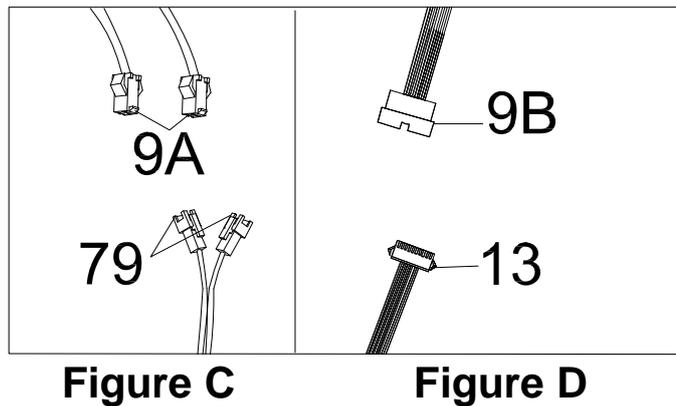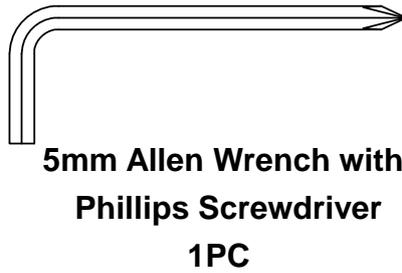


## Step 4

Remove four **Screws (75)** from the **Console (9)** first.


**4A Installing the Handlebar:** Place the **Handlebar (4)** onto the **Front Frame (1)**, Secure the **Handlebar (4)** onto the **Front Frame (1)** with four **Flat Washers (33)** and four **Hexagon Socket Bolts (58)**. Tighten the **Bolts (58)** with the **5mm Allen Wrench with Phillips Screwdriver** provided.

**4B Connecting the Computer Wire to the Sensor Wire:** Connect the **Hand Pulse Sensor (9A)** to the **Hand Pulse Sensor Wire (79)**. See **Figure C**. Connect the **Computer Wire (9B)** to the **Sensor Wire (13)**. See **Figure D**. Attach the **Console (9)** onto the **Handlebar (4)** and secure with four **Screws (75)** that were previous removed. Tighten the **Screws (75)** with the **5mm Allen Wrench with Phillips Screwdriver** provided.

## PRE-INSTALLED HARDWARE

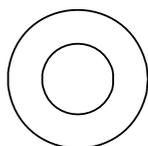


(33) Flat Washer  
4PCS

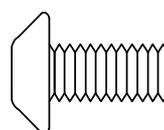

(58) Hexagon Socket Bolt  
4PCS

# ASSEMBLY

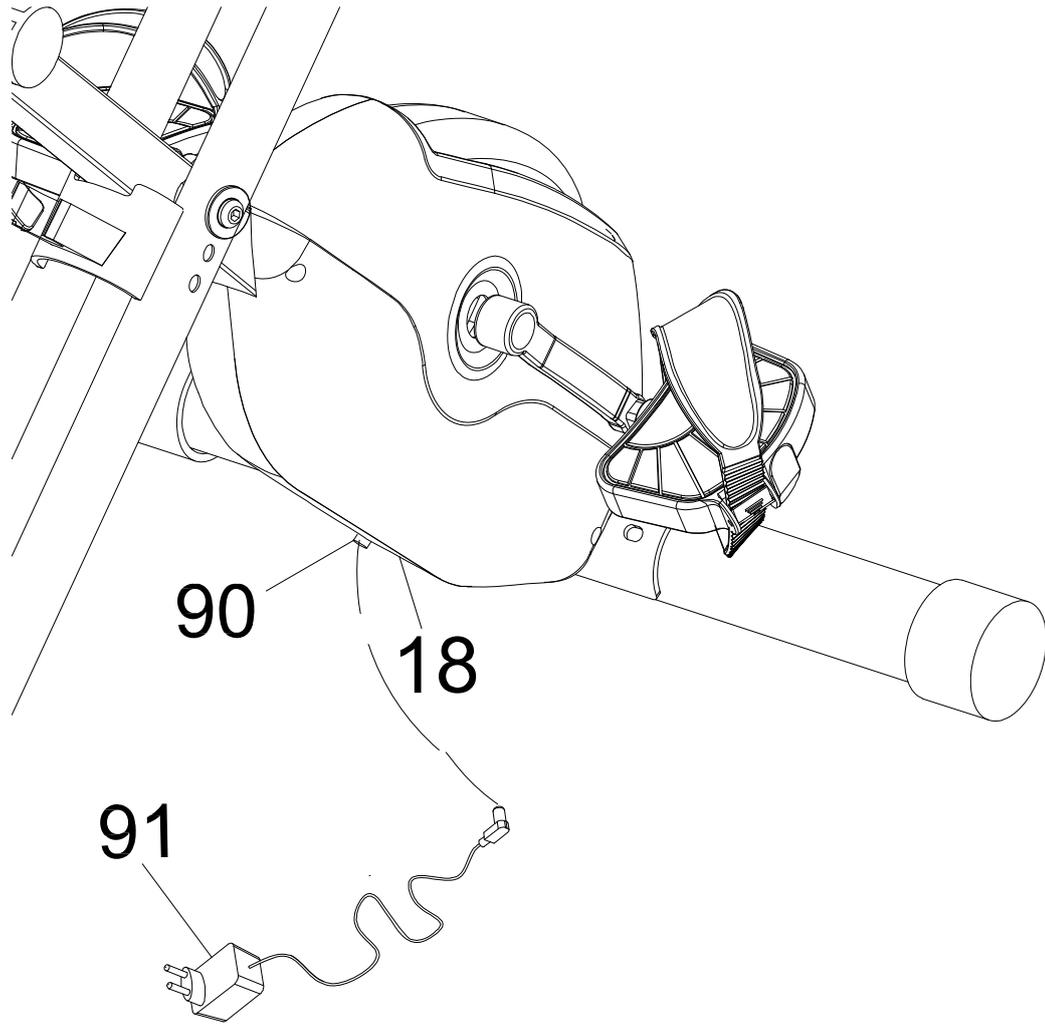

## Step 5

**5A. Power Adaptor Installation** – Plug the small end of the **AC Adaptor (91)** into the **Adaptor Wire (90)** at the rear of the **Left Cover (18)**, then plugging in the **AC Adaptor (91)** into an electrical outlet.

# CONSOLE FUNCTIONS

## Display Information:

TIME-----	00:00-99:00
SPEED -----	0.0-99.9 MPH / KM
DISTANCE (DIST) -----	0.0-999.9 ML
CALORIES (CAL) -----	0.0-999.9 CAL
ODOMETER (ODO) -----	0-999.9 ML



## CONSOLE BUTTONS:



**Start/Stop Button:** Starts and pauses workouts.



**Mode Button:** Switches displayed workout values:  
RPM  $\longleftrightarrow$  MPH/KMPH // DIST  $\longleftrightarrow$  ODO // CAL  $\longleftrightarrow$  WATT



**Up Button:** Increases the value of the selected workout settings: RESISTANCE, TIME, DISTANCE, CALORIES, PROGRAMS



**Down Button:** Decreases the value of the selected workout settings: RESISTANCE, TIME, DISTANCE, CALORIES, PROGRAMS





**Enter Button:** Confirms a selection or toggles through: TIME, DISTANCE/ODO, CALORIES, PROGRAMS

## USER Set Up:

The first screen that will appear after you turn on the Console will prompt you to choose between USER 1 and USER 2.

1. Press  $\blacktriangle$  or  $\blacktriangledown$  to choose between USER 1 and USER 2. After choosing one of the user profiles press ENTER.
2. Press  $\blacktriangle$  or  $\blacktriangledown$  to choose a gender, see the Male and Female Symbol in the top right corner, after choosing press ENTER.
3. Press  $\blacktriangle$  or  $\blacktriangledown$  to set a gender, see the Male and Female Symbol in the top right corner, after choosing press ENTER.
4. Press  $\blacktriangle$  or  $\blacktriangledown$  to set an age, after choosing press ENTER.
5. Press  $\blacktriangle$  or  $\blacktriangledown$  to set an age, after choosing press ENTER.
6. Press  $\blacktriangle$  or  $\blacktriangledown$  to set a height, after choosing press ENTER.
7. Press  $\blacktriangle$  or  $\blacktriangledown$  to set a weight, after choosing press ENTER.
8. Once you go through the set up the display will return to the U1 or U2 screen.

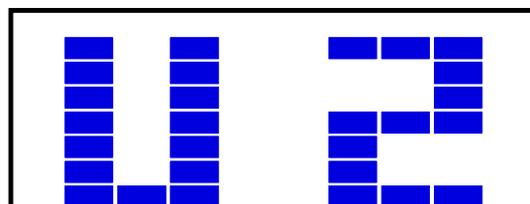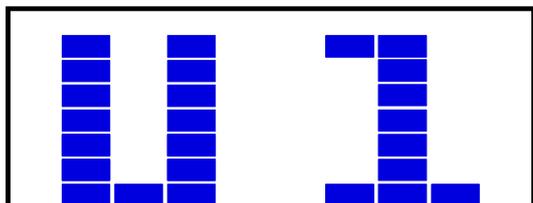

# CONSOLE FUNCTIONS

## Quick Start:

Pressing START at the user selection screen will take you into a "QUICKSTART" manual workout using the selected user profile. You can set a consistent resistance level for the entire workout with the **▲** or **▼** buttons.

## Workout Program:

Challenge yourself with one of the 21 preset workout programs.

1. Pressing the MODE button at the user selection screen will take you into the PROGRAM workout menu using the selected user profile.
2. Use the **▲** or **▼** buttons to scroll through the workout programs.
3. Press the START button to begin a workout with the displayed workout program. The clock will count up from zero.


## Target Workout Goal Program:

Set a goal for yourself when using one of the 21 preset workout programs:


1. Pressing the MODE button at the user selection screen will take you into the PROGRAM workout menu using the selected user profile.
2. Use the **▲** or **▼** buttons to select a workout program.
3. Pressing the ENTER button will cause the TIME, DISTANCE, or CALORIES display values to flash.
4. Use the **▲** or **▼** buttons to change the value of the flashing digits.
5. Press the START button to begin a workout using the set target workout goal. The set value will count down to zero. NOTE: only one target workout goal can be set.

## PRE-SET Programs:


P1 (Manual)

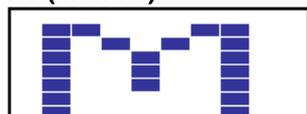


P2

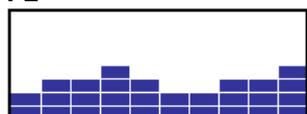


P3

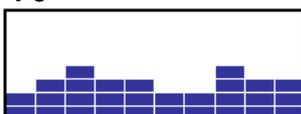


P4

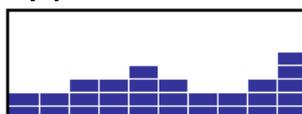


P5

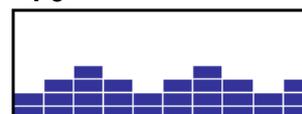

P6

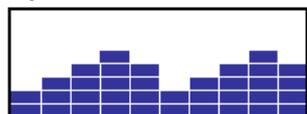


P7

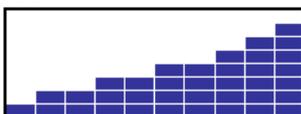


P8




P9

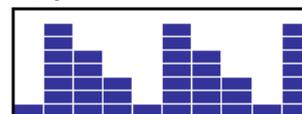

P10

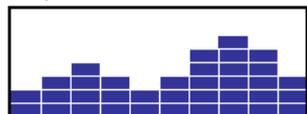


P11

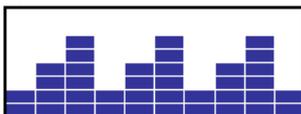


P12




P13

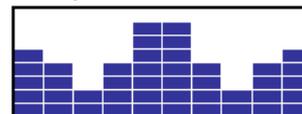


P14

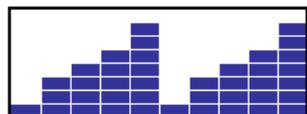


P15

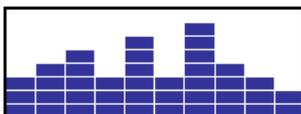


P16

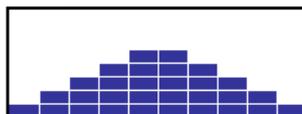

P17

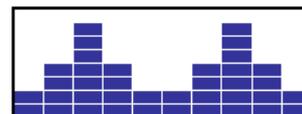


P18

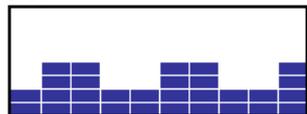


P19



P20

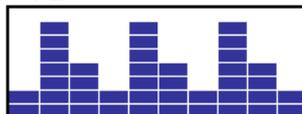

P21

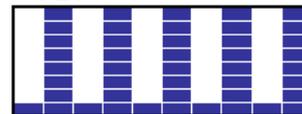

# CONSOLE FUNCTIONS

## CONSOLE FEATURES:



**CHANGE UNITS OF MEASUREMENT:** Pressing and holding **▲** and **▼** for 3 seconds will reset the console display and will change the units between Metric (kilometers) & Imperial (miles).




Pressing and holding the START button for 3 seconds will reset the console display.

**Shut Off:** The Console will go into standby after 4 minutes of inactivity.


**Resistance:** The Resistance can be adjusted during an active Pre-set Program, but the adjustment only affects the current column/interval.

# STORAGE

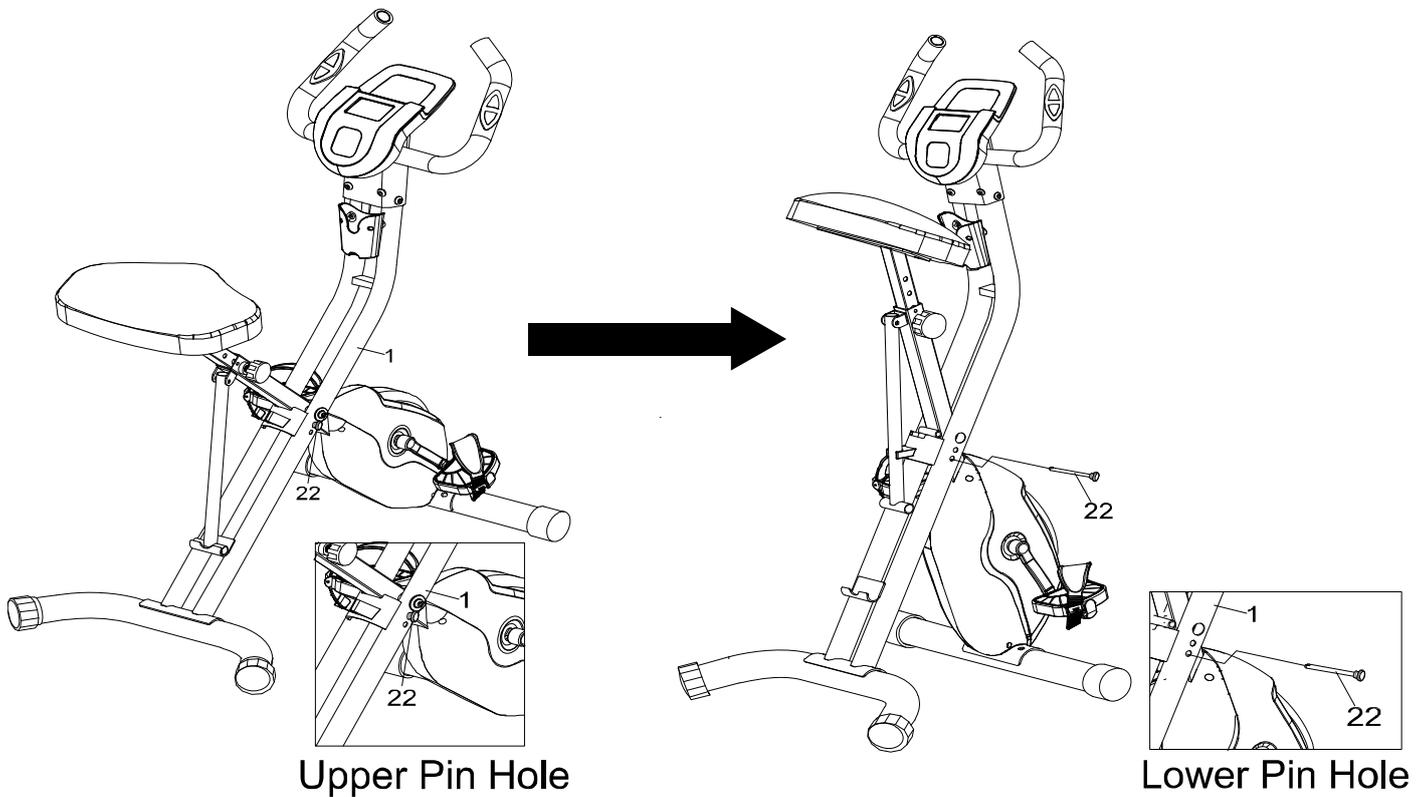

**For your convenience, the bike can be folded up for storage.**

1. Remove the **Safety Pin (22)** from the upper pin hole on the **Front Frame (1)**
2. Fold the Front and Rear frames together.
3. **Re-insert** the **Safety Pin (22)** into the lower pin hole on the **Front Frame (1)** to secure the **Front and Rear Frames (1,2)** together.
4. Place the **Rear Frame Support Tube (67)** into the **Support Tube Holder (49)**.

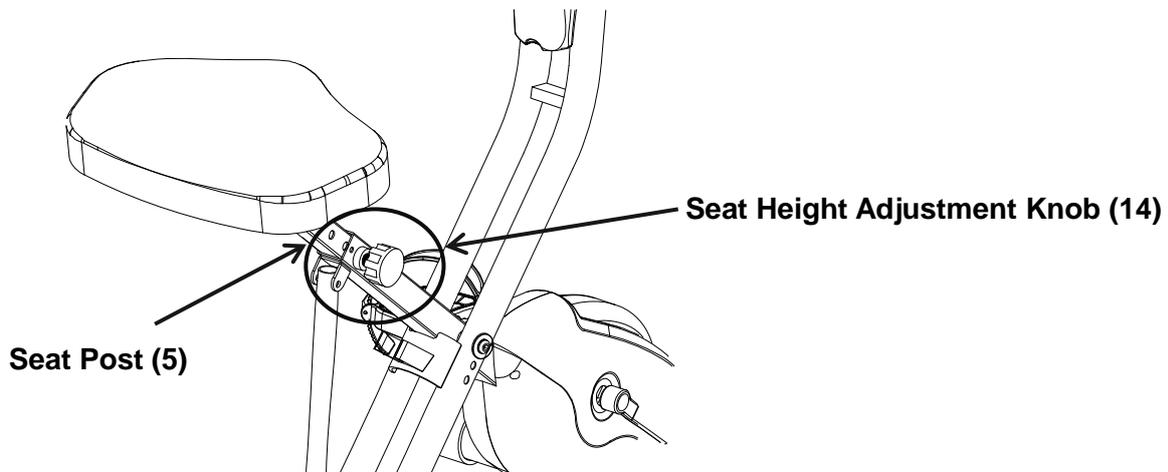


## Adjusting the Seat Height

Loosen the **Seat Height Adjustment Knob (14)** by turning it **counterclockwise**. Pull AND hold to release the pin. While the Knob is being pulled, adjust the **Seat Post (5)** to the desired height. Release the **Seat Height Adjustment Knob (14)** to allow the pin to catch one of the holes along the **Seat Post (5)**. Then tighten **Seat Height Adjustment Knob (14)** by turning it **clockwise** to secure the seat in place.

**NOTE:** When adjusting the height of the **Seat Post (5)**, make sure the height of the **Seat Post (5)** does not exceed the **MAX** line on the **Seat Post (5)**.

## Adjusting the Pedal Strap

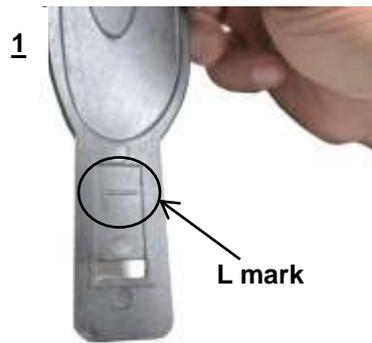

The **Left Pedal Strap (87)** has an L marked on the strap (see **Figure 1**).




Snap the slotted end of the **Left Pedal Strap (87)** onto the tab on the inside edge of the **Left Pedal (7)** (See **Figures 2 and 3**).



Insert the ridged end of the **Left Pedal Strap (87)** into the red clip on the **Left Pedal (7)** (see **Figures 4**).

**Adjusting the Left Pedal Strap:** To make the **Left Pedal Strap (87)** tighter, pull the lower ridged portion down (see **Figures 5**). To make the **Left Pedal Strap (87)** more loose, push the red clip down and pull up on the upper portion of the **Left pedal strap (87)** (See **Figure 5**).

**Adjusting The Right Pedal Strap:** Use the same procedure to assemble and adjust the **Right Pedal Strap (88)** onto the **Right Pedal (8)**.

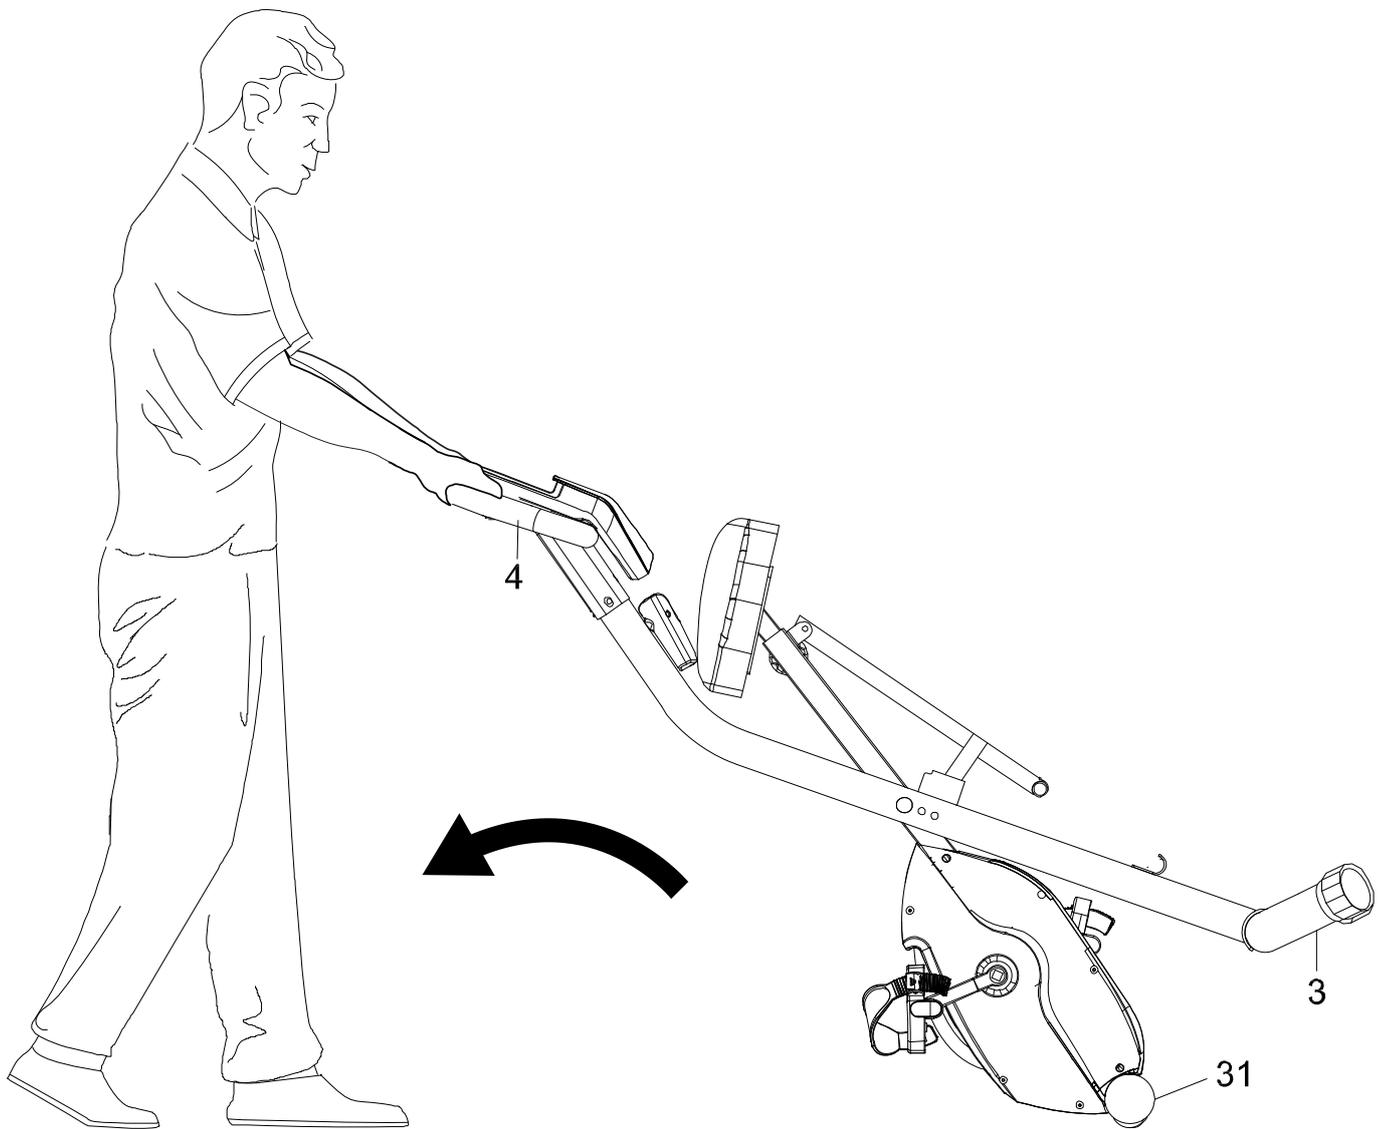

## Transporting the Bike

Hold the **Handlebar (4)** and tilt the bike forward until the wheels on the **Front Stabilizer (31)** make contact with the floor. Push or pull the unit to the desired location, then gently lower the **Rear Stabilizer (3)** back down to the ground.

## MAINTENANCE

### Cleaning

The bike can be cleaned with a soft, clean damp cloth. Do not use abrasives or solvents on the plastic parts. Wipe your perspiration off the bike after each use. Be careful not to get excessive moisture on the computer display panel as this might cause an electrical hazard or the electronics to fail. Keep the computer console and the bike, out of direct sunlight to prevent screen damage. Inspect all assembly bolts, nuts, screws, and pedals on the machine for proper tightness every week.

### Storage

Store the bike in a clean and dry environment away from pets and children.

## TROUBLE SHOOTING

**PROBLEM:** The **Computer (9)** does not turn on.

**SOLUTION:** Remove the **Computer (9)** and verify that ALL wires that come from the **Computer (9)** are properly connected to the wires coming from the **Front Frame (1)**.

**PROBLEM:** There is no heart rate reading or the heart rate reading is erratic / inconsistent.

**SOLUTION:** Make sure that the wire connections for the hand pulse sensors are secure.

**SOLUTION:** To ensure the pulse readout is accurate, always hold on to the handlebar grip sensors with two hands instead of just with one hand.

**SOLUTION:** Avoid gripping the hand pulse sensors too tight. Try to maintain even pressure while holding onto the hand pulse sensors.

**PROBLEM:** The bike makes a squeaking noise when in use.

**SOLUTION:** The bolts may be loose on the equipment. Check all of the nuts, bolts, screws and tighten any loose Hardware.

**PROBLEM:** The pedals came unscrewed while in use.

**SOLUTION:** Reinstall the pedals and if you cannot then contact Customer Service.

**PROBLEM:** How to reset the data on display.

**SOLUTION:** Hold the Mode Key down for 3-10 Seconds, this will reset the display (Note: The Odometer will not be reset. To reset odometer, remove the batteries from the **Computer (9)**).

# WARRANTY

## **MANUFACTURER'S LIMITED WARRANTY**

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with Paradigm's Owner's Manual. Paradigm's obligation under this warranty applies to the following:

<b><u>COMPONENT</u></b>	<b><u>LENGTH OF WARRANTY</u></b>
<b>Structural Frame</b>	<b>1 year For Home Use Only</b>
<b>All Other Components</b>	<b>90 days For Home Use Only</b>

### **Exclusions from Warranty Coverage:**

Paradigm does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by Paradigm's installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
5. Any act of Nature (such as fire, flooding, snow, ice, hurricane, earthquake, lightning or other natural disaster), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to, among other things, flake, chalk, accumulate dirt or stains.
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

**Paradigm, using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.**

### Ordering Replacement Parts

Replacement parts can be ordered by emailing our customer service department:

**Service@paradigmhw.com**

Open Monday thru Friday 8:00 AM - 5:00 PM (PST).

When ordering replacement parts please have the following information ready:

- 1. Owner's Manual**
- 2. Model Number**
- 3. Description of Parts**
- 4. Part Number**
- 5. Date of Purchase**

