

IRONKIDS®

fitnessplayground

FITNESS PLAYGROUND

ITEM NO: 8101K



OWNER'S MANUAL

8101K.1-051620

CAUTION: This unit is designed to be used safely by up to 5 children between the ages of 3 years to 8 years old with a maximum weight of 80 pounds (36.6kgs) each, simultaneously, not to exceed a combined weight of 400 pounds (181.4kgs).

The specifications of this product may vary from this photo and are subject to change without notice.

IRONKIDS® and the "K-DOT" logo are registered trademarks of World Triathlon Corporation.
Official Product of IRONKIDS. Used here by permission.
For more brand information please visit www.ironkids.com



PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

STOP. Contact customer service if you have any questions regarding assembly or proper operation of the machine.

Email us at:
Service@paradigmhw.com

TABLE OF CONTENTS

SERVICES-----	2
LABEL PLACEMENT-----	3
SAFETY -----	4
OVERVIEW DRAWING -----	8
INCLUDED HARDWARE -----	9
PARTS -----	10
TOOLS REQUIRED FOR ASSEMBLY -----	18
ASSEMBLY INSTRUCTIONS -----	19
ANCHOR INSTALLATION -----	32
WARRANTY-----	34
PARTS REQUEST FORM -----	35

SERVICE

IMPORTANT: FOR NORTH AMERICA ONLY

For damaged or defective product, questions, replacement parts or any other service support, please contact our customer service department (8:00 AM - 5:00 PM Pacific Standard Time, Monday thru Friday) by the below methods:

For The Best Service, please Email:

service@paradigmhw.com

Response Time: 1-2 Business Days

Emailing us with the information above will be the best method to receive a response during peak business hours

Website:

www.paradigmhw.com

Toll-Free:

1-844-641-7922

Monday thru Friday (PST)

Response time may vary via calling

Refer to our email for the best response time

Please have the following information ready when requesting for service:

- **Your name**
- **Phone number**
- **Model number**
- **Serial number**
- **Part number**
- **Proof of Purchase**

For damaged or defective product please contact our customer service before returning to the store.

Paradigm Health & Wellness, Inc.

1189 Jellick Ave.

City of Industry, CA 91748, USA

LABEL PLACEMENT



⚠ WARNING
 For canopy: Make sure all joints are properly secured. Do not use the canopy as a climbing structure. Do not use the canopy as a storage area. Do not use the canopy as a shelter. Do not use the canopy as a play area. Do not use the canopy as a sleeping area. Do not use the canopy as a storage area. Do not use the canopy as a shelter. Do not use the canopy as a play area. Do not use the canopy as a sleeping area.

⚠ AVERTISSEMENT
 Pour canopy: S'assurer que toutes les articulations sont correctement sécurisées. Ne pas utiliser le canopy comme structure d'escalade. Ne pas utiliser le canopy comme zone de rangement. Ne pas utiliser le canopy comme abri. Ne pas utiliser le canopy comme aire de jeu. Ne pas utiliser le canopy comme zone de sommeil.

⚠ WARNING
 - Use of your own risk.
 - For family domestic use and only.
 - This play set complies with ASTM F 1138.
 - Maximum weight limit of 90 lbs per station.
 - CE marked to EN 1176 standard.

⚠ AVERTISSEMENT
 - Utilisez à vos propres risques.
 - À usage domestique familial et uniquement.
 - Cet ensemble de jeux est conforme à l'ASTM F 1138.
 - Ce produit a un limite de poids maximum de 39 kg par station.
 - CE marqué à la norme EN 1176.

COMPANY NAME	Paradigm Health & Wellness
ADDRESS	1180 Jollick Ave, City of Industry, CA 91748
TEL	1-844-641-7922
MODEL	8101K

MAUFACTURING DATE	05 / 19
ORDER	13100905
MADE IN	CHINA

ADULT SUPERVISION REQUIRED FOR USE AT ALL TIMES
LIBRE LE MANUEL AVANT L'UTILISATION.

READ MANUAL BEFORE USE
TOUJOURS PORTER DES CHAUSSURES APPROPRIÉES.

ALWAYS WEAR PROPER FOOTWEAR
NE PAS UTILISER L'ÉQUIPEMENT WHEN WET

NO RUNNING, PUSHING, SHOVING, OR ROUGH-HOUSING
NE PAS COURIR, POUSSER, BOUSCULER, SE BAGARRER.

FOR KIDS AGES 3 - 8 YEARS
POUR LES ENFANTS DE 3 - 8 ANS

ADULT SUPERVISION IS REQUIRED.
LA SUPERVISION D'UN ADULTE EST REQUISE.

IRONKIDS.
 For customer assistance call:
1-844-641-7922
 9 am - 5 pm PST
 Monday - Friday

Pour le service à la clientèle composer le:
1-844-641-7922
 Lundi à vendredi
 800 h - 17 h (PST)

Model 8101K

Serial Number: 15100221

MADE IN CHINA / FABRIQUE EN CHINE

Adult supervision is required.
 Landing on the head or neck may result in severe injuries or death. Performing acrobatic movements will increase chances of landing on your head or neck.

La supervision d'un adulte est requise.
 Le fait de tomber sur la tête ou le cou peut entraîner des blessures graves, voire mortelles. Les mouvements acrobatiques augmentent le risque d'atterrir sur la tête ou le cou.

Only one person at a time on the trampoline.
 Seulement une personne à la fois doit se trouver sur le trampoline.



SAFETY

Read all instructions carefully before assembling operating this product. Retain this Owner's manual and keep the original purchase receipt for future reference.

1. Before assembling the Fitness Playground, find level ground no less than 6 feet from any structure or obstruction to the Fitness Playground. The Fitness Playground must have clearance on all sides.
2. To prevent serious injury, do not allow children to play on the Fitness Playground until it is completely installed.
3. Do not install the Fitness Playground over concrete, packed dirt, or any other hard surface. A fall onto a hard surface can result in serious injury.
4. Only adults should assemble or disassemble this Fitness Playground.
5. This product **MUST** be anchored.
6. Adult supervision of children is required at all times when on or around this Fitness Playground. Never leave children unattended.
7. Do not swing too high or at an angle. Do not hang on or climb from structural members of the Fitness Playground.
8. Do not exceed the intended weight limit or maximum number of users for the Fitness Playground.
9. This product is intended to be used by children between the ages of 3-8 years old.
10. Be sure to observe your children and ensure that they have the strength and skills to enjoy all the rides safely before use on their own.
11. Do not allow children to walk close to, behind, or in front of moving items.
12. Do not allow children to twist swing chains or ropes or loop them over the top bar. This may reduce the strength of the chain or rope.
13. Teach and instruct children not to swing empty seats.
14. Instruct children how to sit in the center of the seats and swing with their full weight on the seat.
15. Warn children not to use the equipment in any manner other than intended.
16. Warn children not to get off the equipment while in motion.
17. Warn children to not wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
18. Equipment may be slippery when wet. Do not allow children to use the equipment when wet.
19. Parents should regularly check openings and surfaces, such as slides, for items that may be hazardous.
20. Parents should check swing chains to ensure they are secure.
21. Do not place any part of the body near moving parts.
22. Never slide head first down the slide.
23. Verify that suspended climbing ropes, chain, or cable are secured at both ends.
24. Verify that suspended climbing ropes, chain, or cable cannot be looped back on itself.
25. Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
26. Children must be supervised at all times. No playground is safe without adult supervision.
27. When using the trampoline, do not perform flips, as this will increase the chances of injury. No more than one person at a time on the trampoline. Do not allow children to use without proper supervision.
28. Instruct children to remove their bike or other sports helmet before playing on the playground equipment.
29. Dress children with wellfitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, and sandals.
30. Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).
31. Improper usage or installation of Basketball hoop can cause serious injury.

Play Ground Rules

1. No running, pushing, shoving, or roughhousing.

5 GG9 A 6 @M-BGHFI 7 H-CBG

- Place the playground equipment on level ground, no less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury.

TIGHTENING NUTS & BOLTS

- ‘ Do not over-tighten the nuts and bolts when you are assembling your playground equipment. This will allow for some possible adjustments and ease of installation.
- ‘ Once you have completed the assembly of the playground equipment, go back over all of the nuts, and bolts and properly tighten them before using the playground equipment.
- ‘ Tighten all hardware.

CARE & MAINTENANCE

- Owners shall be responsible for maintaining the legibility of the warning labels.

At the beginning of each play season:

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Twice a month during play season:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Once a month during play season:

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

At the end of each play season or when the temperature drops below 32 °F

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.


Disposal Instructions:

- Disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the playground equipment is discarded.


PROTECTIVE PLAYGROUND SURFACE

- Select Protective Surfacing—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification **F1292**. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:
- **Loose-Fill Materials:** Maintain a minimum depth of 9 in. (229 mm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 96 in. (2438 mm) high; and 9 in. (229 mm) of sand or pea gravel for equipment up to 60 in. (1524 mm) high.
- **NOTE:** An initial fill level of 12 in. (305 mm) will compress to about a 9 in. (229 mm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9 in. (229 mm) depth. X2.1.2 Use a minimum of 6 in. (152 mm) of protective surfacing for play equipment less than 48 in. (1219 mm) in height. If maintained properly, this should be adequate. (At depths less than 6 in. (152 mm), the protective material is too easily displaced or compacted.)
- **NOTE:** Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing.
- **Ground level equipment** – such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- **Do not** install loose fill surfacing over hard surfaces such as concrete or asphalt.
- **Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles**—You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.
- Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment.
- Check the protective surfacing frequently for wear.

- **Protective Material Placement**—Proper placement and maintenance of protective surfacing is essential. Be sure to:
- Extend surfacing at least 72 in. (1829 mm) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 ft in all directions.

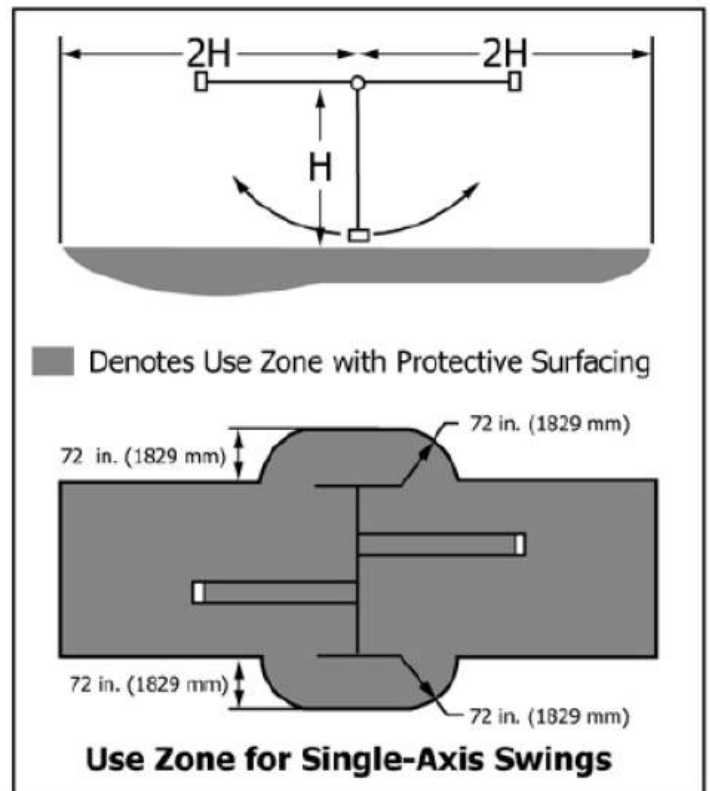


Overview Drawing

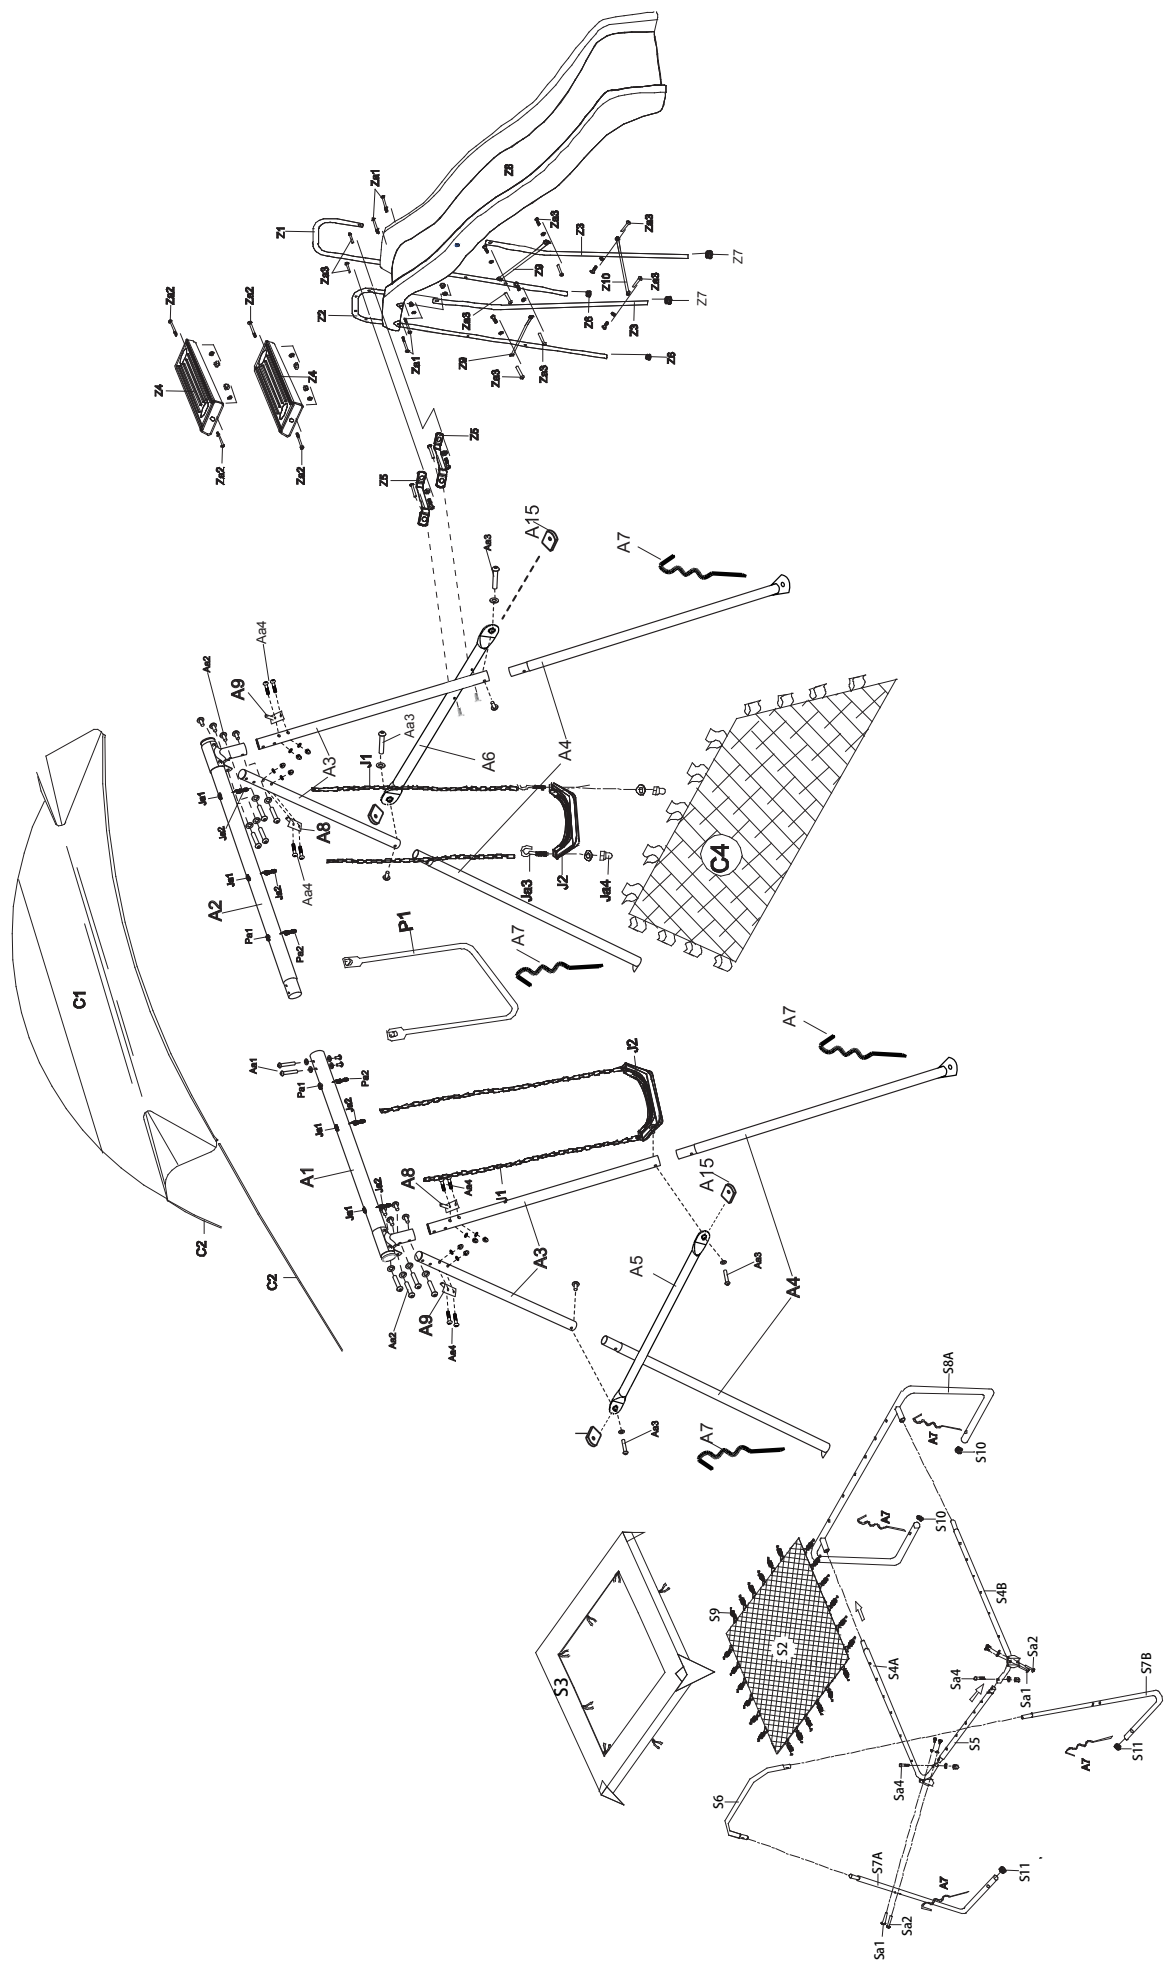

Hardware used for main frame assembly

(Aa1)

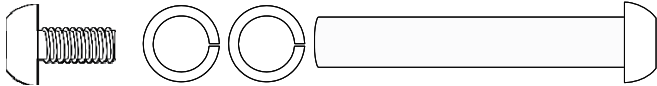


Binder Post & Bolt Set (Preassembled)

M8x15 Male Bolt

Ø10x52 Female Bolt

2 SETS

(Aa2)

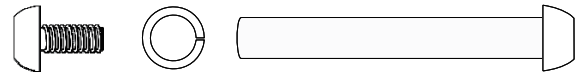


Binder Post & Bolt Set (Preassembled)

M6x12 Male Bolt

Ø8x48 Female Bolt

8 SETS

(Aa3)

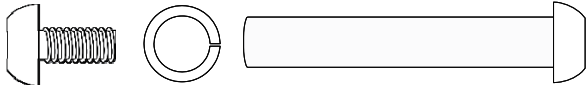


Binder Post & Bolt Set (Preassembled)

M6x12 Male Bolt

Ø8x45 Female Bolt

4 SETS

(Aa4)

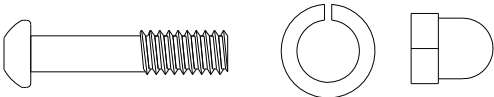


M6x55 Bolt Set (Preassembled)

8 SETS

Hardware used for trampoline assembly

(Sa1)

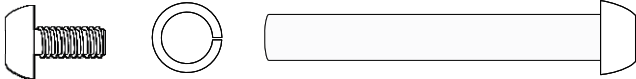


Binder Post & Bolt Set (Preassembled)

M6x12 Male Bolt

Ø8x52 Female Bolt

2 SETS

(Sa2)

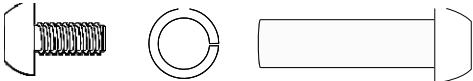


Binder Post & Bolt Set (Preassembled)

M6x12 Male Bolt

Ø8x26 Female Bolt

2 SETS

(Sa4)

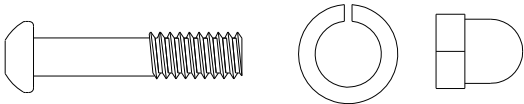






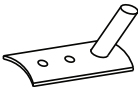
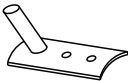



M6x32 Bolt Set (Preassembled)





2 SETS



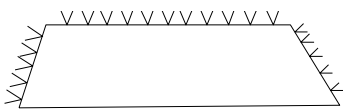
PARTS

Parts used for main frame assembly






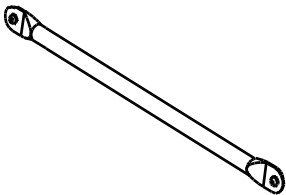
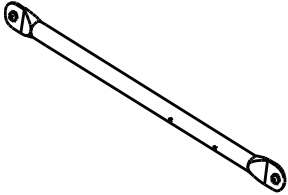

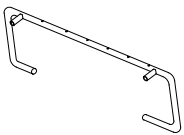
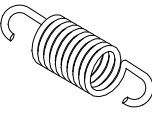

A1		Top Bar	1 PC
A2		Top Bar	1 PC
A3		Leg Bar	4 PCS
A4		Leg	4 PCS
A5		Cross Bar	1 PC
A6		Cross Bar (Slide side)	1 PC
A7		Anchor	4 PCS
A8		Plastic Stick Holder 1	2 PCS
A9		Plastic Stick Holder 2	2 PCS
A15		Crossbar Cap	4 PCS

Hardware used for main frame assembly

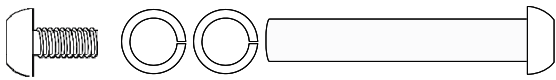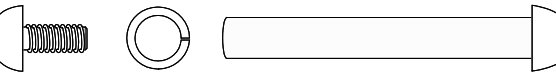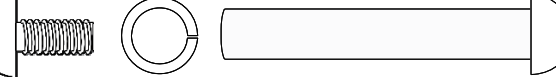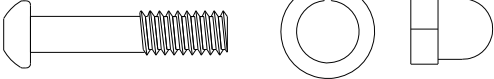

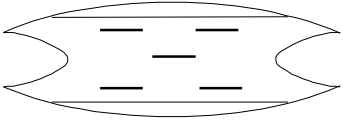Aa1		Binder Post & Bolt Set (Preassembled)	2 SETS
Aa2		Binder Post & Bolt Set (Preassembled)	8 SETS
Aa3		Binder Post & Bolt Set (Preassembled)	4 SETS
Aa4		Binder Post & Bolt Set (Preassembled)	8 SETS




C1		Sunshade	1 PC
C2		Plastic Stick	2 SETS
C4		Protective Net	1 PC

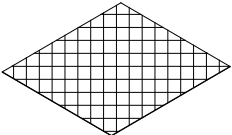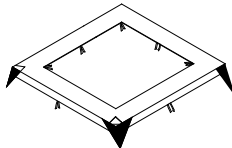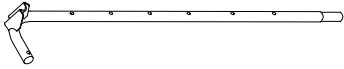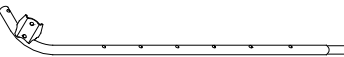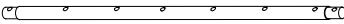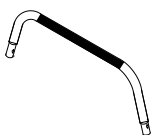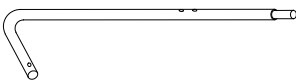Parts used for trampoline assembly

S2		Jump Mat	1 PC
S3		Frame Pad	1 PC
S4A		L-Shaped Tube (Left)	1 PC
S4B		L-Shaped Tube (Right)	1 PC
S5		Straight Tube	1 PC
S6		Handlebar with Foam	1 PC
S7A		Handlebar Base Tube (Left)	1 PC
S7B		Handlebar Base Tube (Right)	1 PC
S8A		Elbow Tube	1 PC
S9		Spring	24 PCS
A7		Anchor	4 PCS

Hardware used for trampoline assembly



S10		Elbow Tube End Cap (Preassembled)	2 PCS
S11		Handlebar Base Tube End Cap (Preassembled)	2 PCS

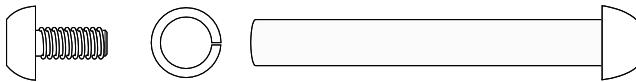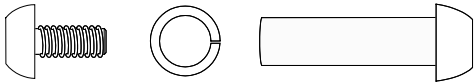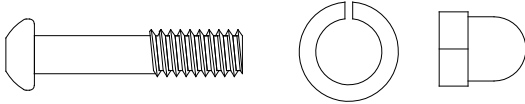Sa1		Binder Post & Bolt Set (Preassembled)	2 SETS
Sa2		Binder Post & Bolt Set (Preassembled)	2 SETS
Sa4		Bolt Set (Preassembled)	2 SETS



Parts used for trapeze assembly

P1		Trapeze Tube	1 PC
----	---	--------------	------

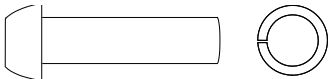

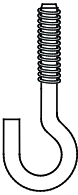
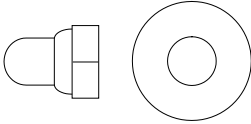
Hardware used for trapeze assembly

Pa1		Female Bolt Set (Preassembled)	2 SETS
Pa2		Eye Bolt Set (Preassembled)	2 SETS








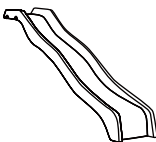
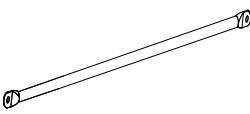
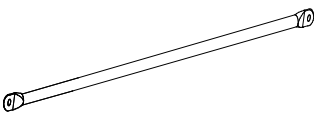
Parts used for swing seats assembly

J1		Swing Chain	4 PCS
J2		Swing Seat	2 PCS

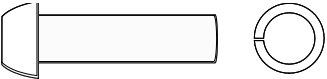


Hardware used for swing seats assembly

Ja1		Female Bolt Set (Preassembled)	4 SETS
Ja2		Eye Bolt Set (Preassembled)	4 SETS
Ja3		Screw Hook (Preassembled)	4 PCS
Ja4		Screw Hook Cap Set	4 SETS

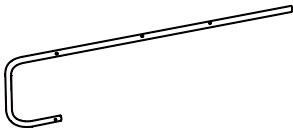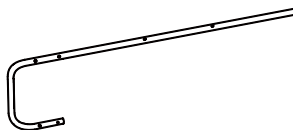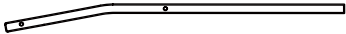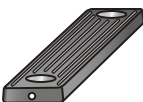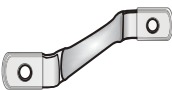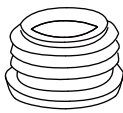Parts used for slide assembly


Z1		Slide Ladder Support Tube	1 PC
Z2		Slide Ladder Connecting Tube	1 PC
Z3		Slide Leg Tube	2 PCS
Z4		Slide Ladder Step	2 PCS
Z5		Connecting Plate	2 PCS
Z6		Cap for Z1 and Z2 (Preassembled)	2 PCS
Z7		Cap for Z3 (Preassembled)	2 PCS
Z8		Slide	1 PC
Z9		Slide Ladder Support Tube Cross Bar	2 PCS
Z10		Slide Leg Cross Bar	1 PC

Hardware used for slide assembly


Za1		M6X36 Bolt Set (Preassembled)	4 SETS
Za2		M6X42 Bolt Set (Preassembled)	4 SETS
Za3		Binder Post & Bolt Set (Preassembled) M6X12 Bolt Ø8X24 Sleeve Nut	10 SETS

TOOLS REQUIRED FOR ASSEMBLY


Please prepare the following tools prior to assemble this equipment.

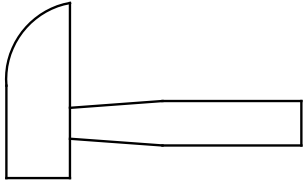


Hammer

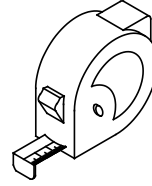


Tape Measure




Phillips Screwdriver

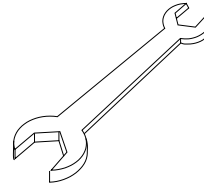


Wrench 13x10mm
(Included)

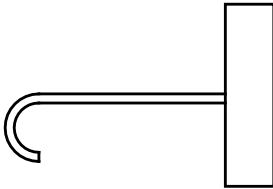

Spring Loading
(Included)

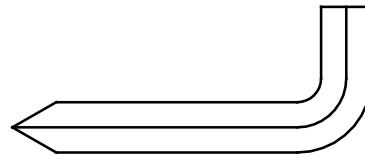

Big Allen Wrench with Phillips Screwdriver M5
(Included)

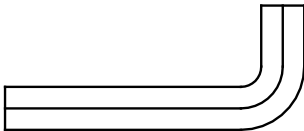

Allen Wrench M5
(Included)

ASSEMBLY INSTRUCTIONS

- Place the playground equipment on level ground, no less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury.

TIGHTENING NUTS & BOLTS


- Do not over-tighten the nuts and bolts when you are assembling your playground equipment. This will allow for some possible adjustments and ease of installation.
- Once you have completed the assembly of the playground equipment, go back over all of the nuts, and bolts and properly tighten them before using the playground equipment.


CARE AND MAINTENANCE

Inspect all Nuts, Bolts, and Anchors monthly, tighten as required.

Main Frame Layout


- See the image below to plan out how you will set up the main frame of the playground.
- Reference the Ground Anchor Section for how to properly anchor the main frame to the ground.
- **THIS IS VERY IMPORTANT: If the swing set is used without proper anchoring, it may be dangerous and may tilt over.**

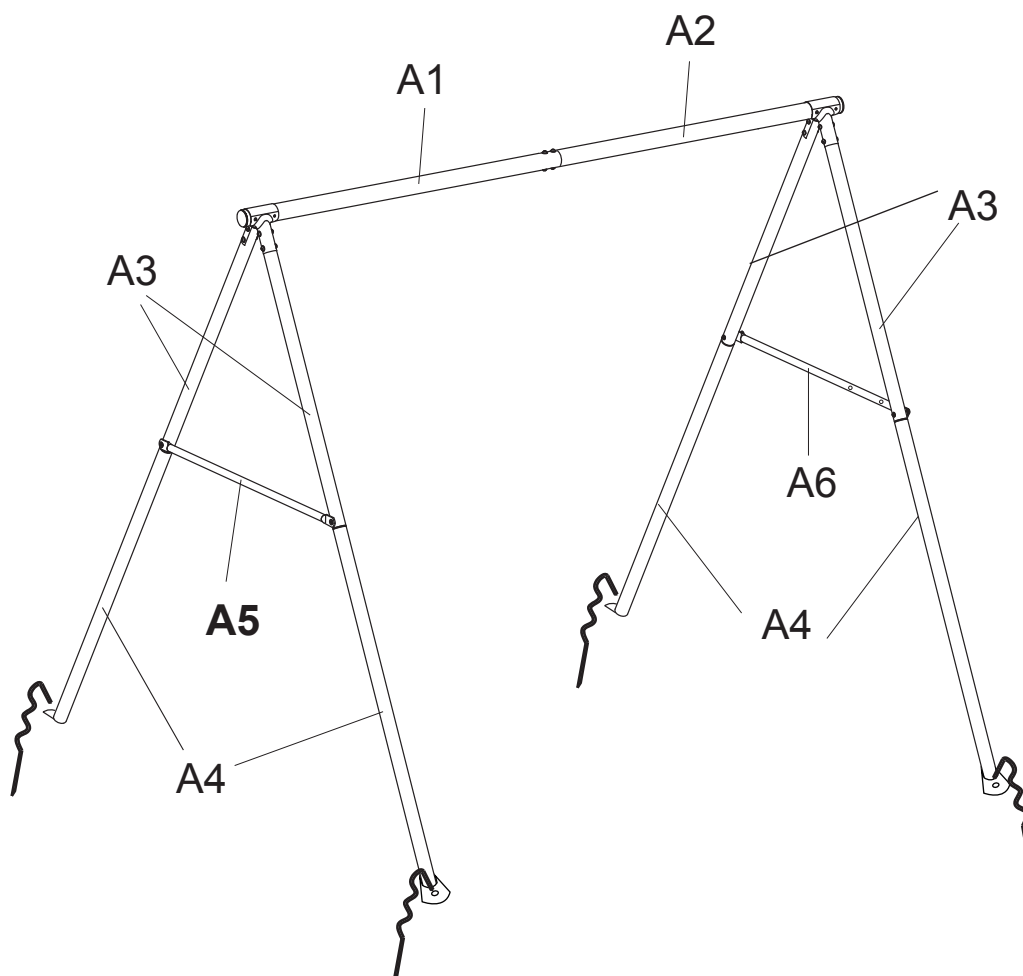

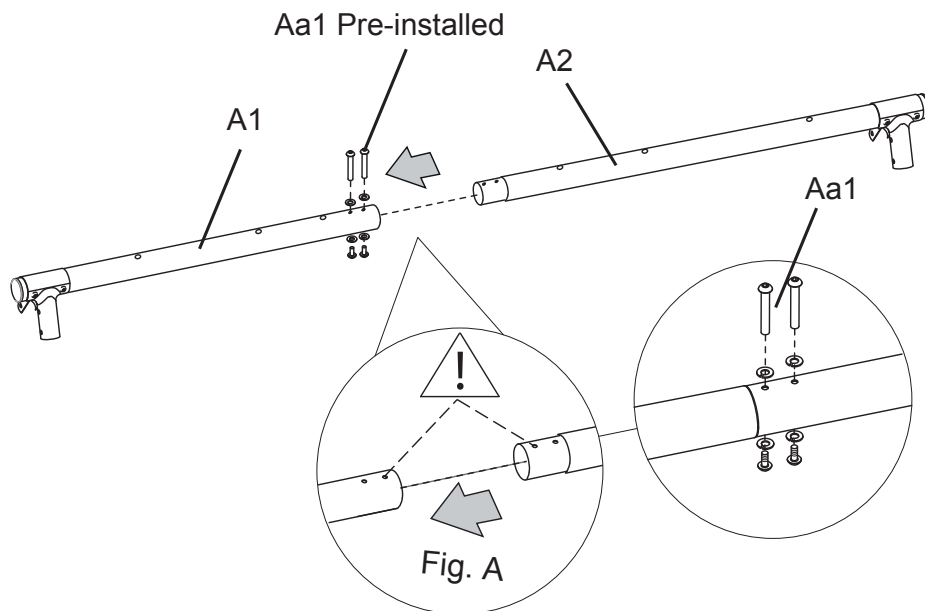


Step 1

- Remove two sets of **Binder Post and Bolt Sets (Aa1)** from the **Top Bar (A1)**.
- Insert the **Top Bar (A2)** into the **Top Bar (A1)** and align the screw holes. Then use the **two Binder Post and Bolt Sets (Aa1)** to secure the bars together. Tighten the **Binder Post and Bolt Sets (Aa1)** with the Allen Wrench provided. **See FIG A.**

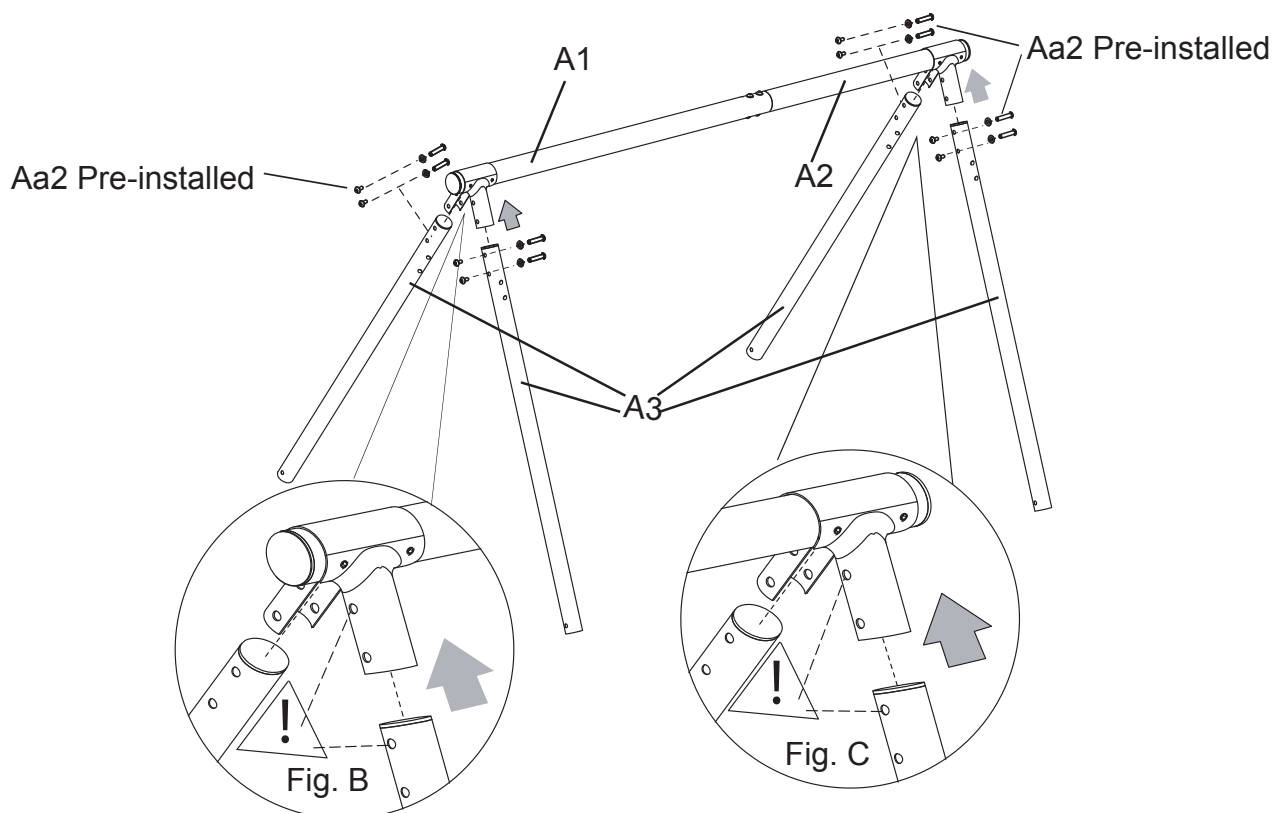


Step 2

- Remove the eight bottom sets of **Binder Post & Bolt Set (Aa2)** from the **four Leg Bars (A3)**.
- Insert a **Leg Bars (A3)** into each socket of the **Top Bar (A1)** and the **Top Bar (A2)** and make sure the holes are aligned. **See Fig B and C.**

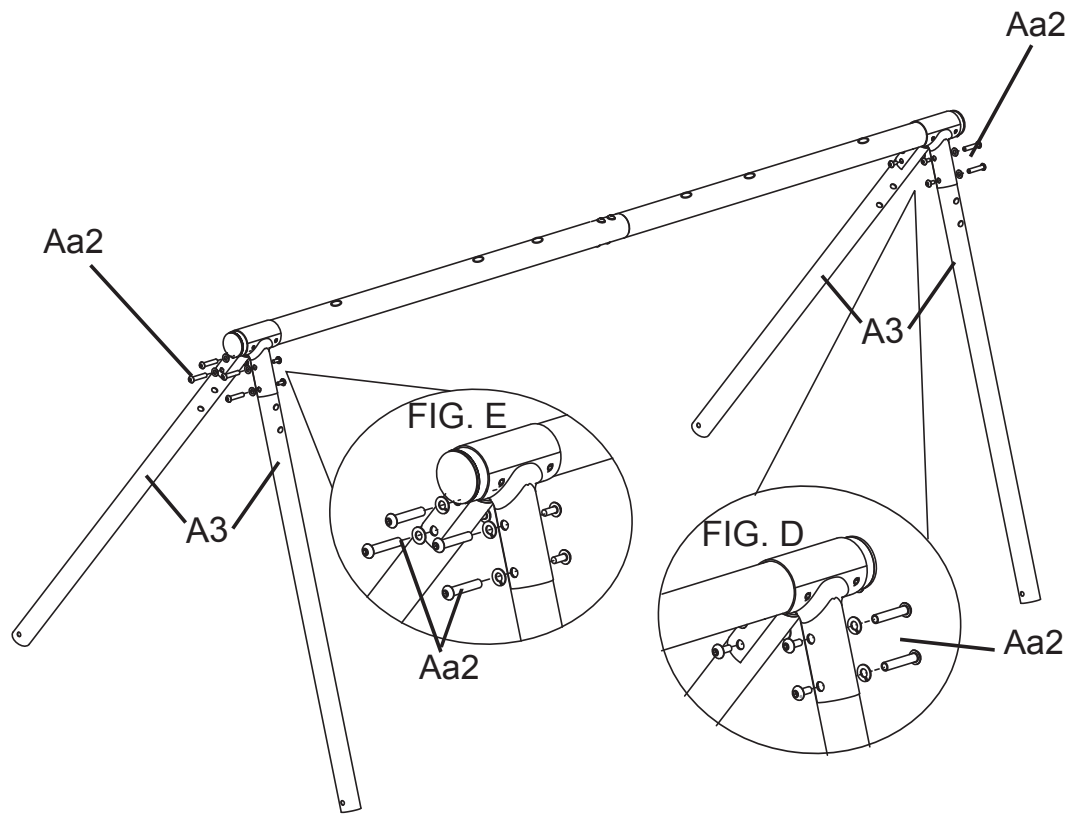


Step 3

- Secure the **Leg Bars (A3)** to the **Top Bars (A1) & (A2)** using the eight sets of **Binder Post & Bolt Set (Aa2)** that were removed in **Step 2**. See **Fig D and E**.

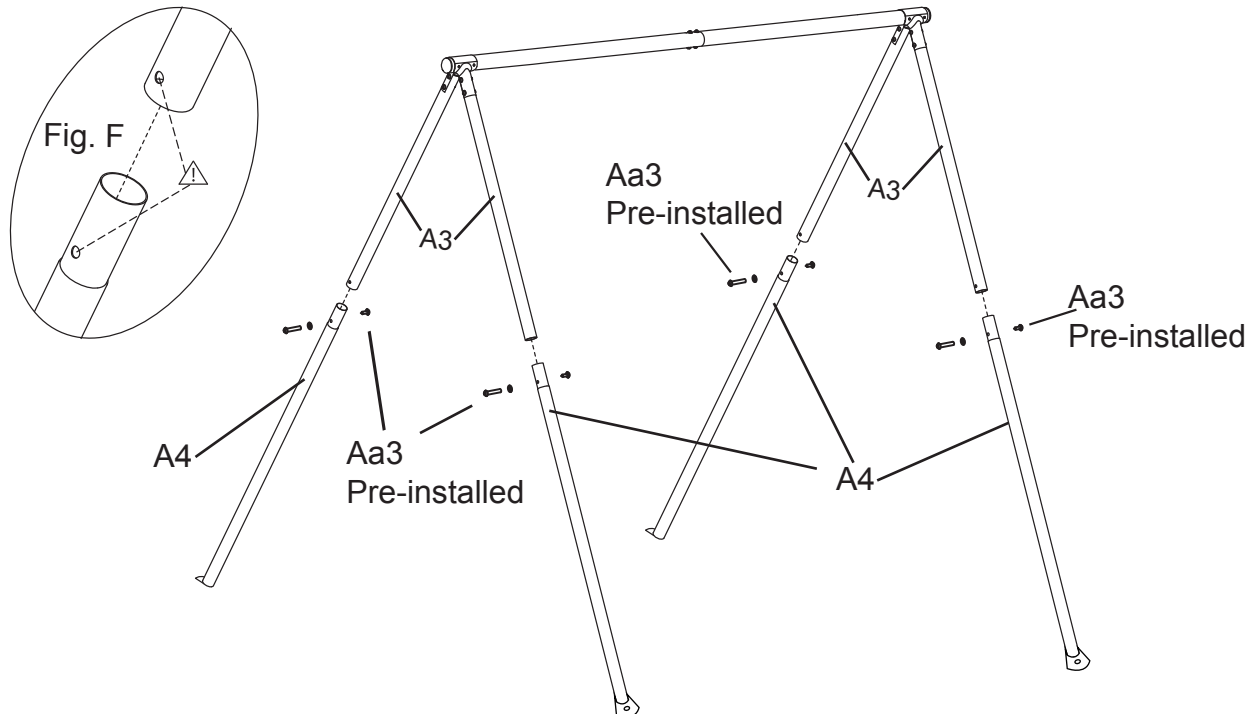

Step 4


- Remove **four sets of Binder Post & Bolt Set (Aa3)** from the **Leg Bars (A4)**.
- Insert four **Legs (A4)** into the four **Leg Bars (A3)**, and make sure the holes are aligned. See **Fig F**.
- The feet of the four **Legs (A4)** should be flat on the ground.

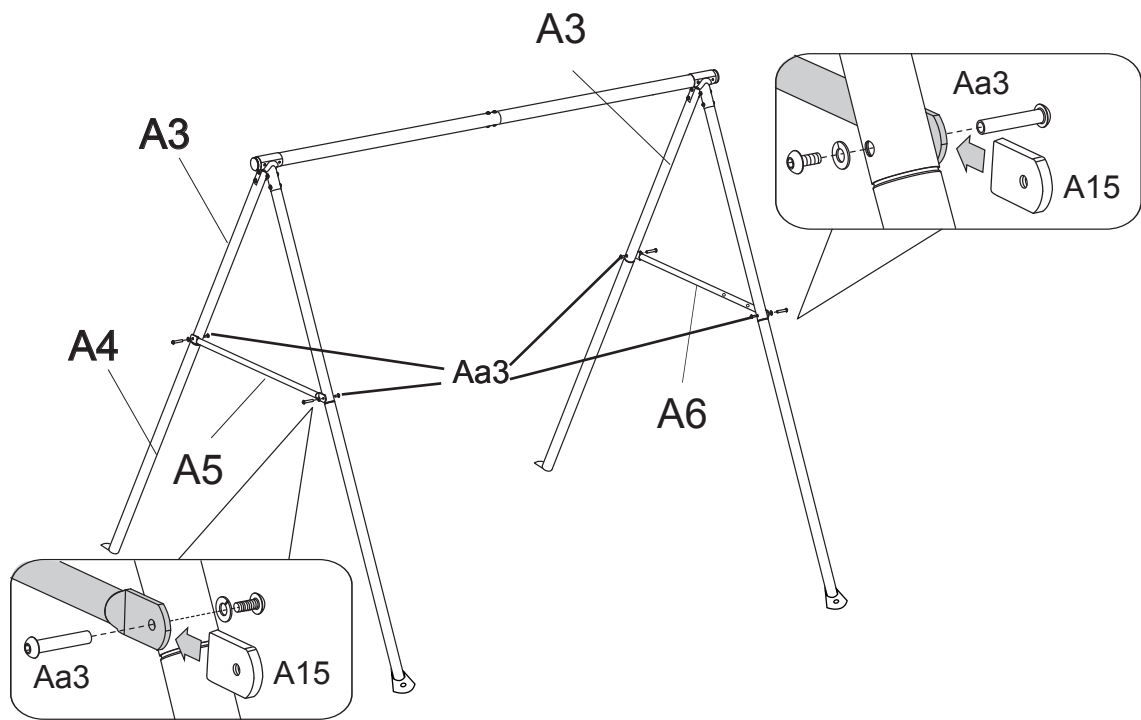

Step 5

- Slide **Cross Bar Caps (A15)** on to the **Cross Bars (A5) & (A6)**.
- Secure the **Cross Bars (A5) & (A6)** to the **Leg Bars (A3)** and **Leg (A4)** using four sets of **Hardware (Aa3)**.
- **NOTE:** The **Cross Bar (A6)** has extra holes along its length for attaching the slide. Plan out your preferred side for the slide when installing the **Cross Bar (A6)**.


NOTICE: TIGHTEN ALL THE HARDWARE ON THE FRAME IN STEPS 1-5 AT THIS TIME

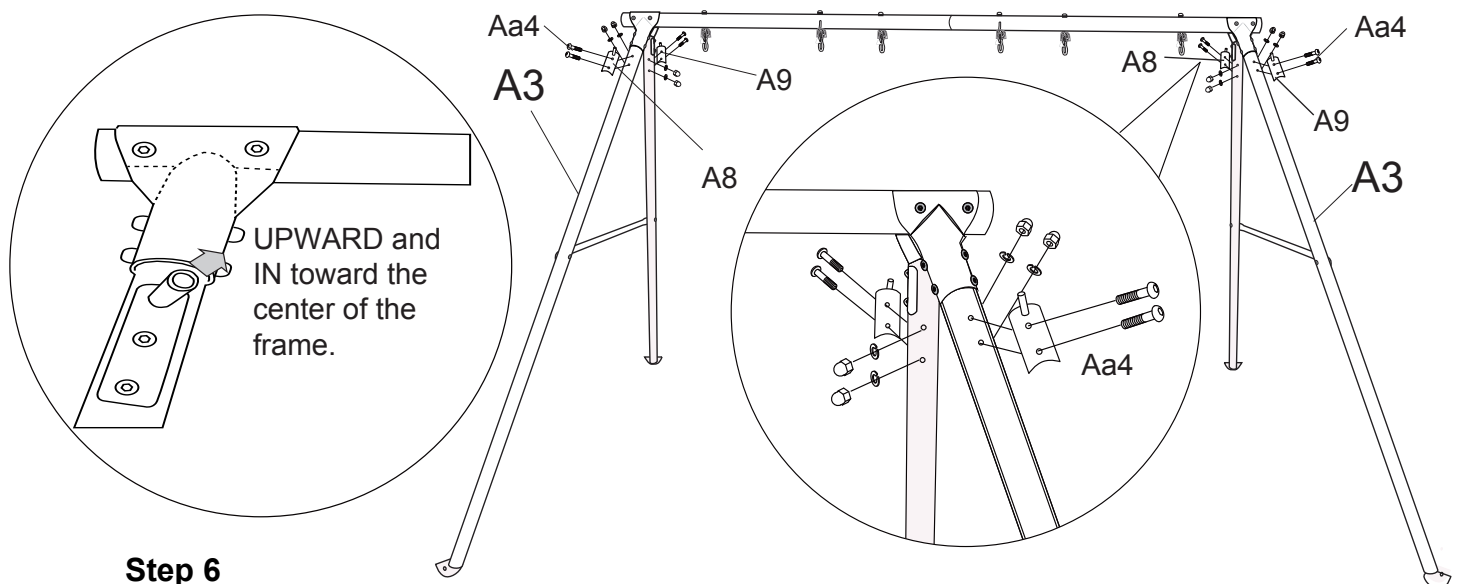

Step 6


- Attach four **Plastic Stick Holders (A9) & (A8)** onto the **Leg Bars (A3)** with four sets of **Hardware (Aa4)**.
 - **NOTE 1:** The **Plastic Stick Holders (A9) & (A8)** are mirrored. one set of **(A9) & (A8)** should be installed on the forward and rear facing sides of the frame.
 - **NOTE 2:** The tube of the **Plastic Stick Holders (A9) & (A8)** should point **UPWARD** and **IN** towards the center of the frame.
 - **NOTE 3:** Do **NOT** fully tighten the hardware. Leaving the hardware loose will help when installing the **Plastic Sticks** and **Sunshade**.

Do not tighten bolts until instructed to do so

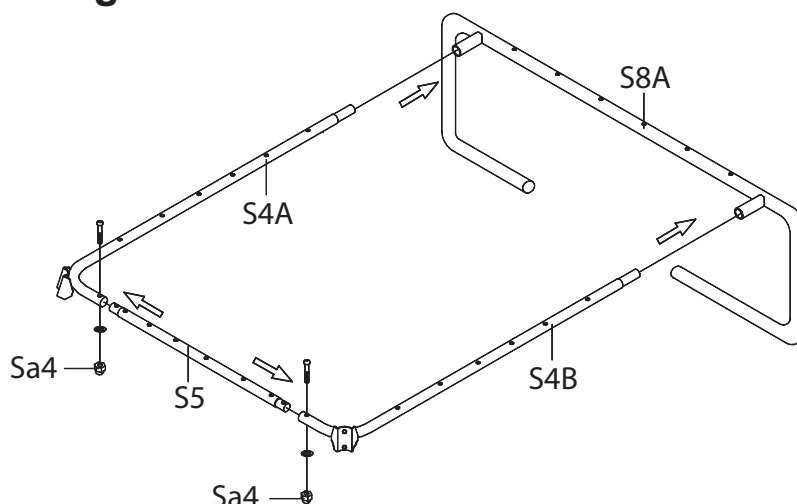

Step 77


- Remove two sets of **Hardware (Sa4)** from the **Straight Tube (S5)**.
- Insert the small ends of the **L-Shaped Tube (Left) (S4A)** and **L-Shaped Tube (Right) (S4B)** into the sockets of the **Elbow Tube (S8A)**. The Welded bracket of the **L-Shaped Tube (Left) (S4A)** and **L-Shaped Tube (Right) (S4B)** should face outside.
- Insert the **Straight Tube (S5)** into the openings of the **L-Shaped Tube (Left) (S4A)** and **L-Shaped Tube (Right) (S4B)**, align the holes.
- Secure using two sets of the **Hardware (Sa4)** that were removed.

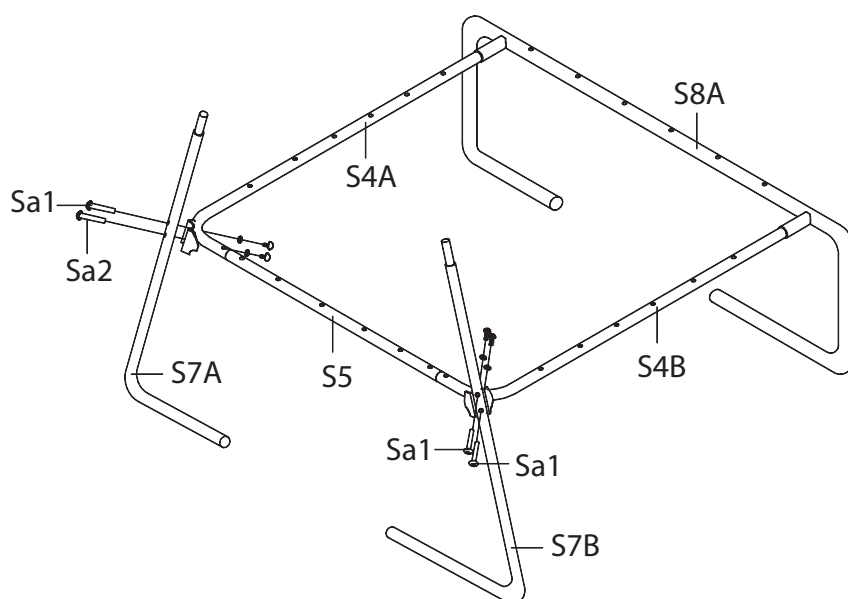

Step 8

- Remove two sets of the **Hardware Sa1** from the **Handlebar Base Tube (Left) S7A**.
- Remove two sets of the **Hardware Sa2** from the **Handlebar Base Tube (Right) S7B**.
- Put the **Handlebar Base Tube (Left) S7A** onto the Welded bracket of the **L-Shaped Tube (Left) S4A**, and put **Handlebar Base Tube (Right) S7B** onto the outside of the **L-Shaped Tube (Right) S4B**, align the holes.
- Secure using two sets of the **Hardware Sa1** that were removed for the upper hole of **Handlebar Base Tube (Left) S7A** and **Handlebar Base Tube (Right) S7B**.
- Secure using two sets of the **Hardware Sa2** that were removed for the lower hole of **Handlebar Base Tube (Left) S7A** and **Handlebar Base Tube (Right) S7B**.


NOTICE: TIGHTEN ALL HARDWARE

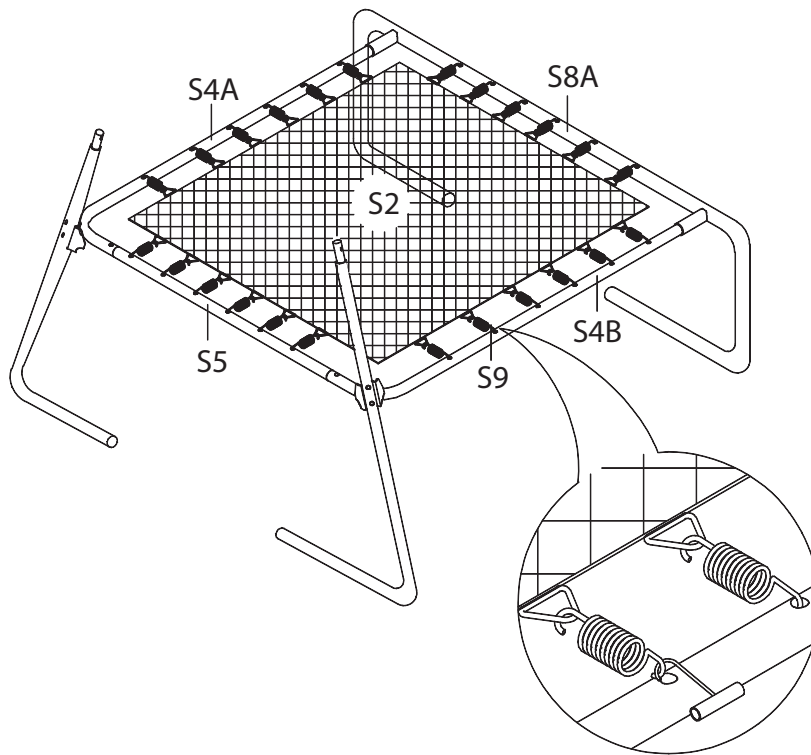

Step 9


- Lay out the **Jump Mat S2** and align the triangle rings of the mat with the holes on the **L-Shaped Tube (Left) S4A** and **L-Shaped Tube (Right) S4B**.
- Attach a **Spring S9** with the hook facing down, onto the triangle ring of the mat. Hold the spring loading tool underhand and pull the spring hook towards the holes on the surrounding Frame. Drop hook into the frame hole until it latches on. Do this for all **Springs S9** and Triangle Rings.

Note: BE CAREFUL NOT TO PINCH HANDS OR FINGERS ON SPRINGS. WEAR GLOVES TO PREVENT PINCHING. KEEP SPRINGS DRY; WET SPRINGS ARE VERY SLIPPERY.

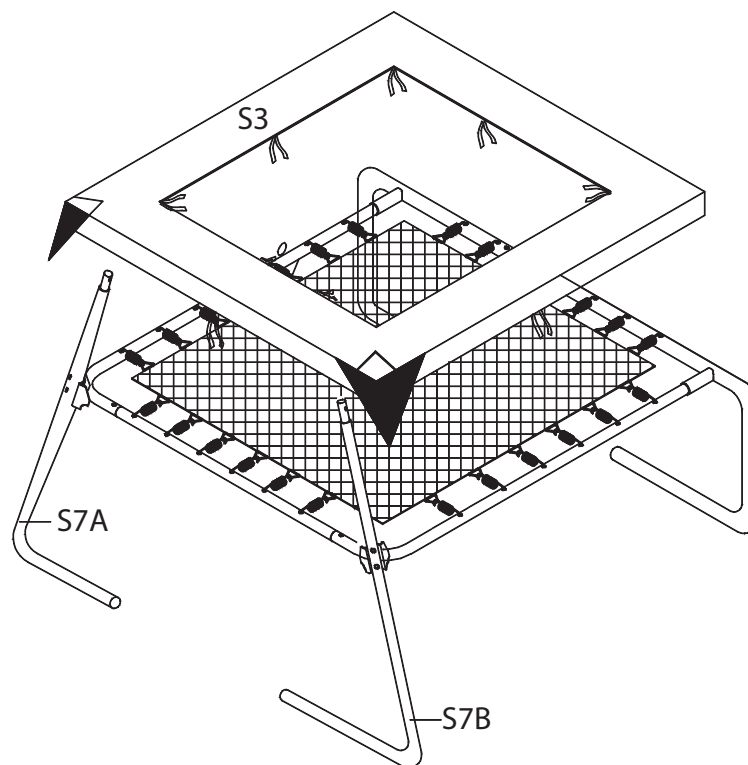

Step 10


- Slide the front two corners of the **Frame Pad S3** to the small end of **L-Shaped Tube (Left) S7A** and **L-Shaped Tube (Right) S7B**.
- Lay the **Frame Pad S3** over the trampoline, so that the springs and the steel frame are covered. Ensure that the **Frame Pad S3** covers all metal parts.

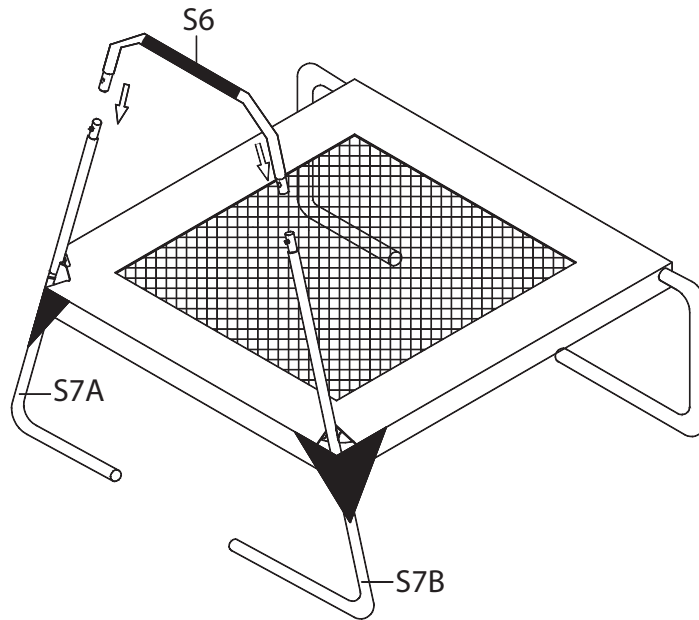

Step 11



- Slide the **Handlebar S6** onto the small ends of the **L-Shaped Tube S7A** and **S7B**. Ensure that the Pop pins set into place.

.....

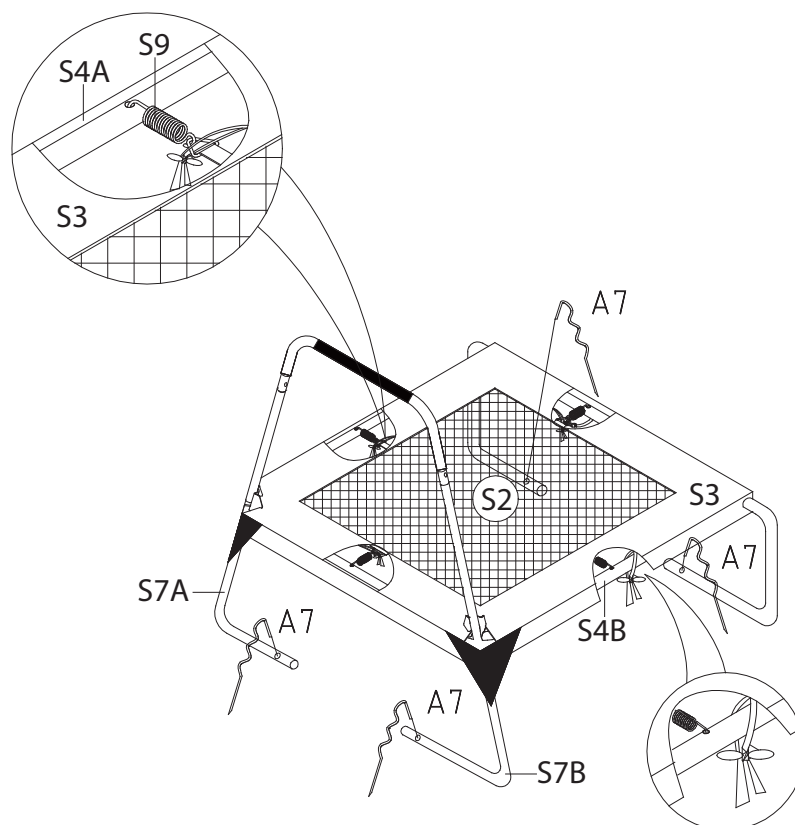

Step 12


- Tie the Straps of the **Frame Pad S3** to the triangle rings with a knot. Repeat this for all straps. Make sure the knot is tight and the **Frame Pad S3** fits securely over the trampoline.
- Line up the elastic straps over the Frame of the trampoline. Tie the straps making sure every strap is tightly secured.
- Place the trampoline in the desired location and secure it with the **Anchors A7**. Ensure that the hooked end of the **Anchor A7** is securely in the Frame.

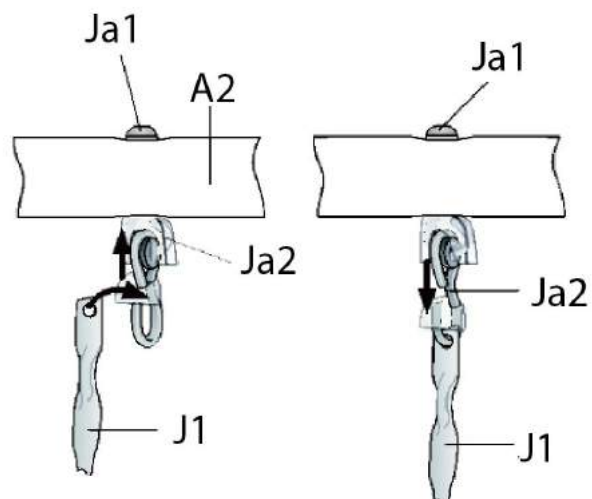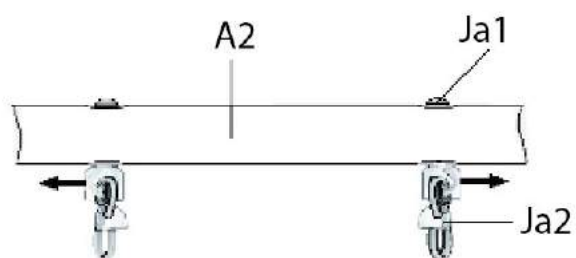

Step 13


- Hang the four **Swing Chains J1** in place from the **Eye Bolts Ja2** on the **Top Bar A2**

.....

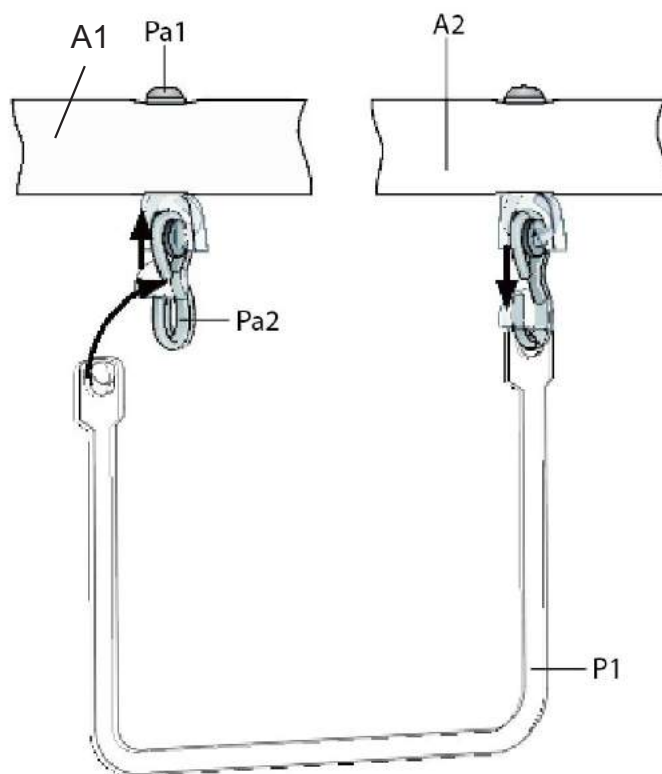


Step 14

- Hang the **Trapeze Tube P1** in place from the **Eye Bolts Pa2** on the **Top Bar A2 & A1**.

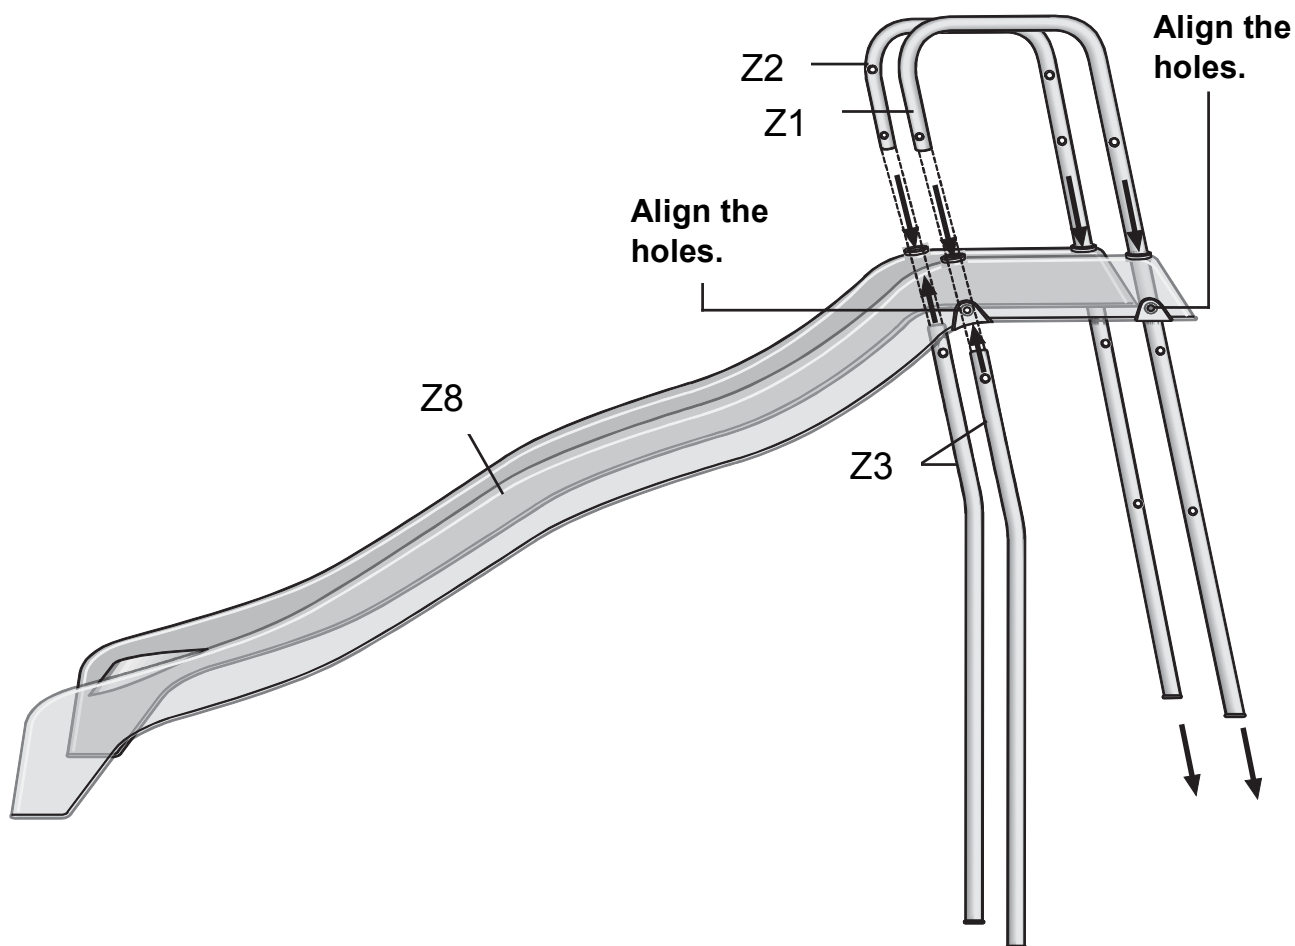



Step 15

- Remove all the preassembled **Phillips Head Bolt sets Za1** from the **Slide Ladder Support Tube Z1** and **Slide Ladder Connecting Tube Z2**.
- Insert the longer ends of the **Slide Ladder Support Tube Z1** and **Slide Ladder Connecting Tube Z2** into the holes on the rear end of the **Slide Z8** and align the holes.
- Insert both **Slide Leg Tubes Z3** into the holes on the front end of the **Slide Z8** and align the holes.

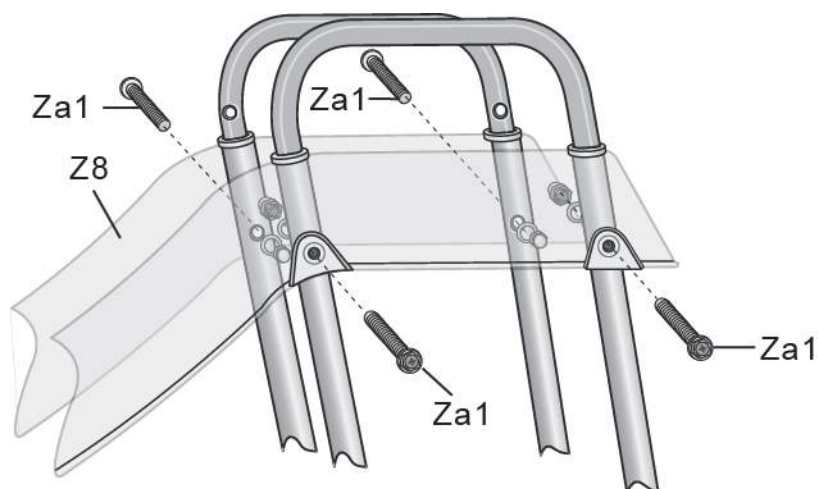


Step 16

- Secure the **Slide Z8** using the 4 sets of **Hardware Za1** previously removed.

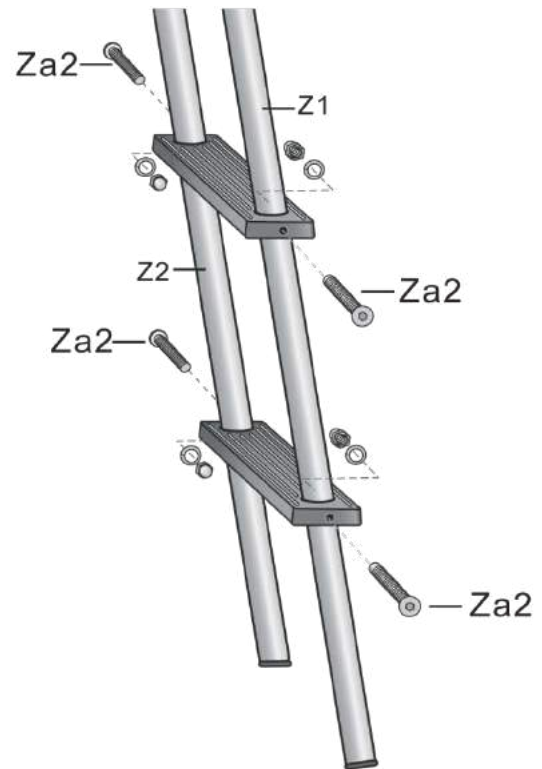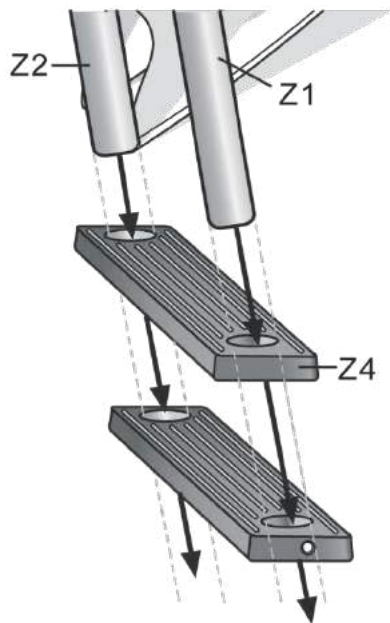

Step 17


- Slide the two **Slide Ladder Steps Z4** up the bottom ends of the **Slide Ladder Support Tube Z1** and **Slide Ladder Connecting Tube Z2**. Align the holes of the **Slide Ladder Steps Z4** with the TOP and BOTTOM set of holes on the **Slide Ladder Support Tube Z1** and **Slide Ladder Connecting Tube Z2**.
- Secure the **Slide Ladder Steps Z4** using the four sets of **Hardware Za2** previously removed.

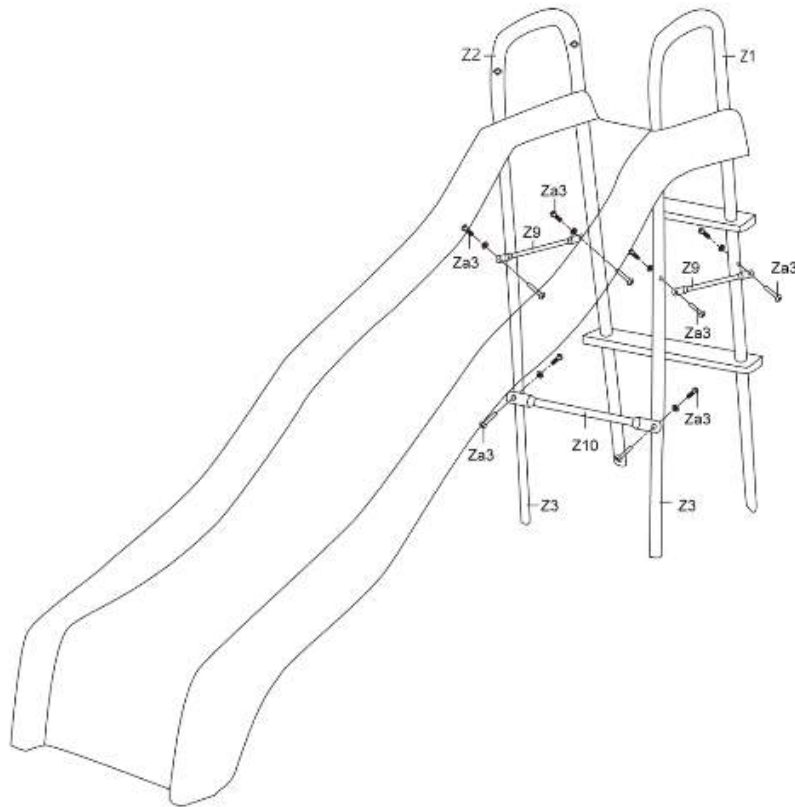

Step 18


- Remove two sets of **Hardware Za3** from both **Slide Ladder Support Tube Cross Bars Z9**.
- Attach one **Slide Ladder Support Tube Cross Bar Z9** onto each side of the ladder using the **hardware sets Za3** that were removed.
- Remove two sets of **Hardware Za3** from the **Slide Leg Cross bar Z10**.
- Attach the **Slide Leg Cross Bar Z3** to the slide using the two sets of **Hardware Za3** that were removed.

NOTICE: SECURELY TIGHTEN ALL BOLTS ON THE SLIDE

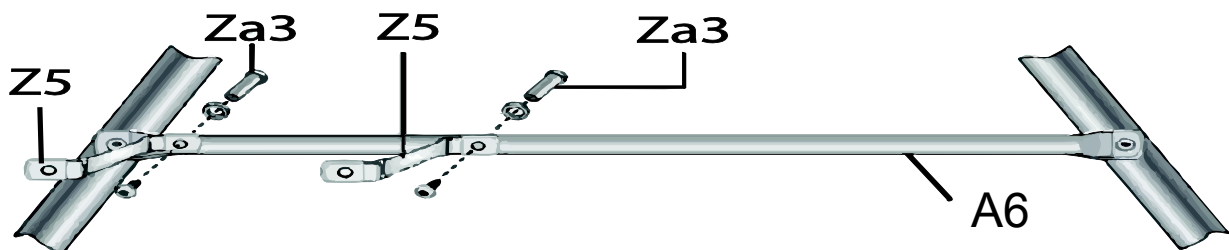


Step 19

- Remove two sets of preinstalled **Hardware Za3** from the two **Connecting Plates Z5**.
- Attach both **Connecting Plates Z5** to the **Cross Bar A6** with the two removed sets of **Hardware Za3**.

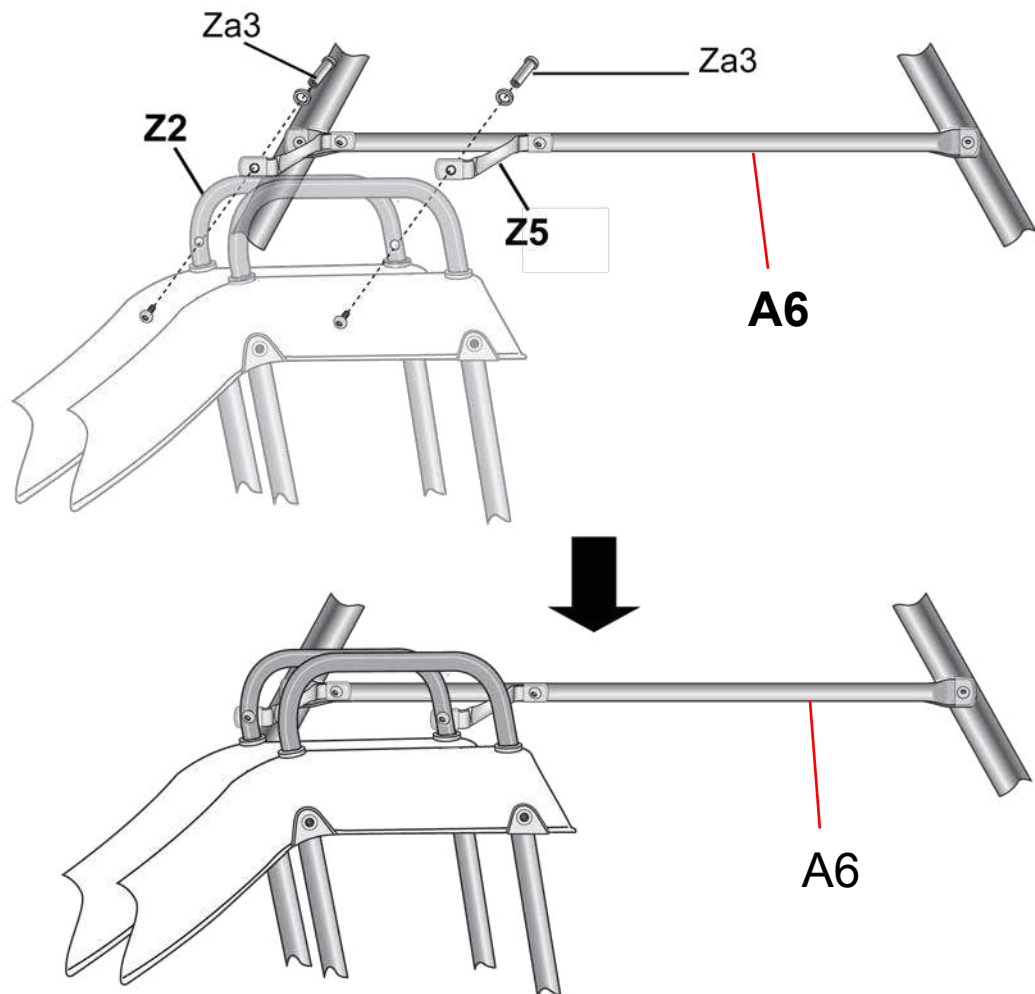

Step 20

- Attach the **Slide Ladder Connecting Tube Z2** onto the **Cross Bar A6** using the two **Connecting Plates Z5** and the two sets of **Hardware Za3** that was previously removed.

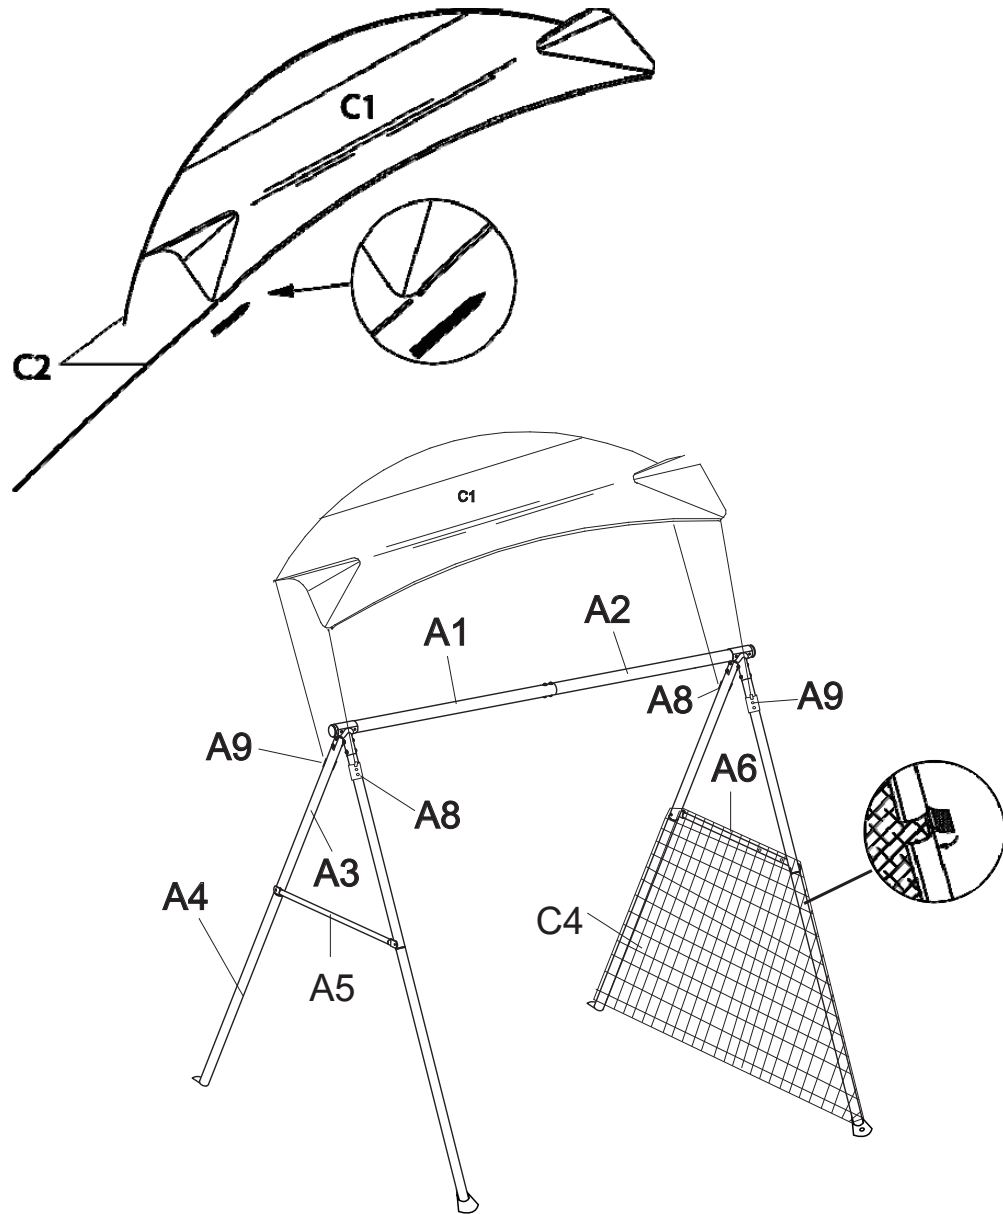

Step 21

- Slide the **Plastic Sticks C2** through each side of the **Sunshade C1**.
- Insert both **Plastic Sticks C2** into the holes on the **Side Top Bars A8 & A9**.
- Attach the **Protective Net C4** onto the side of the Frame.

Note: Make sure to go back to check all hardware and securely tighten all bolts and nuts before using the playground equipment.

Warning: Do not let children use the playground equipment until it is properly assembled and anchored.

ANCHOR INSTALLATION





You may either anchor the feet in hard soil or if your soil is soft (sand, etc.), you may use the Anchor (A7) to secure the playground. If you wish to permanently secure your swing set, setting the legs in concrete secured by a brick or gravel bed is recommended. Ensure equipment is firmly anchored. When cementing equipment, bury the legs about three inches below the ground. This will ensure sufficient space remains under the swings. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface or below ground level to prevent tripping. Be sure the swing set is located on level ground.

For Soil Ground Installation:


Turn the Anchor A7 into the ground until only the hooked end is above the ground next to the leg.

Insert the hooked end into the bottom opening of the leg.

Ensure that the hooked end is secure in the leg opening.

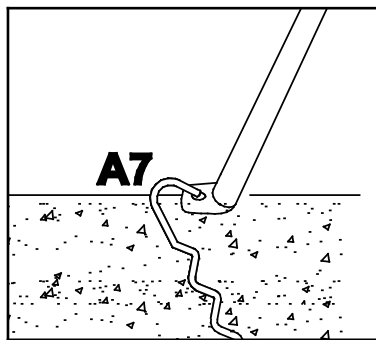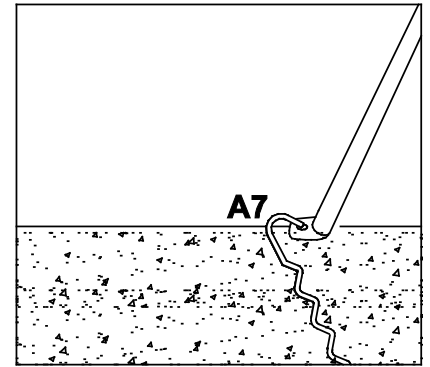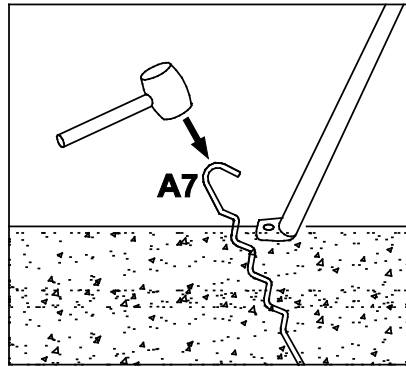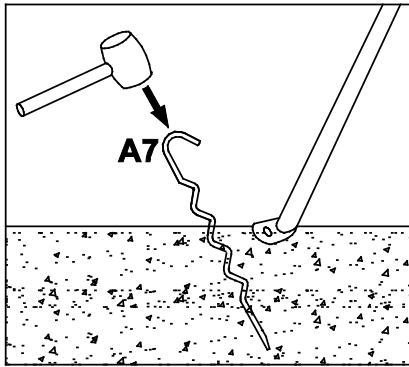

Correct

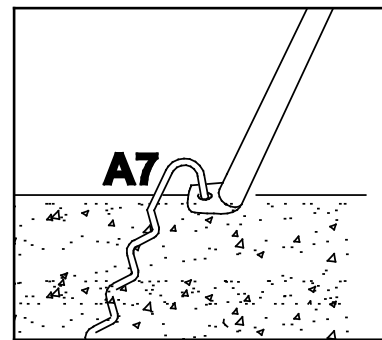


Incorrect


When turning the Anchor A7 into the ground, please make sure the anchor is roughly Perpendicular to the playground feet.

For Concrete Ground Installation:

- If the swing set is set up on grounds with sandy soil, it must be anchored with concrete footing (concrete not included).
- Dig holes around swing leg tube as shown below in drawing. As you dig down and create a cylindrical hole, you should use a shovel to carve out the lower part of the hole, to create a larger diameter hole at the bottom.
- Place 2 inch high brick or 2 inches of gravel bed as shown in drawing below.
- Use about 45lb of concrete per leg.
- Cover concrete with dirt and protective surface material.
- Allow about 6-7 days for concrete to dry properly.

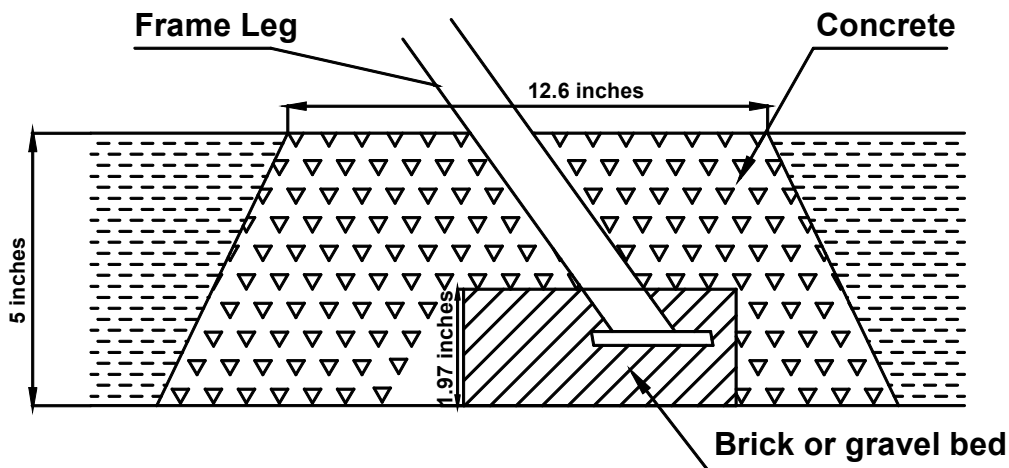

Note: The maximum fall height for this product is 6 feet. The minimum ground clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

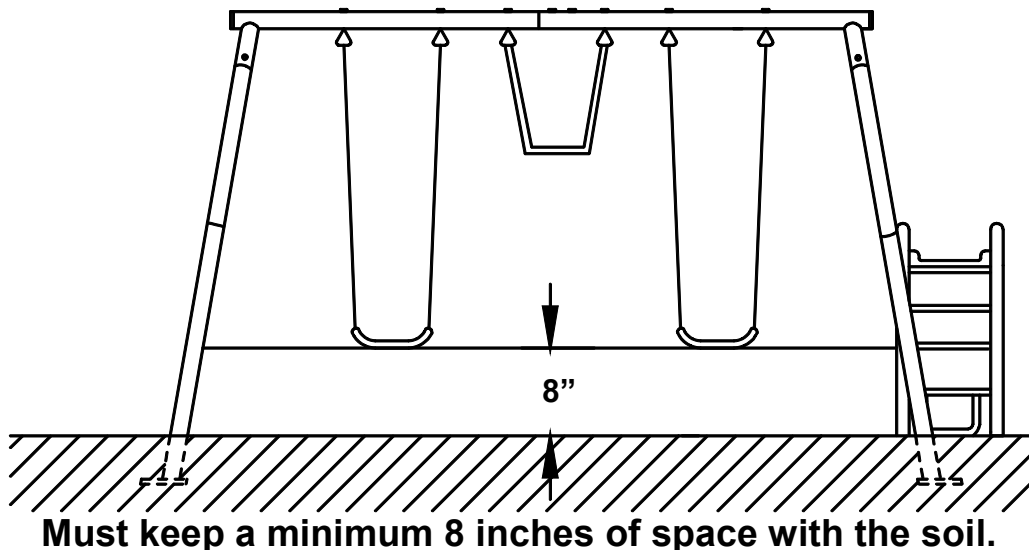

Warning: Please bury the legs of the swing set as per instruction. If the swing set is used without proper anchoring, it may be dangerous and may tilt over.

This play ground received ASTM F1148 and CPSIA certification.

WARRANTY

MANUFACTURER'S LIMITED WARRANTY (IRONKIDS FITNESS PLAYGROUND)

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with Paradigm's Owner's Manual. Paradigm's obligation under this warranty applies to the following:

COMPONENT	LENGTH OF WARRANTY
Structural Frame	Life time FOR HOME USE ONLY
All Other Components	180 days FOR HOME USE ONLY

Exclusions from Warranty Coverage:

Paradigm does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by Paradigm's installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
5. Any act of Nature (such as fire, flooding, snow, ice, hurricane, earthquake, lightning or other natural disaster), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to, among other things, flake, chalk, accumulate dirt or stains.
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

Paradigm, using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

Ordering Replacement Parts

Replacement parts can be ordered by emailing our customer service department:

Service@paradigmhw.com

Open Monday thru Friday 8:00 AM - 5:00 PM (PST).

When ordering replacement parts please have the following information ready:

- 1. Owner's Manual**
- 2. Model Number**
- 3. Description of Parts**
- 4. Part Number**
- 5. Date of Purchase**

Paradigm Health & Wellness, Inc.

EMAIL THIS FORM WITH YOUR RECEIPT OF PURCHASE TO
Service@paradigmhw.com *

NAME: _____

ADDRESS: _____

CITY _____ STATE _____ ZIP _____

TELEPHONE: (Day) _____

(Night) _____

SERIAL#: _____

MODEL#: _____

PURCHASE DATE: _____

PLACE OF PURCHASE: _____

PART #	DESCRIPTION	QTY

“YOUR ORDER WILL BE PROCESSED WITHIN 3 BUSINESS DAYS”

**** This form can also be faxed in Fax #: 626-810-2166***