




6 STATION SWING SET WITH SEE SAW

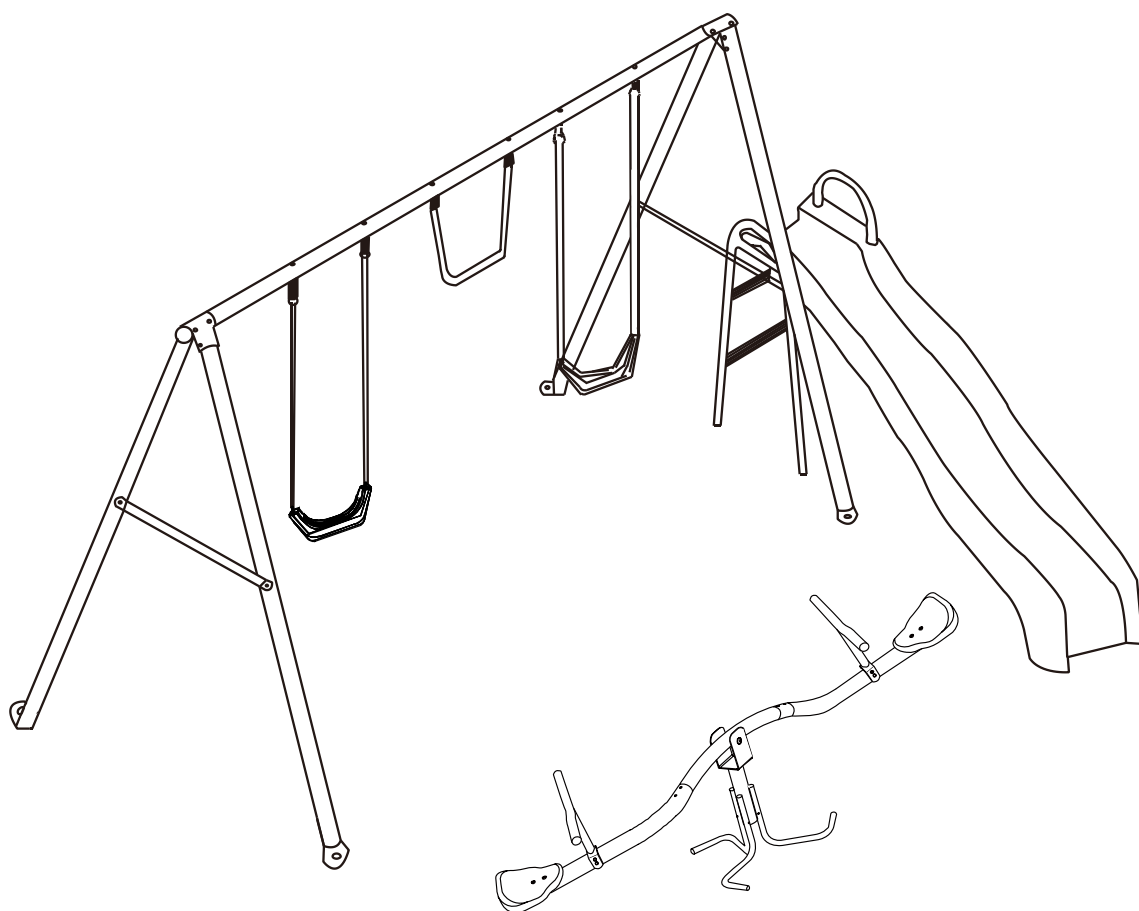

8409-1-060920

CAUTION: This unit is designed to be used safely by up to 6 children between the ages of 3 years to 8 years old with a maximum weight of 80 pounds (36.6kgs) each, simultaneously, not to exceed a combined weight of 480 pounds (181.4kgs).

The specifications of this product may vary from this photo and are subject to change without notice.



PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

STOP. Contact customer service if you have any questions regarding assembly or proper operation of the machine.

Email us at:
Service@paradigmhw.com

TABLE OF CONTENTS

SERVICES -----2

LABEL PLACEMENT -----3

SAFETY-----4

OVERVIEW DRAWING-----8

INCLUDED HARDWARE -----9

PARTS-----10

TOOLS REQUIRED FOR ASSEMBLY-----17

ASSEMBLY INSTRUCTIONS -----19

ANCHOR INSTALLATION -----31

WARRANTY-----33

PARTS REQUEST FORM-----34

SERVICE

IMPORTANT: FOR NORTH AMERICA ONLY

For damaged or defective product, questions, replacement parts or any other service support, please contact our customer service department by the below methods:

For The Best Service, please Email:
service@paradigmhw.com

Response Time: 1-2 Business Days

Emailing us with the information above will be the best method to receive a response during peak business hours

Website:
www.paradigmhw.com

Toll-Free:

1-844-641-7920

(8:00 AM - 5:00 PM Pacific Standard Time, Monday thru Friday)

Response time may vary via calling

Please have the following information ready when requesting for service:

- **Your name**
- **Phone number**
- **Model number**
- **Serial number**
- **Part number**
- **Proof of Purchase**

For damaged or defective product please contact our customer service before returning to the store.

Paradigm Health & Wellness, Inc.

1189 Jellick Ave.

City of Industry, CA 91748, USA

LABEL PLACEMENT

WARNING
 For canopy: Make sure all pole ends is fully inserted inside the protective sleeve.
 Installation over a hard surface may cause damage to the equipment or packed earth may result in serious injury or death from fall.
 Children have died when hood or neck drawstrings on their clothing or equipment on slides or other playground equipment. Parents are advised to remove all drawstrings from their children's clothing and equipment.
 Risk of using helmets and other items that can wrap around a neck. If a child's head becomes entrapped by the equipment, it may lead to strangulation or death.

AVERTISSEMENT
 Pour canopy: S'assurer que toutes les extrémités de poteaux sont bien insérées dans les manchons protecteurs.
 Installation sur une surface dure comme du béton ou de la terre tassée peut entraîner des blessures graves, voire mortelles, suite à une chute.
 Des enfants sont morts lorsque des cordons de serrage sur les capuches ou encolures de vêtements ou autres équipements des terrains de jeu. Il est conseillé aux parents de retirer les cordons de serrage de leurs enfants et d'équipement.
 Risque d'utilisation de casques et d'autres objets pouvant pendre autour du cou de l'enfant. Si la tête de l'enfant est coincée par l'équipement et que l'objet s'enroule autour du cou, cela peut entraîner la strangulation ou la mort.

WARNING
 • Use at your own risk.
 • For indoor use only.
 • This play set complies with ASTM-F 1148.
 • This product has a maximum weight limit of 80 lbs per station.

AVERTISSEMENT
 • Utilisez l'équipement à vos propres risques.
 • Réservé à un usage familial et domestique, et à un usage extérieur.
 • Cet ensemble de jeu est conforme à la norme ASTM-F 1148.
 • Ce produit a un limite de poids maximum de 36 kg par station.

| | |
|--------------|--|
| COMPANY NAME | Paradigm Health & Wellness |
| ADDRESS | 1189 Jellick Ave. City of Industry, CA 91748 |
| TEL | 1-844-641-7920 |
| MODEL | 8409 |


| | |
|--------------------|----------|
| MANUFACTURING DATE | 05 / 19 |
| ORDER | 13190527 |
| MADE IN | CHINA |

ADULT SUPERVISION REQUIRED FOR USE AT ALL TIMES
 READ MANUAL BEFORE USE
 ALWAYS WEAR PROPER FOOTWEAR
 DO NOT USE EQUIPMENT WHEN WET
 NO RUNNING, PUSHING, SHOVING, OR ROUGH-HOUSING

SURVEILLANCE D'UN ADULTE REQUIS POUR UNE UTILISATION EN TOUT TEMPS
 LIRE LE MANUEL AVANT L'UTILISATION.
 TOUJOURS PORTER DES CHAUSSURES APPROPRIÉES.
 NE PAS UTILISER L'ÉQUIPEMENT LORSQU'IL EST MOULLE.
 NE PAS COURIR, POUSSER, BOUSCULER, SE BAGARHER.

FOR KIDS AGES 3 - 8 YEARS
ADULT SUPERVISION IS REQUIRED.

POUR LES ENFANTS DE 3 - 8 ANS
LA SUPERVISION D'UN ADULTE EST REQUISE.

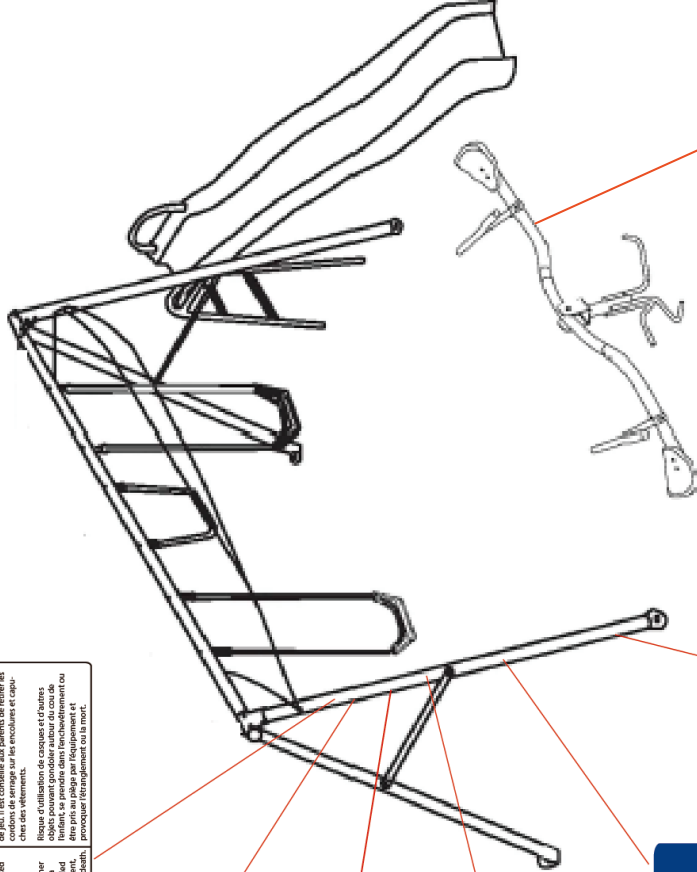

| | |
|--------------|--|
| COMPANY NAME | Paradigm Health & Wellness |
| ADDRESS | 1189 Jellick Ave. City of Industry, CA 91748 |
| TEL | 1-844-641-7920 |
| MODEL | 8412 |

| | |
|--------------------|----------|
| MANUFACTURING DATE | 05 / 19 |
| ORDER | 13190527 |
| MADE IN | CHINA |

FITNESSREALITY kids
 For customer assistance call:
1-844-641-7920
 8 am - 5 pm PST
 Monday thru Friday

Pour le service à la clientèle composer le:
1-844-641-7920
 Lundi à vendredi
 8:00 h - 17 h (HNP)

Serial number / Numéro de série / Número de serie
 MADE IN CHINA / FABRIQUÉ EN CHINE / HECHO EN CHINA

SAFETY

Read all instructions carefully before assembling operating this product. Retain this Owner's manual and keep the original purchase receipt for future reference.

1. Before assembling the Fitness Playground, find level ground no less than 6 feet from any structure or obstruction to the Fitness Playground. The Fitness Playground must have clearance on all sides.
2. To prevent serious injury, do not allow children to play on the Fitness Playground until it is completely installed.
3. Do not install the Fitness Playground over concrete, packed dirt, or any other hard surface. A fall onto a hard surface can result in serious injury.
4. Only adults should assemble or disassemble this Fitness Playground.
5. This product **MUST** be anchored.
6. Adult supervision of children is required at all times when on or around this Fitness Playground. Never leave children unattended.
7. Do not swing too high or at an angle. Do not hang on or climb from structural members of the Fitness Playground.
8. Do not exceed the intended weight limit or maximum number of users for the Fitness Playground.
9. This product is intended to be used by children between the ages of 3-8 years old.
10. Be sure to observe your children and ensure that they have the strength and skills to enjoy all the rides safely before use on their own.
11. Do not allow children to walk close to, behind, or in front of moving items.
12. Do not allow children to twist the chains on the swing or loop them over the top bar. This may reduce the strength of the chain.
13. Teach and instruct children not to swing empty seats.
14. Instruct children how to sit in the center of the seats and swing with their full weight on the seat.
15. Warn children not to use the equipment in any manner other than intended.
16. Warn children not to get off the rides while in motion.
17. Warn children to not wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
18. Equipment may be slippery when wet. Do not allow children to use the equipment when wet.
19. Parents should regularly check openings and surfaces, such as slides, for items that may be hazardous.
20. Parents should check swing chains to ensure they are secure.
21. Do not place any part of the body near moving parts.
22. Never slide head first down the slide.
23. Verify that suspended climbing ropes, chain, or cable are secured at both ends.
24. Verify that suspended climbing ropes, chain, or cable cannot be looped back on itself.
25. Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet, leashes, cables and chain as they may cause a strangulation hazard.
26. Children must be supervised at all times. No playground is safe without adult supervision.
27. When using the Seesaw, do not perform flips, as this will increase the chances of injury. No more than one person one each seat of the seesaw at a time. Do not allow children to use without proper supervision.
28. Instruct children to remove their bike or other sports helmet before playing on the playground equipment.
29. Dress children with well-fitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops.
30. Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).
31. Improper usage or installation of Basketball hoop can cause serious injury.

Play Ground Rules

1. No running, pushing, shoving, or roughhousing.

ASSEMBLY INSTRUCTIONS

- Place the playground equipment on level ground, no less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury.

TIGHTENING NUTS & BOLTS

- Do not over-tighten the nuts and bolts when you are assembling your playground equipment. This will allow for some possible adjustments and ease of installation.
- Once you have completed the assembly of the playground equipment, go back over all of the nuts, and bolts and properly tighten them before using the playground equipment.
- Tighten all hardware.

CARE & MAINTENANCE

- Owners shall be responsible for maintaining the legibility of the warning labels.

At the beginning of each play season:

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Twice a month during play season:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Once a month during play season:

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

At the end of each play season or when the temperature drops below 32 °F

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.


Disposal Instructions:

- Disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the playground equipment is discarded.


PROTECTIVE PLAYGROUND SURFACE

- Select Protective Surfacing—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification **F1292**. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:
- **Loose-Fill Materials:** Maintain a minimum depth of 9 in. (229 mm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 96 in. (2438 mm) high; and 9 in. (229 mm) of sand or pea gravel for equipment up to 60 in. (1524 mm) high.
- **NOTE:** An initial fill level of 12 in. (305 mm) will compress to about a 9 in. (229 mm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9 in. (229 mm) depth. X2.1.2 Use a minimum of 6 in. (152 mm) of protective surfacing for play equipment less than 48 in. (1219 mm) in height. If maintained properly, this should be adequate. (At depths less than 6 in. (152 mm), the protective material is too easily displaced or compacted.)
- **NOTE:** Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing.
- **Ground level equipment** – such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- **Do not** install loose fill surfacing over hard surfaces such as concrete or asphalt.
- **Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles**—You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.
- Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment.
- Check the protective surfacing frequently for wear.

- **Protective Material Placement**—Proper placement and maintenance of protective surfacing is essential. Be sure to:
- Extend surfacing at least 72 in. (1829 mm) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 ft in all directions.

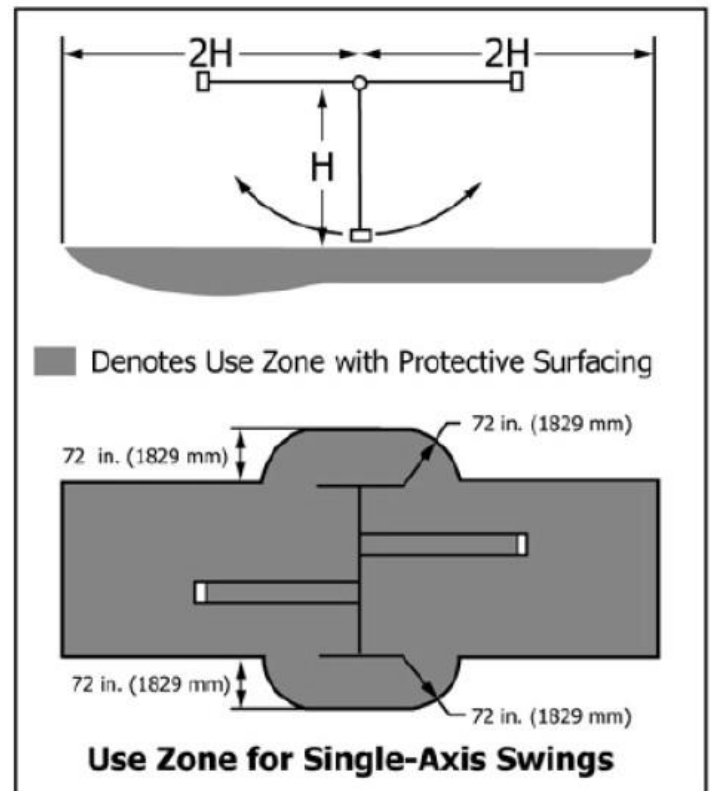


Overview Drawing

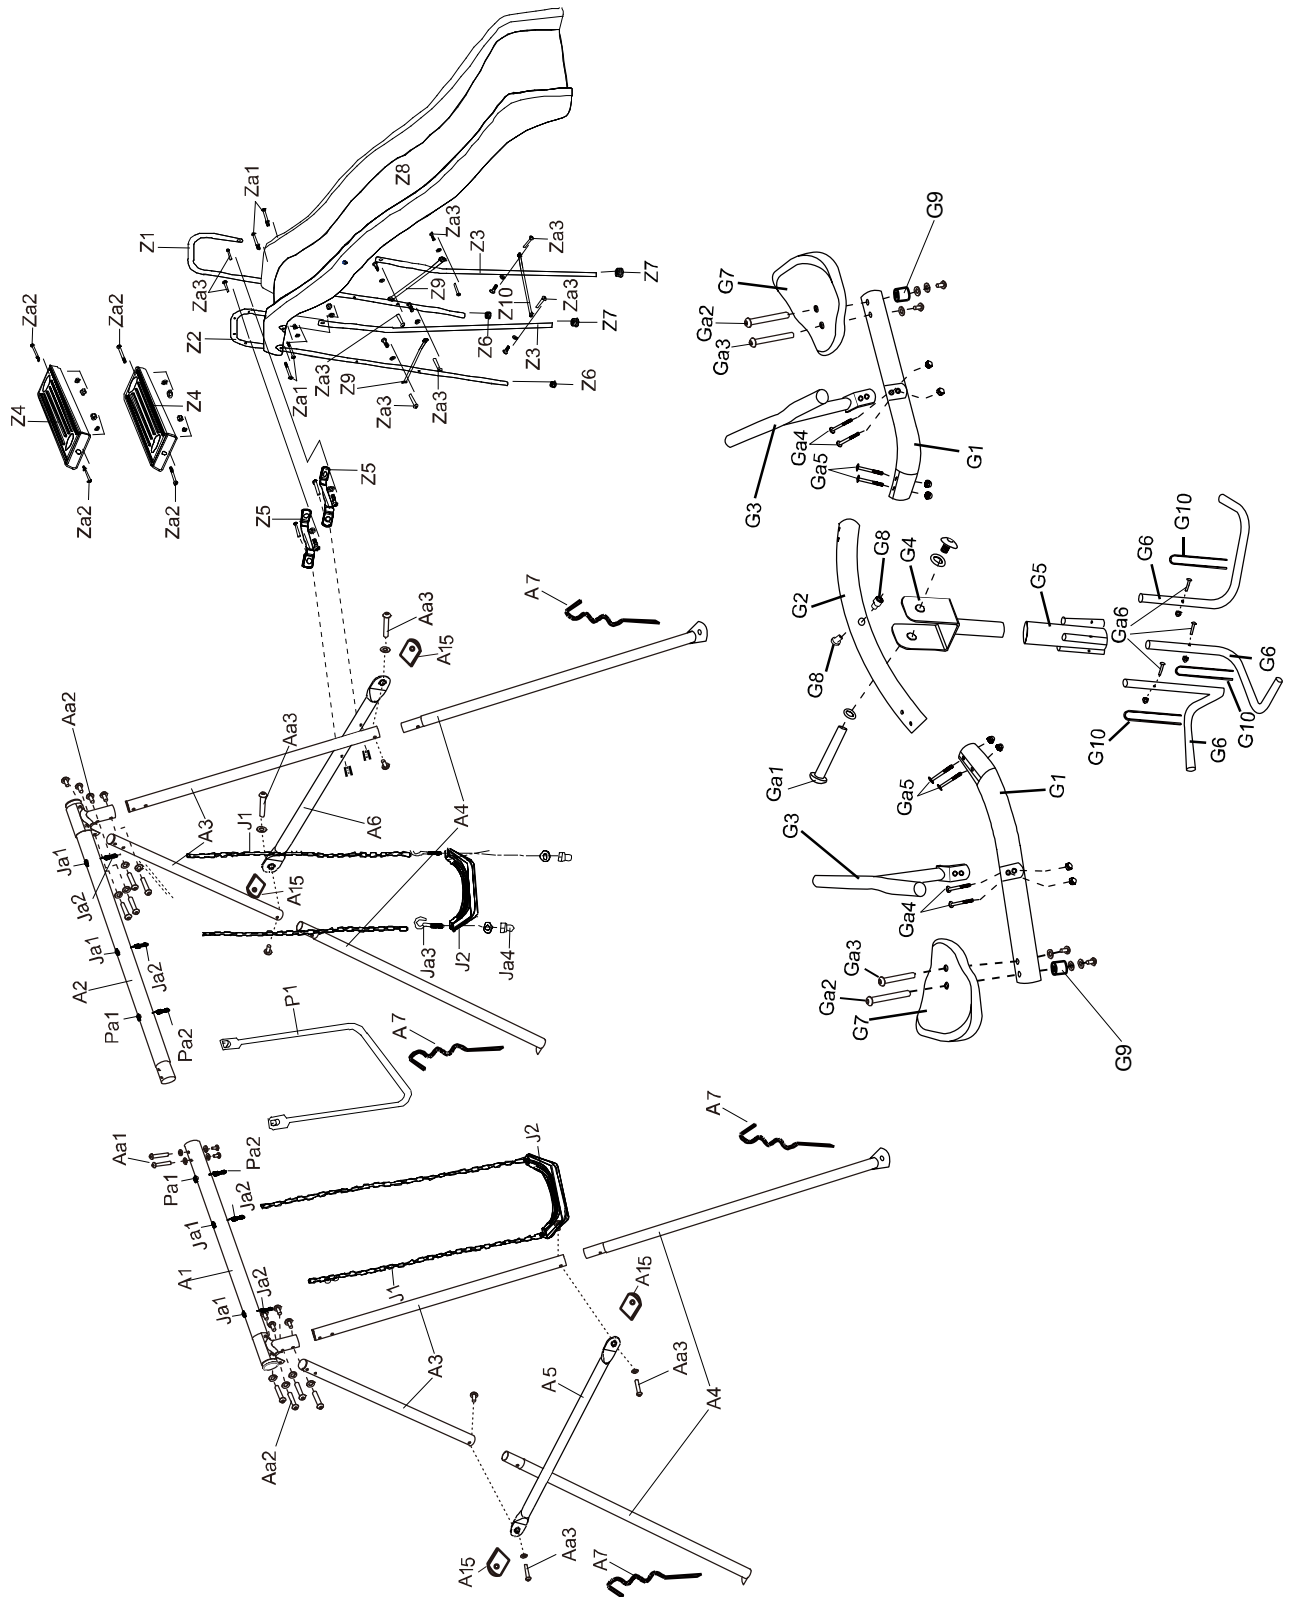


Hardware used for main frame assembly



Binder Post & Bolt Set (Preassembled)
M8x15 Male Bolt
Ø10x52 Female Bolt 2
SETS











Binder Post & Bolt Set (Preassembled)
M6x12 Male Bolt
Ø8x48 Female Bolt
8 SETS






Binder Post & Bolt Set (Preassembled)
M6x12 Male Bolt
Ø8x45 Female Bolt
4 SETS

PARTS

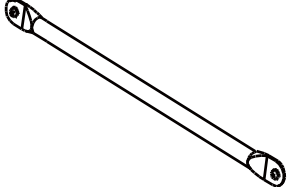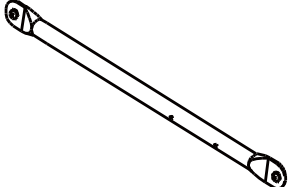
Parts used for main frame assembly

| | | | |
|-----|---|--------------|-------|
| A1 |  | Top Bar | 1 PC |
| A2 |  | Top Bar | 1 PC |
| A3 |  | Leg Bar | 4 PCS |
| A4 |  | Leg | 4 PCS |
| A5 |  | Cross Bar | 1 PC |
| A6 |  | Cross Bar | 1 PC |
| A7 |  | Anchor | 4 PCS |
| A15 |  | Crossbar Cap | 4 PCS |

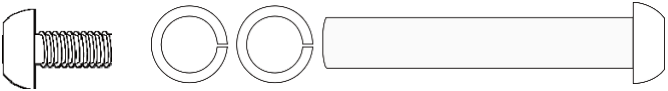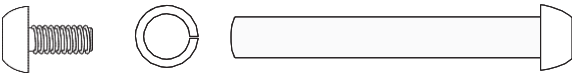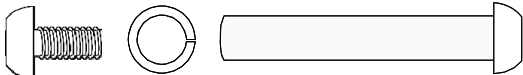

Hardware used for main frame assembly

| | | | |
|-----|---|--|--------|
| Aa1 |  | Binder Post & Bolt Set (Preassembled) | 2 SETS |
| Aa2 |  | Binder Post & Bolt Set (Preassembled) | 8 SETS |
| Aa3 |  | Binder Post & Bolt Set (Preassembled) | 4 SETS |

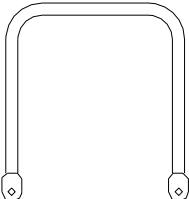

Parts used for trapeze assembly

| | | | |
|----|---|--------------|------|
| P1 |  | Trapeze Tube | 1 PC |
|----|---|--------------|------|



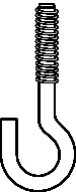
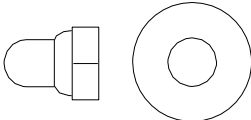
Hardware used for trapeze assembly

| | | | |
|-----|---|-----------------------------------|--------|
| Pa1 |  | Female Bolt Set (Preassembled) | 2 SETS |
| Pa2 |  | Eye Bolt Set (Preassembled) | 2 SETS |











Parts used for swing seats assembly

| | | | |
|----|---|-------------|-------|
| J1 |  | Swing Chain | 4 PCS |
| J2 |  | Swing Seat | 2 PCS |

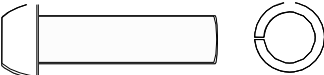
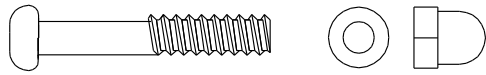

Hardware used for swing seats assembly

| | | | |
|-----|---|--------------------------------|--------|
| Ja1 |  | Female Bolt Set (Preassembled) | 4 SETS |
| Ja2 |  | Eye Bolt Set (Preassembled) | 4 SETS |
| Ja3 |  | Screw Hook (Preassembled) | 4 PCS |
| Ja4 |  | Screw Hook Cap Set | 4 SETS |

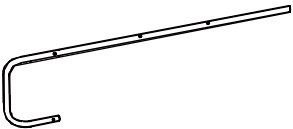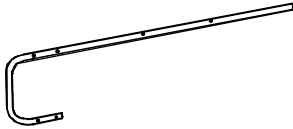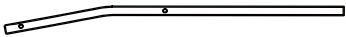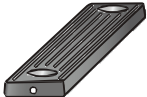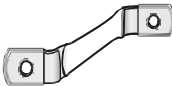

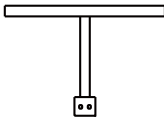

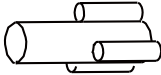


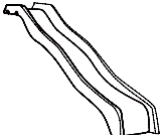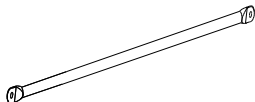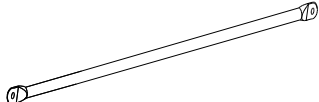


Parts used for slide assembly

| | | | |
|-----|---|-------------------------------------|-------|
| Z1 |  | Slide Ladder Support Tube | 1 PC |
| Z2 |  | Slide Ladder Connecting Tube | 1 PC |
| Z3 |  | Slide Leg Tube | 2 PCS |
| Z4 |  | Slide Ladder Step | 2 PCS |
| Z5 |  | Connecting Plate | 2 PCS |
| Z6 |  | Cap for Z1 and Z2 (Preassembled) | 2 PCS |
| Z7 |  | Cap for Z3 (Preassembled) | 2 PCS |
| Z8 |  | Slide | 1 PC |
| Z9 |  | Slide Ladder Support Tube Cross Bar | 2 PCS |
| Z10 |  | Slide Leg Cross Bar | 1 PC |




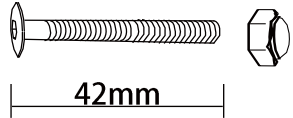
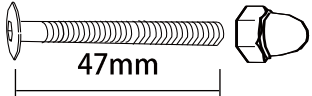
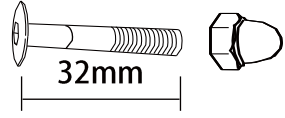
Hardware used for slide assembly
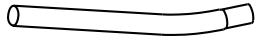
| | | | |
|-----|---|--|---------|
| Za1 |  | M6X36 Bolt Set (Preassembled) | 4 SETS |
| Za2 |  | M6X42 Bolt Set (Preassembled) | 4 SETS |
| Za3 |  | Binder Post & Bolt Set (Preassembled) M6X12 Bolt Ø8X24 Sleeve Nut | 10 SETS |

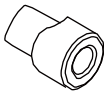Hardware used for see saw assembly


| | | | |
|-----|---|------------------|-------|
| G1 |  | Seat tube | 2 PCS |
| G2 |  | Cross bar | 1 PC |
| G3 |  | Handle bar | 2 PCS |
| G4 |  | Axle tube | 1 PC |
| G5 |  | Axle sleeve tube | 1 PC |
| G6 |  | Leg | 3 PCS |
| G7 |  | Seat | 2 PCS |
| G8 |  | T-Sleeve | 2 PCS |
| G9 |  | Sleeve | 2 PCS |
| G10 |  | Anchor | 3 PCS |

Hardware used for see saw assembly

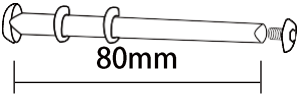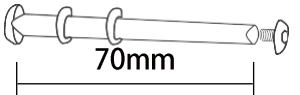
| | | | |
|-----|---|--|-------|
| Ga1 |  | Hex Bolt M5xL80+M6xL12+flat washer Ø16xØ8xT1.5+ spring washer Ø 8x2.0 | 1 SET |
| Ga2 |  | Hex Bolt M5xL70+M6xL12+flat washer Ø16xØ8xT1.5+ spring washer Ø 8x2.0 | 2 SET |
| Ga3 |  | Hex Bolt M5xL58+M6xL12 + spring washer Ø 8x2.0 | 2 SET |
| Ga4 |  | Hex Bolt M6xL42 + Nut | 4 SET |
| Ga5 |  | Hex Bolt M6xL47 + Nut | 4 SET |
| Ga6 |  | Hex Bolt M6xL32 + Nut | 3 SET |

TOOLS REQUIRED FOR ASSEMBLY


Please prepare the following tools prior to assemble this equipment.

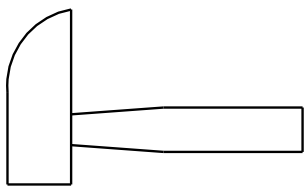


Hammer

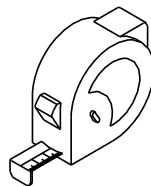


Tape Measure




Phillips Screwdriver

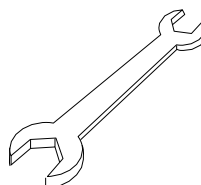

Wrench 13x10mm
(Included)

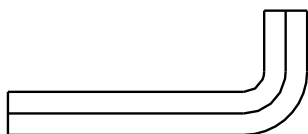

Allen Wrench M5
(Included)

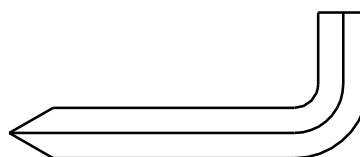

Big Allen Wrench with Phillips Screwdriver M5
(Included)

ASSEMBLY INSTRUCTIONS

- Place the playground equipment on level ground, no less than 6 feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install the playground equipment over concrete, asphalt, packed earth, or any other hard surface. A fall onto a hard surface can result in serious injury.

TIGHTENING NUTS & BOLTS


- Do not over-tighten the nuts and bolts when you are assembling your playground equipment. This will allow for some possible adjustments and ease of installation.
- Once you have completed the assembly of the playground equipment, go back over all of the nuts, and bolts and properly tighten them before using the playground equipment.


CARE AND MAINTENANCE

Inspect all Nuts, Bolts, and Anchors monthly, tighten as required.

Main Frame Layout


- See the image below to plan out how you will set up the main frame of the playground.
- Refernece the Ground Anchor Section for how to properly anchor the main frame to the ground
- **THIS IS VERY IMPORTANT: If the swing set is used without proper anchoring, it may be dangerous and may tilt over.**

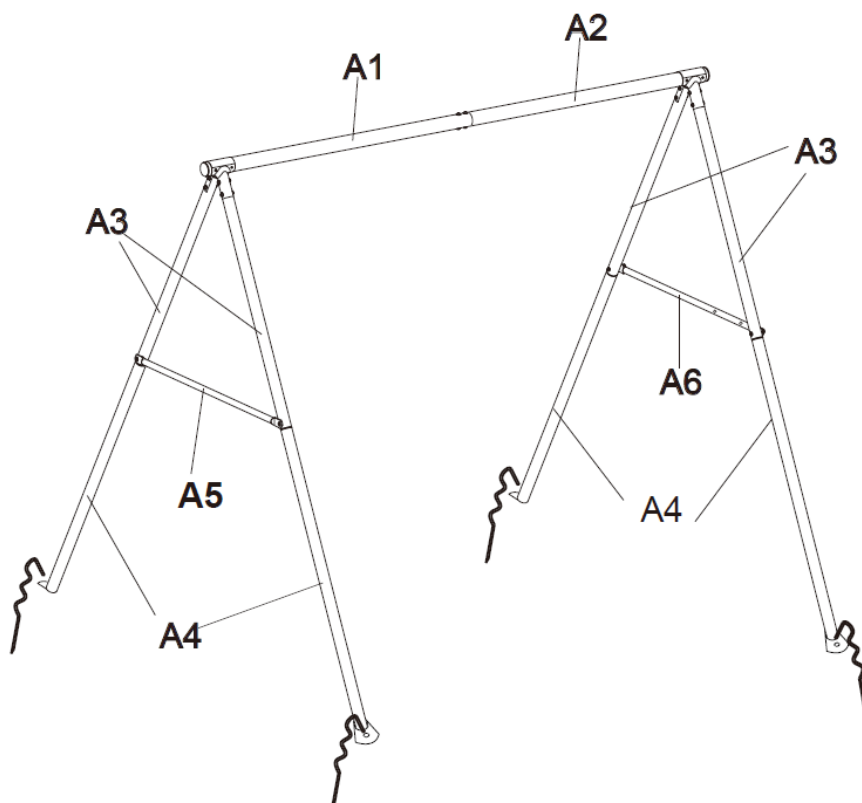

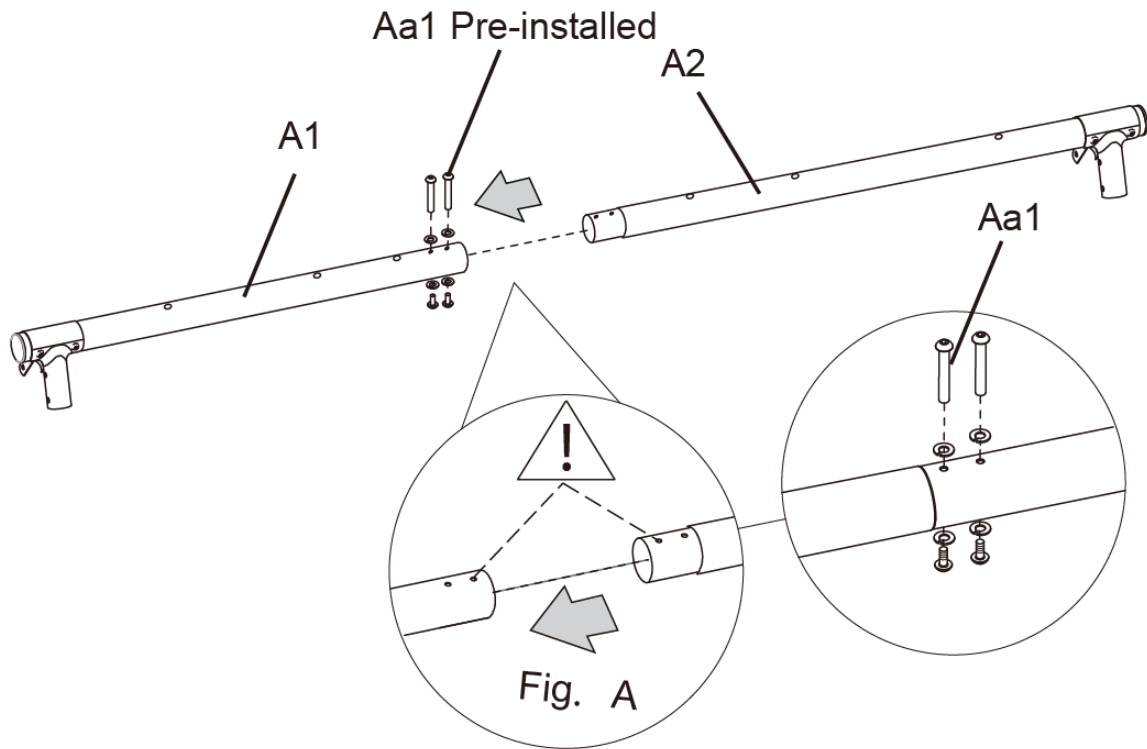


Step 1

- Remove two sets of **Binder Post and Bolt Sets (Aa1)** from the **Top Bar (A1)**.
- Insert the **Top Bar (A2)** into the **Top Bar (A1)** and align the screw holes. Then use the **two Binder Post and Bolt Sets (Aa1)** to secure the bars together. Tighten the **Binder Post and Bolt Sets (Aa1)** with the Allen Wrench provided. **See FIG A.**

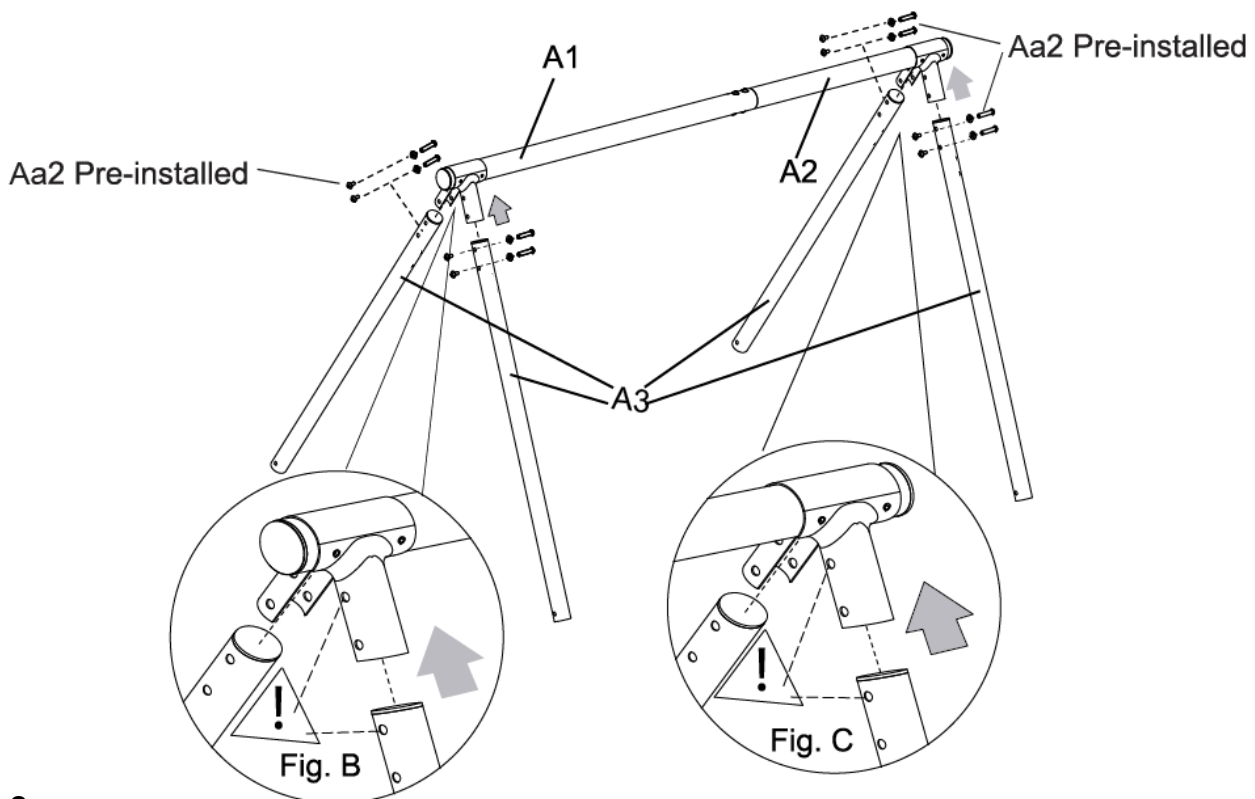


Step 2

- Remove the eight bottom sets of **Binder Post & Bolt Set (Aa2)** from the **four Leg Bars (A3)**.
- Insert a **Leg Bars (A3)** into each socket of the **Top Bar (A1)** and the **Top Bar (A2)** and make sure the holes are aligned. **See Fig B and c.**

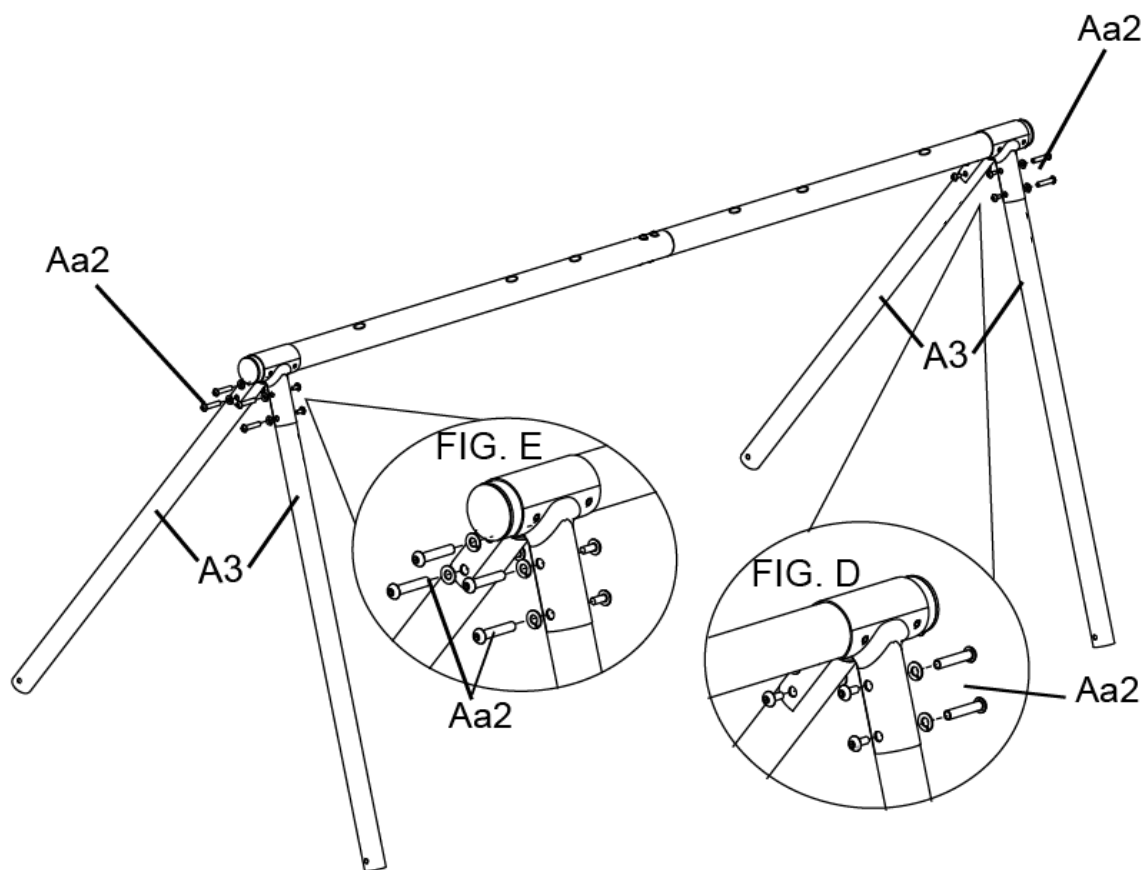


Step 3

- Secure the **Leg Bars (A3)** to the **Top Bars (A1) & (A2)** using the eight sets of **Binder Post & Bolt Set (Aa2)** that were removed in **Step 2**. See **Fig D and E**.

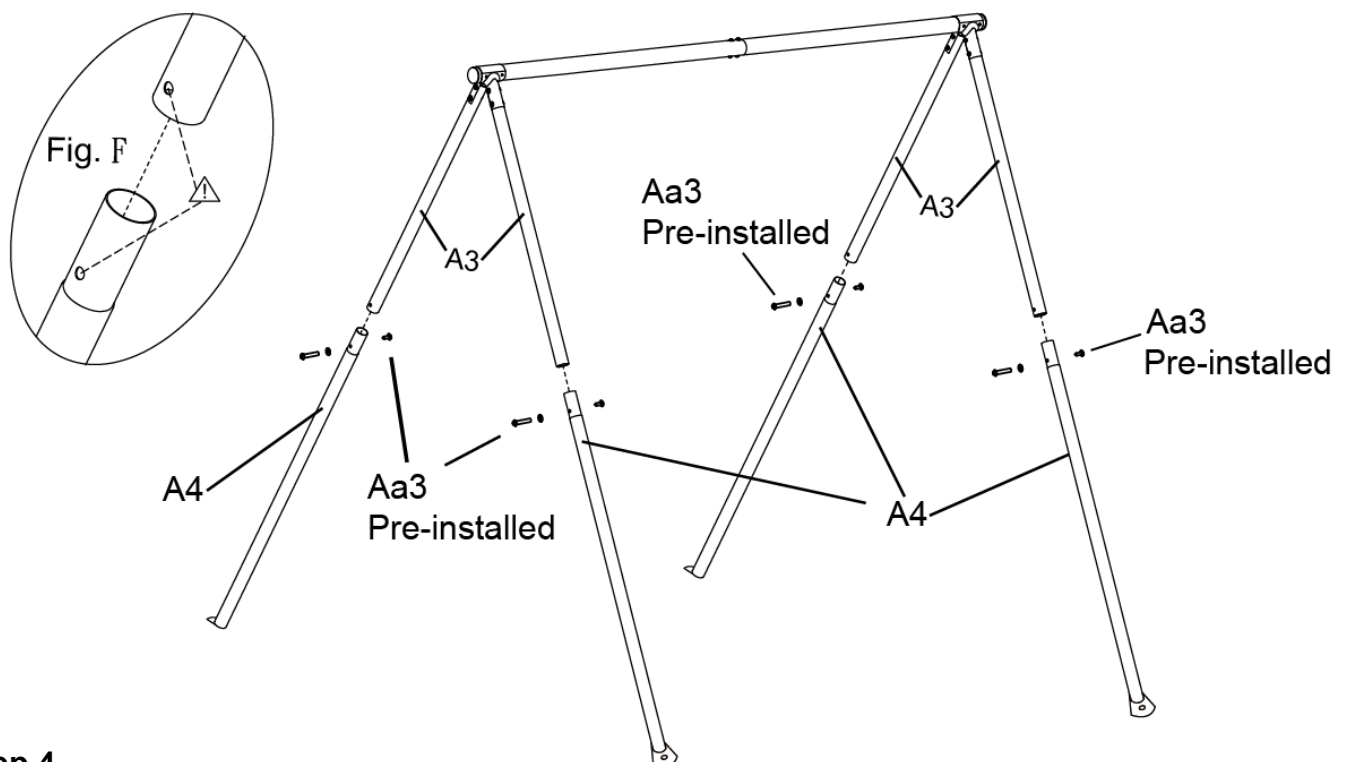

Step 4


- Remove four sets of **Binder Post & Bolt Set (Aa3)** from the **Leg Bars (A4)**.
- Insert four **Legs (A4)** into the four **Leg Bars (A3)**, and make sure the holes are aligned. See **Fig F**.
- The feet of the four **Legs (A4)** should be flat on the ground

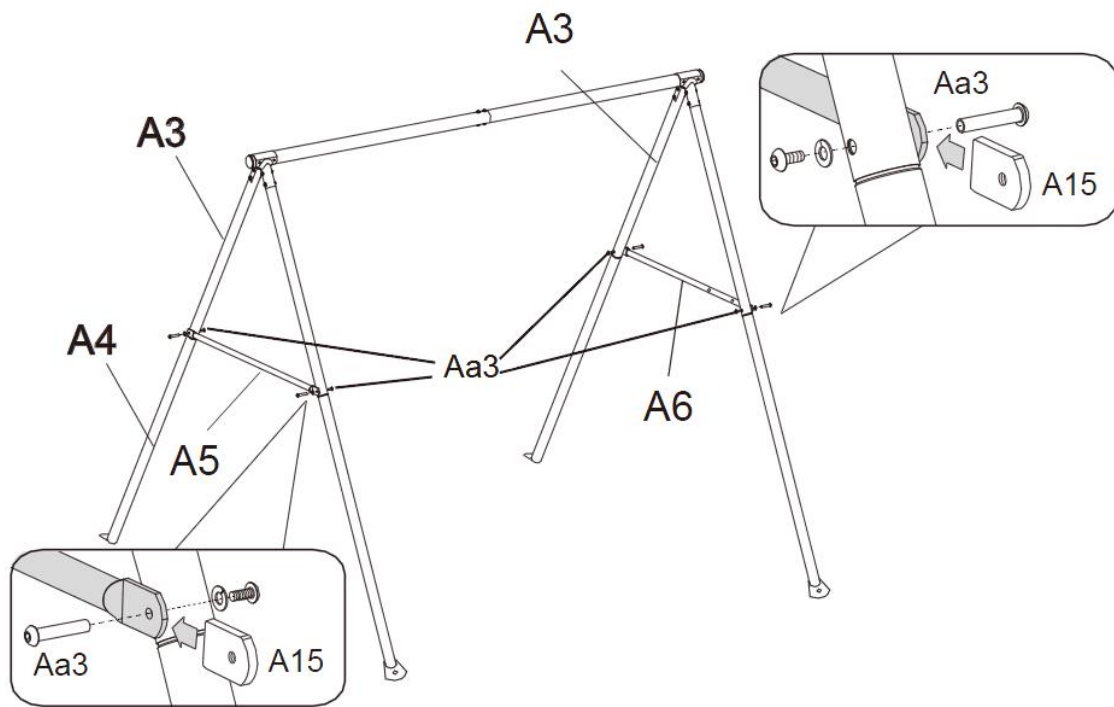

Step 5

- Slide **Cross Bar Caps (A15)** on to the **Cross Bar (A5) & (A6)**.
- Secure the **Cross Bar (A5) & (A6)** to the **Leg Bars (A3)** and **Leg (A4)** using four sets of **Hardware (Aa3)**.
- **NOTE: The Cross Bars (A6)** has extra holes along its length for attaching the slide.
Plan out your preferred side for the slide when installing the **Cross Bar(A6)**.


NOTICE: TIGHTEN ALL THE HARDWARE ON THE FRAME IN STEPS 1-5 AT THIS TIME

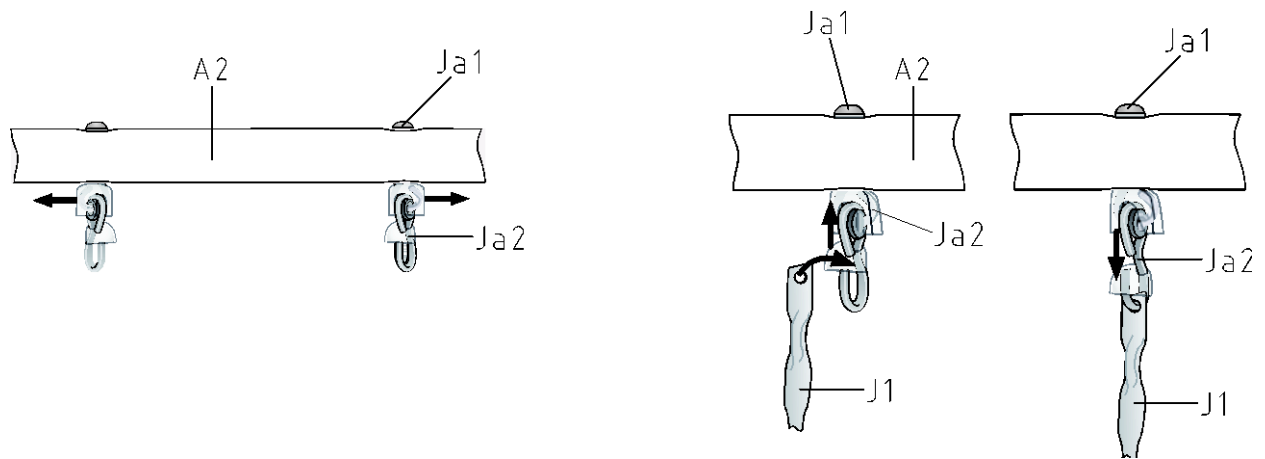

Step 6


- Hang the four **Swing Chains J1** in place from the **Eye Bolts Ja2** on the **Top Bar A2**.

.....

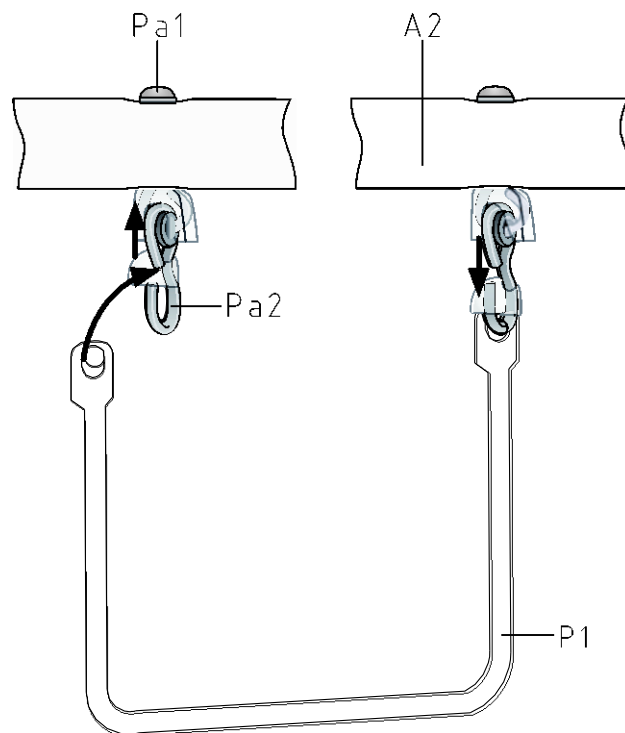


Step 7

- Hang the **Trapeze Tube P1** in place from the **Eye Bolts Pa2** on the **Top Bar A2 & A1**.

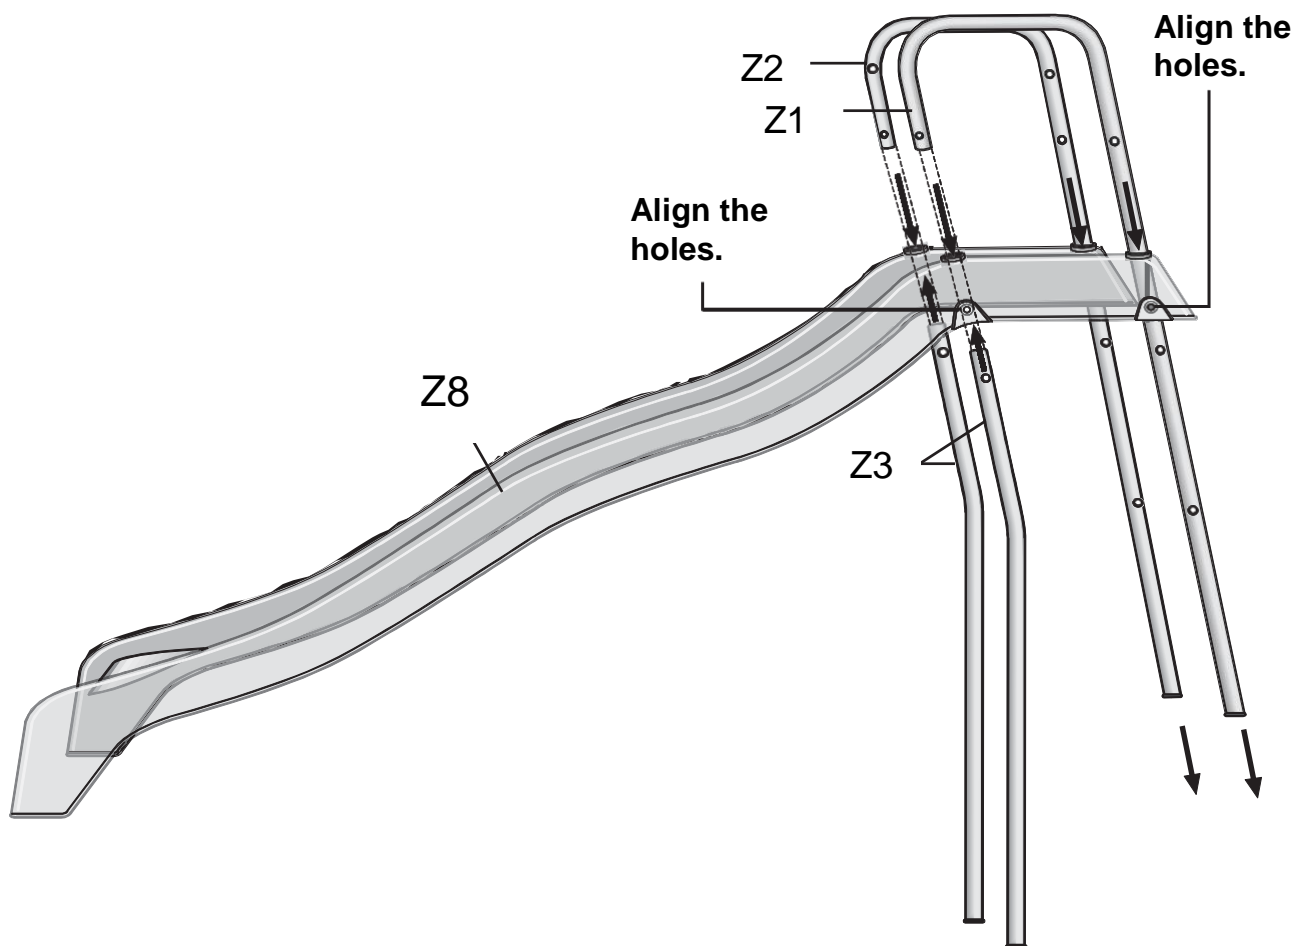


Step 8

- Remove all the preassembled **Phillips Head Bolt sets Za1** from the **Slide Ladder Support Tube Z1** and **Slide Ladder Connecting Tube Z2**.
- Insert the longer ends of the **Slide Ladder Support Tube Z1** and **Slide Ladder Connecting Tube Z2** into the holes on the rear end of the **Slide Z8** and align the holes.
- Insert both **Slide Leg Tubes Z3** into the holes on the front end of the **Slide Z8** and align the holes.

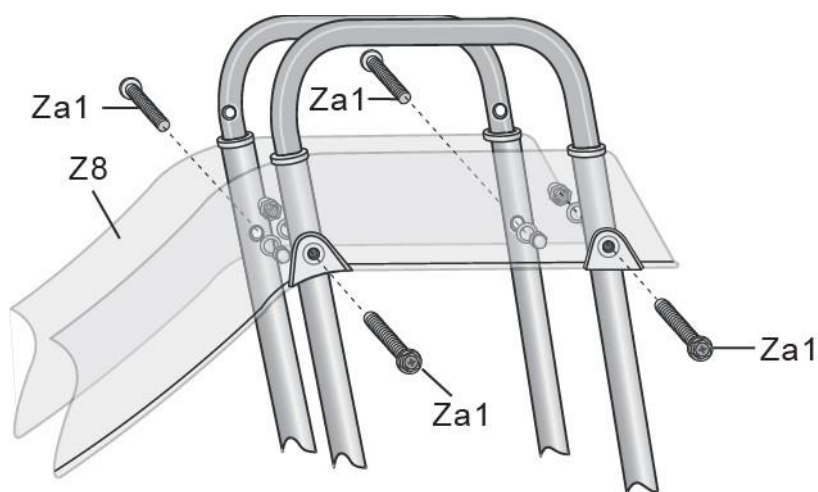


Step 9

- Secure the **Slide Z8** using the 4 sets of **Hardware Za1** previously removed.

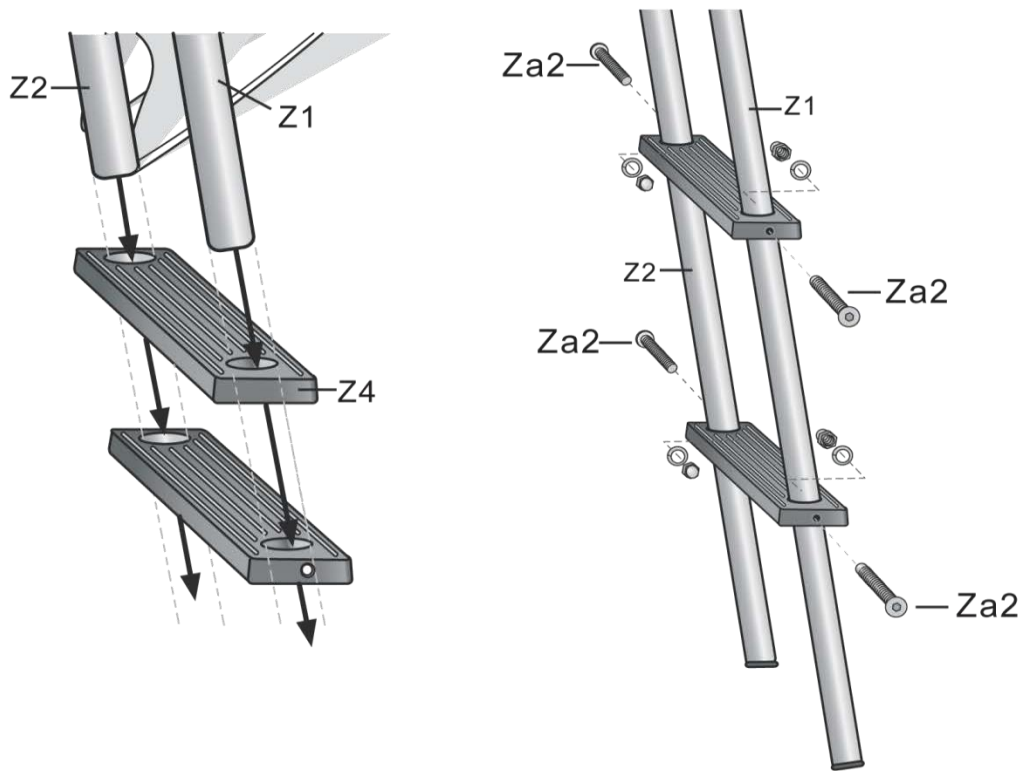

Step 10


- Slide the two **Slide Ladder Steps Z4** up the bottom ends of the **Slide Ladder Support Tube Z1** and **Slide Ladder Connecting Tube Z2**. Align the holes of the **Slide Ladder Steps Z4** with the TOP and BOTTOM set of holes on the **Slide Ladder Support Tube Z1** and **Slide Ladder Connecting Tube Z2**.
- Secure the **Slide Ladder Steps Z4** using the four sets of **Hardware Za2** previously removed.

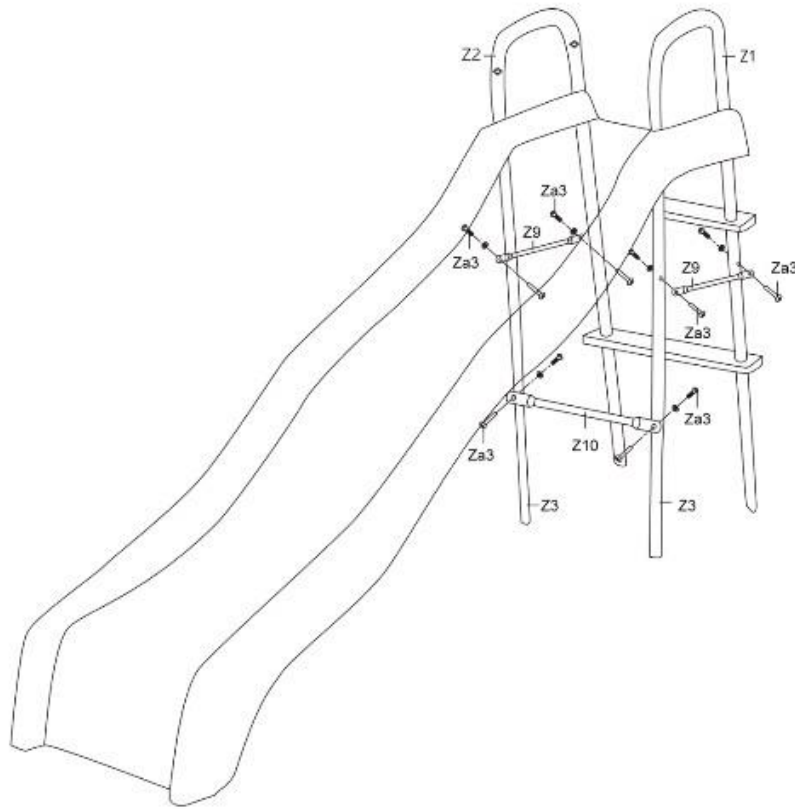

Step 11


- Remove two sets of **Hardware Za3** from both **Slide Ladder Support Tube Cross Bars Z9**.
- Attach one **Slide Ladder Support Tube Cross Bar Z9** onto each side of the ladder using the **hardware sets Za3** that were removed.
- Remove two sets of **Hardware Za3** from the **Slide Leg Cross bar Z10**.
- Attach the **Slide Leg Cross Bar Z3** to the slide using the two sets of **Hardware Za3** that were removed.

NOTICE: SECURELY TIGHTEN ALL BOLTS ON THE SLIDE

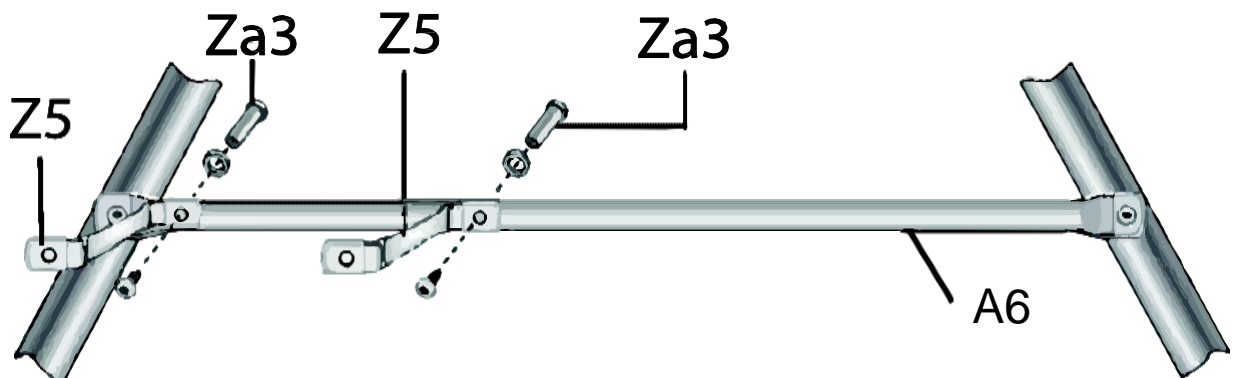


Step 12

- Remove two sets of preinstalled **Hardware Za3** from the two **Connecting Plates Z5**.
- Attach both **Connecting Plates Z5** to the **Cross Bar A6** with the two removed sets of **Hardware Za3**.

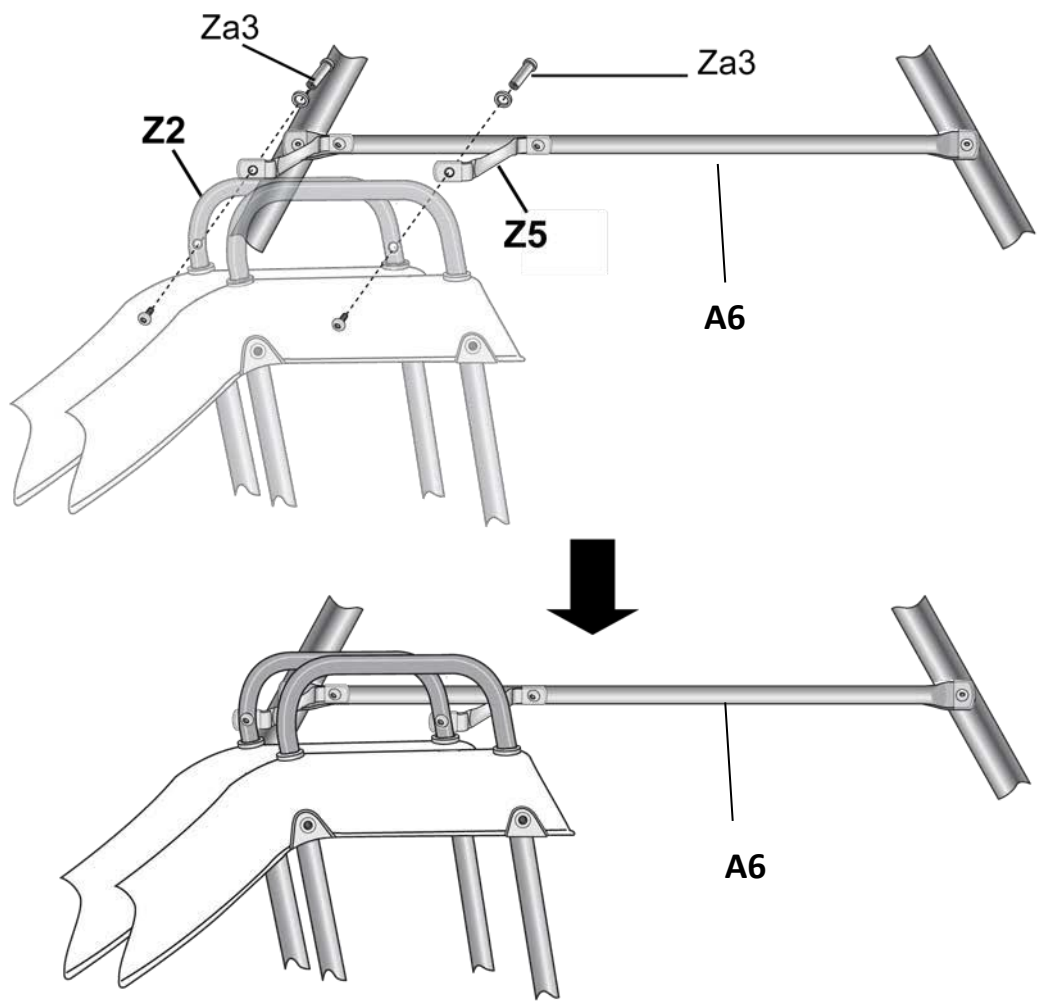


Step 13

- Attach the **Slide Ladder Connecting Tube Z2** onto the **Cross Bar A6** using the two **Connecting Plates Z5** and the two sets of **Hardware Za3** that was previously removed.

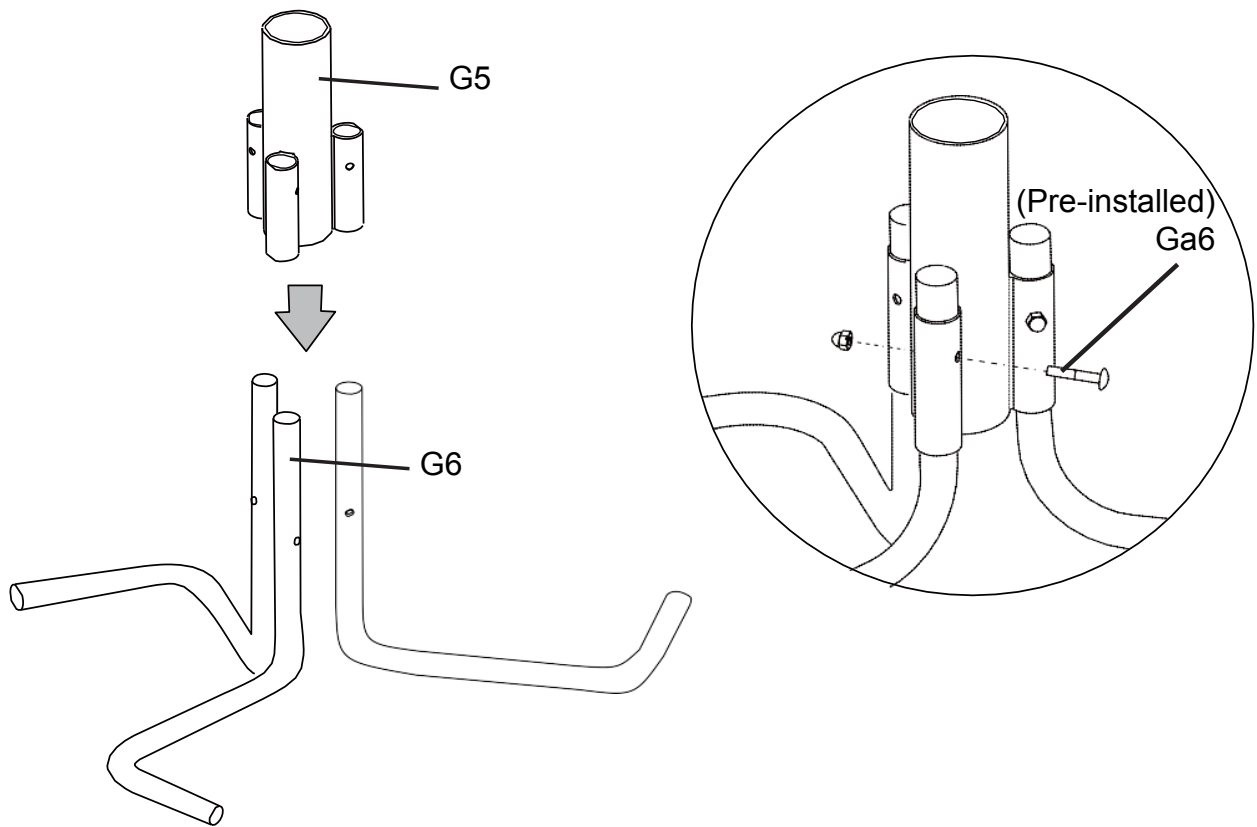


Step 14

- Install the three **Legs G6** in to the bottom of the **Axle sleeve tube G5** using the three sets of **Hardware Ga6**

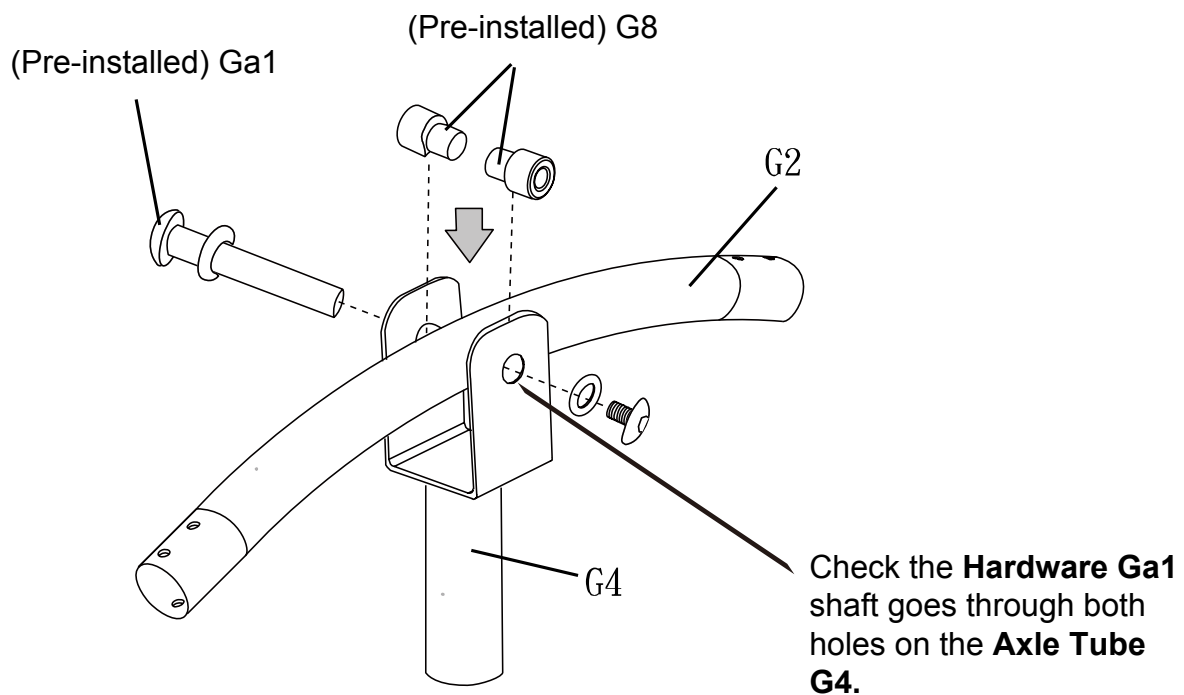


Step 15

- Insert the smaller end of the **T-sleeve G8** in to the holes on sides of the **Cross bar G2**.
- Attach the **Cross bar G2** onto the **Axle tube G4** using the one set of **Hardware Ga1**.

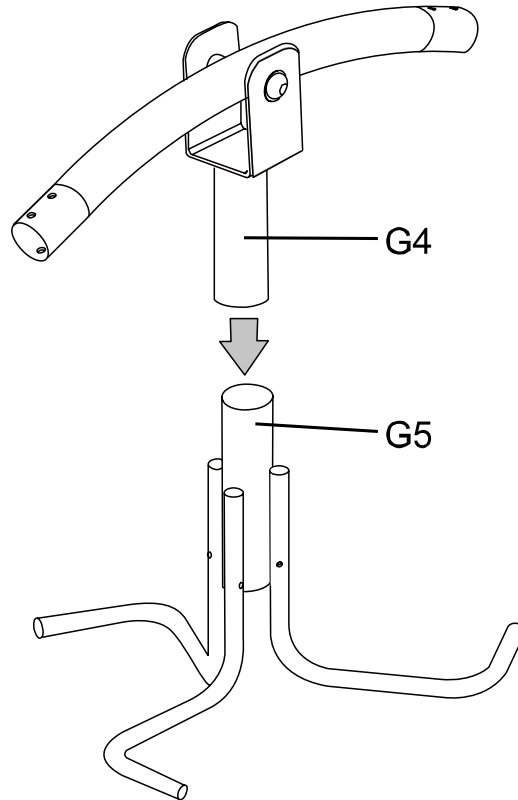


Step 16

- Place the **Axle G4** in to the **Axle sleeve tube G5**

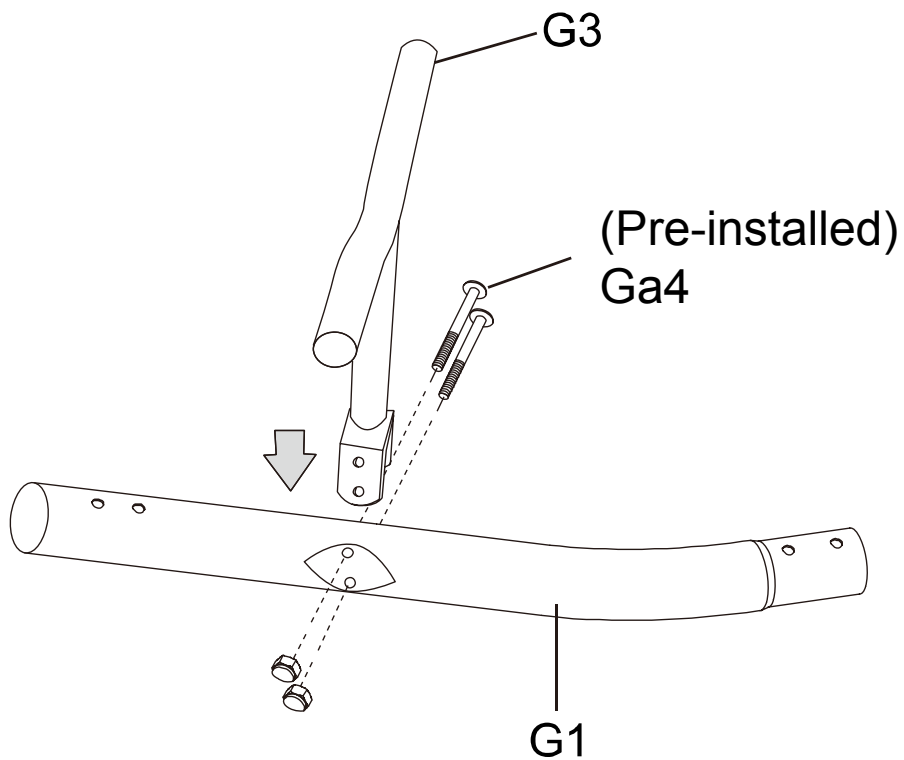


Step 17

- Attach a **Handle bar G3** on to the **Seat tube G1** using two set of **Hardware Ga4**.
- Repeat this step for the second **Handle Bar G3**.

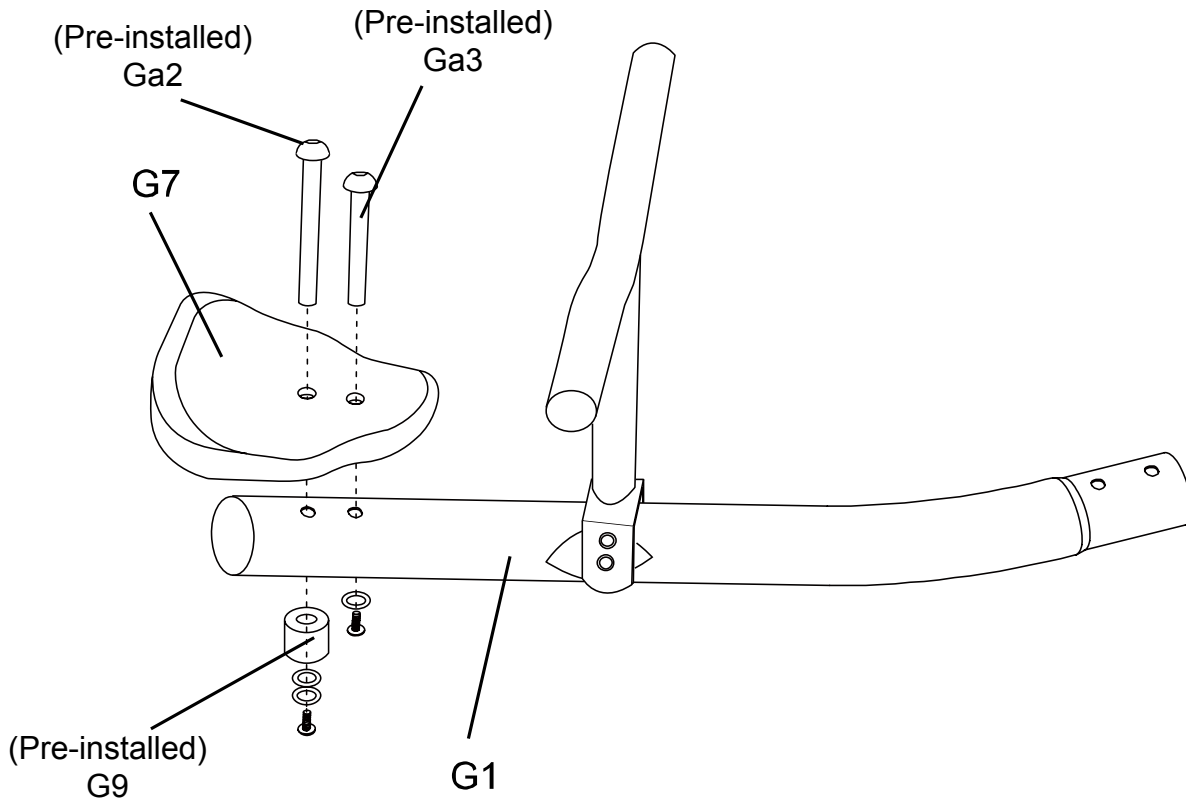


Step 18

- Attach the **Seat G7** onto the **Seat tube G1** using one set of **Hardware Ga2**, one set of **Hardware Ga3**, and **Sleeve G9**.
- The **Hardware Ga2** is the longer bolt that should be installed with the **Sleeve G9**.
- Repeat this step for the second **Seat G7** and **Seat tube G1**

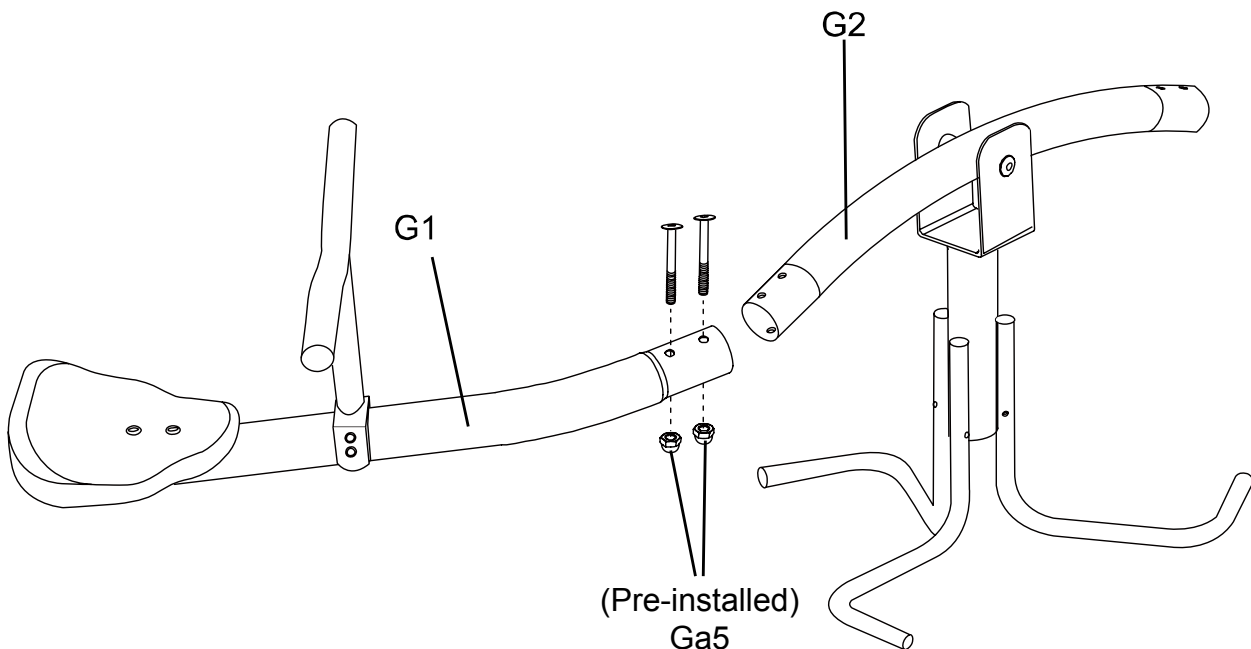


Step 19

- Attach a **Seat tube G1** onto the **Cross bar G2** using two set of **Hardware Ga5**
- Repeat this step for second **Seat tube G1** and **Cross bar G2**

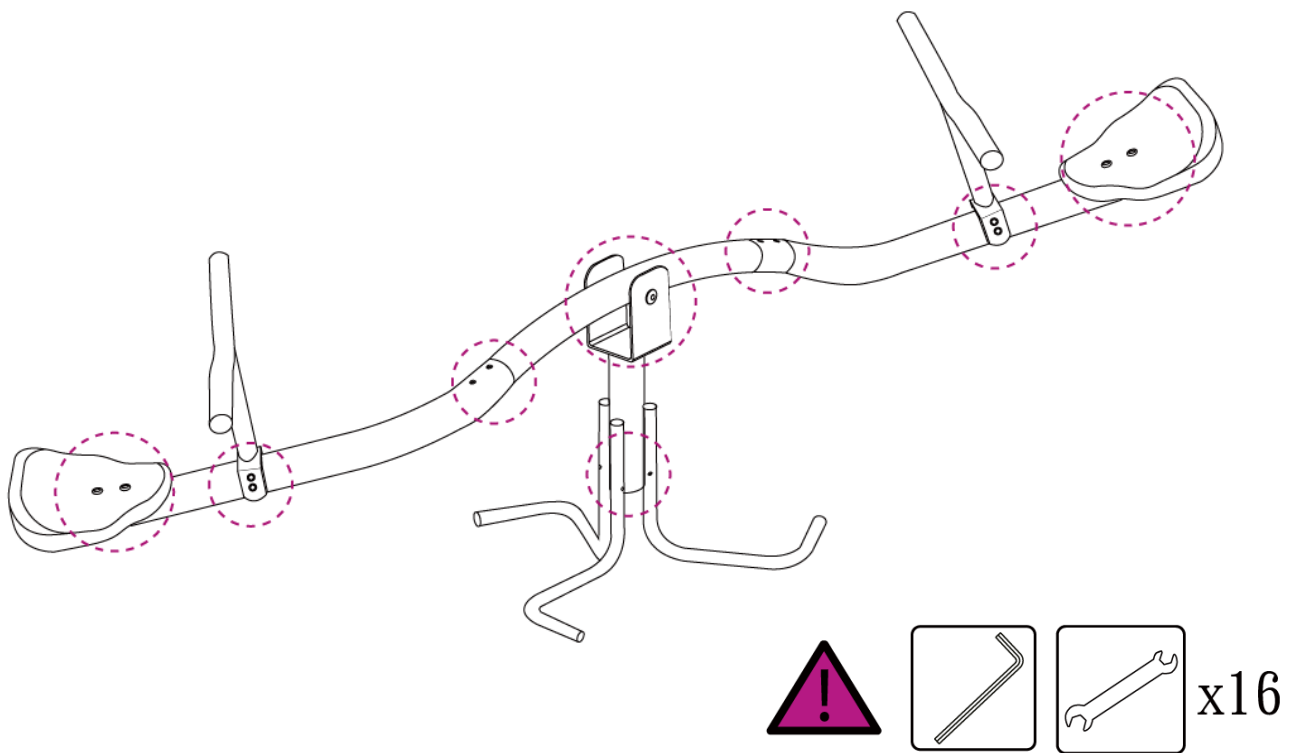

Step 20

- Review all the hardware on the See Saw is securely tighten.

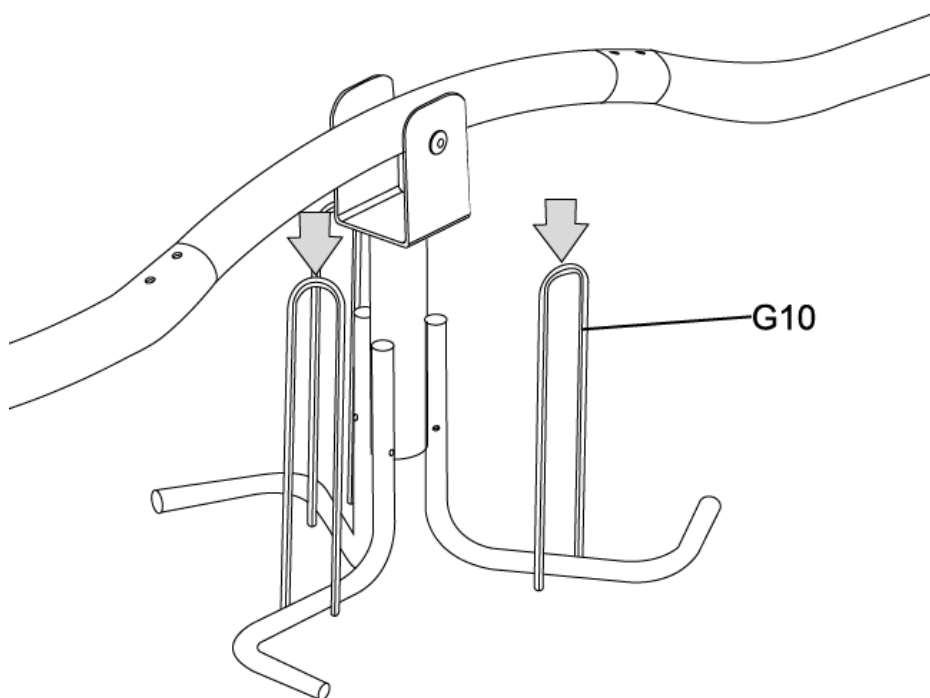

Step 21

- Place the see saw in the desired location and secure it to the ground with the three **Anchors G10**. Push **Anchor G10** down until the curved end of **Anchor G10** is securely holding down in the Frame.

Note: Make sure to go back to check all hardware and securely tighten all bolts and nuts before using the playground equipment.

Warning: Do not let children use the playground equipment until it is properly assembled and anchored.

ANCHOR INSTALLATION





You may either anchor the feet in hard soil or if your soil is soft (sand, etc.), you may use the Anchor (A7) to secure the playground. If you wish to permanently secure your swing set, setting the legs in concrete secured by a brick or gravel bed is recommended. Ensure equipment is firmly anchored. When cementing equipment, bury the legs about three inches below the ground. This will ensure sufficient space remains under the swings. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface or below ground level to prevent tripping. Be sure the swing set is located on level ground.

For Soil Ground Installation:


Turn the Anchor A7 into the ground until only the hooked end is above the ground next to the leg.

Insert the hooked end into the bottom opening of the leg.

Ensure that the hooked end is secure in the leg opening.

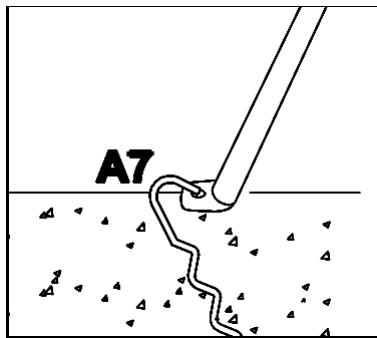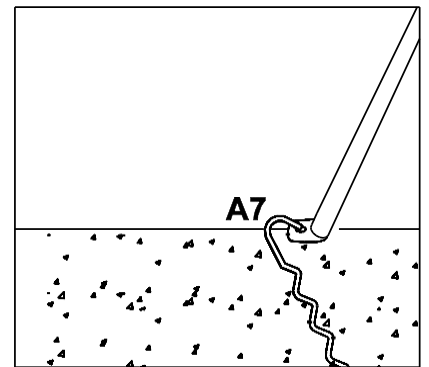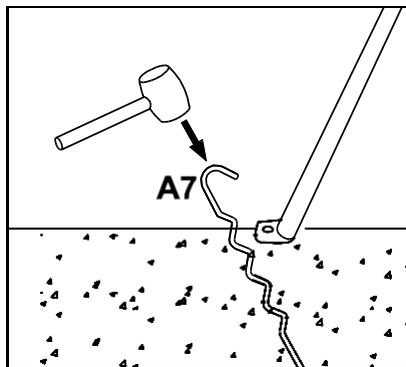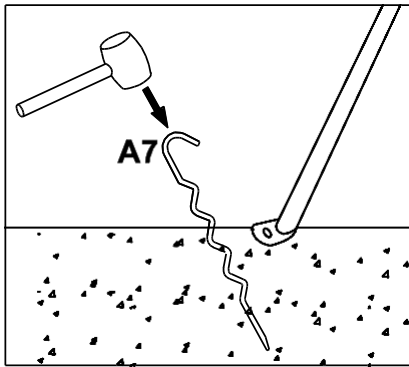

Correct

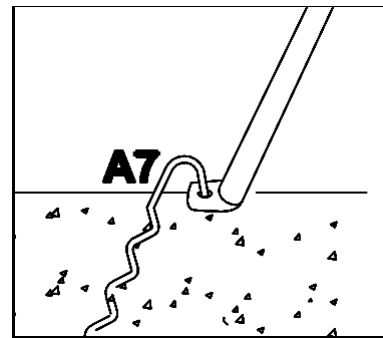


Incorrect


When turning the Anchor A7 into the ground, please make sure the anchor is roughly Perpendicular to the playground feet.

For Concrete Ground Installation:

- If the swing set is set up on grounds with sandy soil, it must be anchored with concrete footing (concrete not included).
- Dig holes around swing leg tube as shown below in drawing. As you dig down and create a cylindrical hole, you should use a shovel to carve out the lower part of the hole, to create a larger diameter hole at the bottom.
- Place 2 inch high brick or 2 inches of gravel bed as shown in drawing below.
- Use about 45lb of concrete per leg.
- Cover concrete with dirt and protective surface material.
- Allow about 6-7 days for concrete to dry properly.

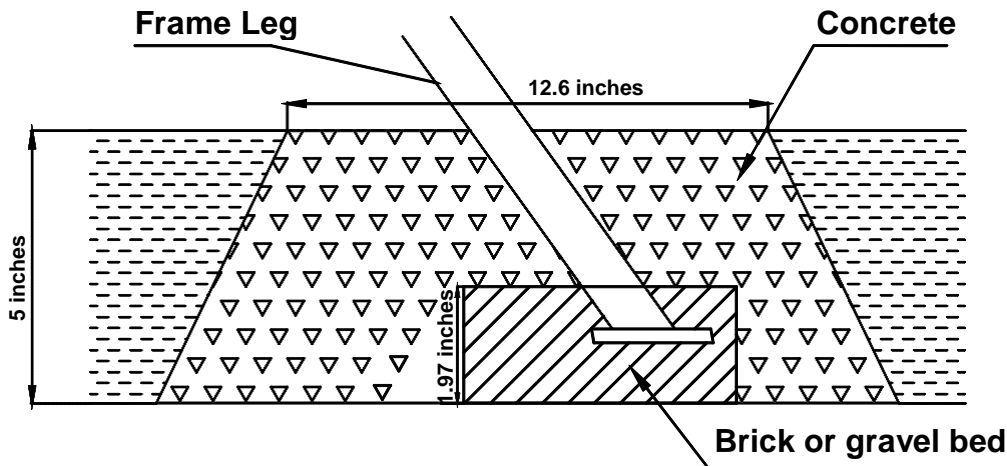

Note: The maximum fall height for this product is 6 feet. The minimum ground clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

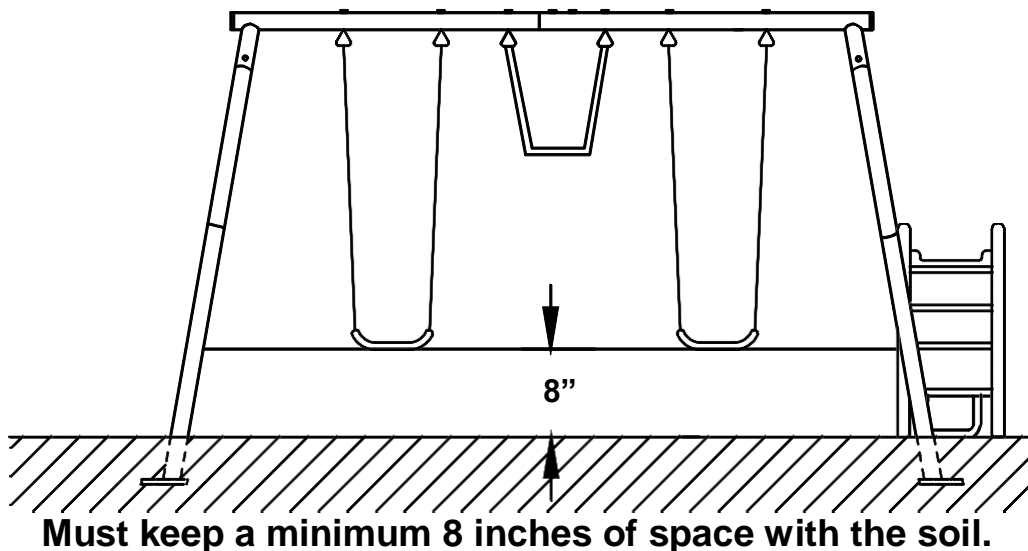

Warning: Please bury the legs of the swing set as per instruction. If the swing set is used without proper anchoring, it may be dangerous and may tilt over.

This play ground received ASTM F1148 and CPSIA certification.

WARRANTY

MANUFACTURER'S LIMITED WARRANTY (FITNESS PLAYGROUND)

Paradigm Health & Wellness warrants to the original purchaser that this product is free from defects in material and workmanship when used for the purpose intended, under the conditions that it has been installed and operated in accordance with Paradigm's Owner's Manual. Paradigm's obligation under this warranty applies to the following:

| <u>COMPONENT</u> | <u>LENGTH OF WARRANTY</u> |
|-----------------------------|-----------------------------------|
| Structural Frame | 2 years FOR HOME USE ONLY |
| All Other Components | 180 days FOR HOME USE ONLY |

Exclusions from Warranty Coverage:

Paradigm does not warrant against and is not responsible for, and no implied warranty shall be deemed to cover, any product failure, product malfunction, or damages attributable to:

1. Improper installation and/or failure to abide by Paradigm's installation guidelines;
2. Use of this product beyond normal home use, or in an application for which it was not designed;
3. Cosmetic items such as scratches, dents or discolorations;
4. Damage caused by normal wear and tear, vandalism, accidental or by animals;
5. Any act of Nature (such as fire, flooding, snow, ice, hurricane, earthquake, lightning or other natural disaster), environmental condition (such as air pollution, mold, mildew, etc.), or staining from foreign substances (such as dirt, grease, oil, etc.);
6. Normal weathering due to exposure to sunlight, weather and atmosphere which can cause colored surfaces to, among other things, flake, chalk, accumulate dirt or stains.
7. Improper operation, alteration, handling, storage, abuse or neglect of the products.

Paradigm, using its sole discretion, will either repair or replace free of charge any part(s) proven to be defective under normal home use. Any repair or replacement shall provide no new warranty coverage, but shall retain only the remaining portion of the original product's warranty. This warranty is offered only to the original purchaser and is not transferable. Proof of original purchase is required.

Ordering Replacement Parts

Replacement parts can be ordered by emailing our customer service department:

Service@paradigmhw.com

Open Monday thru Friday 8:00 AM - 5:00 PM (PST).

When ordering replacement parts please have the following information ready:

- 1. Owner's Manual**
- 2. Model Number**
- 3. Description of Parts**
- 4. Part Number**
- 5. Date of Purchase**

Paradigm Health & Wellness, Inc.

EMAIL THIS FORM WITH YOUR RECIEPT OF PURCHASE TO
Service@paradigmhw.com *

NAME: _____

ADDRESS: _____

CITY _____ STATE _____ ZIP _____

TELEPHONE: (Day) _____

(Night) _____

SERIAL#: _____

MODEL#: _____

PURCHASE DATE: _____

PLACE OF PURCHASE: _____

| PART # | DESCRIPTION | QTY |
|--------|-------------|-----|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

“YOUR ORDER WILL BE PROCESSED WITHIN 3 BUSINESS DAYS”

**** This form can also be faxed in Fax #: 626-810-2166***